


MANUAL

IZE LED OG DRIVING LIGHT 9"

RED = +VDC (HIGH-BEAM)
BLACK = - TO CHASSIS GROUND
WHITE = + WHITE POSITION LIGHT
YELLOW = + AMBER POSITION LIGHT
* Cable

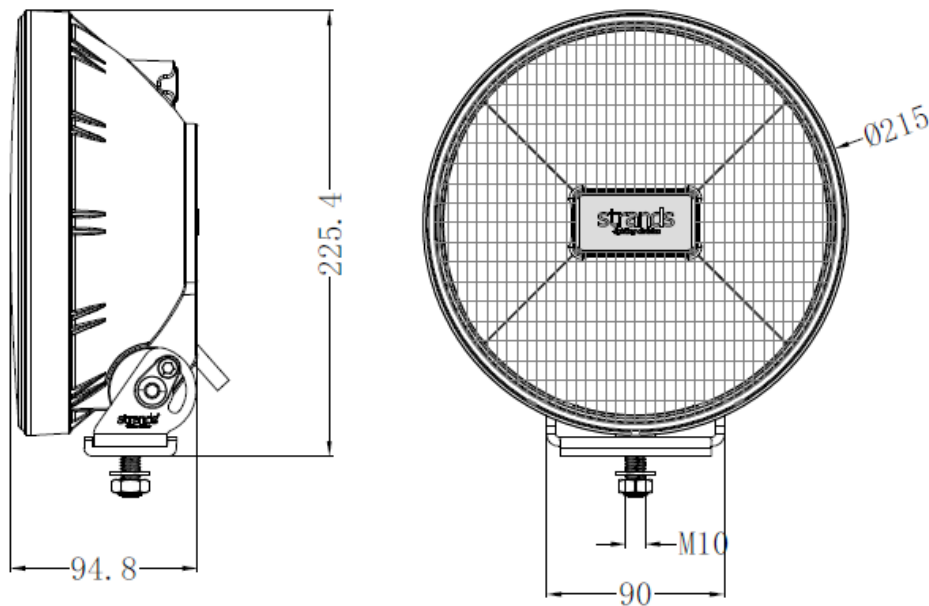

Default Setting: Xperience Mode

Always start from the "off" state, meaning the light must have been turned off for at least five seconds to discharge any internal power.

To Change "next" mode: (Please check all three steps before you change the mode)

- Step 1 : Turn the light on and keep it on for 3 seconds (parameter range: 2-3 seconds), then turn it off.
Step 2 : Quickly turn the light on and off 3 times (flash high beam 3 times) within 5 seconds, Then follow the next step immediately.
Step 3 : Turn the light on for the fourth time, and keep the switch held down (or in the "on" position).
After about three seconds, the light will automatically switch to the next mode.


(To change from E-mode to Xperience mode, follow the same steps.)

To Reset : (Default mode)

Regardless of the actual mode, if you flashes light rapidly 10 times within 20 seconds, it will immediately reset to Xperience mode. This occurs even if the normal mode change sequence isn't complete. This feature is designed for situations where multiple lights have inconsistent power settings and need to be quickly unified to same setting.

strands®

-lighting division

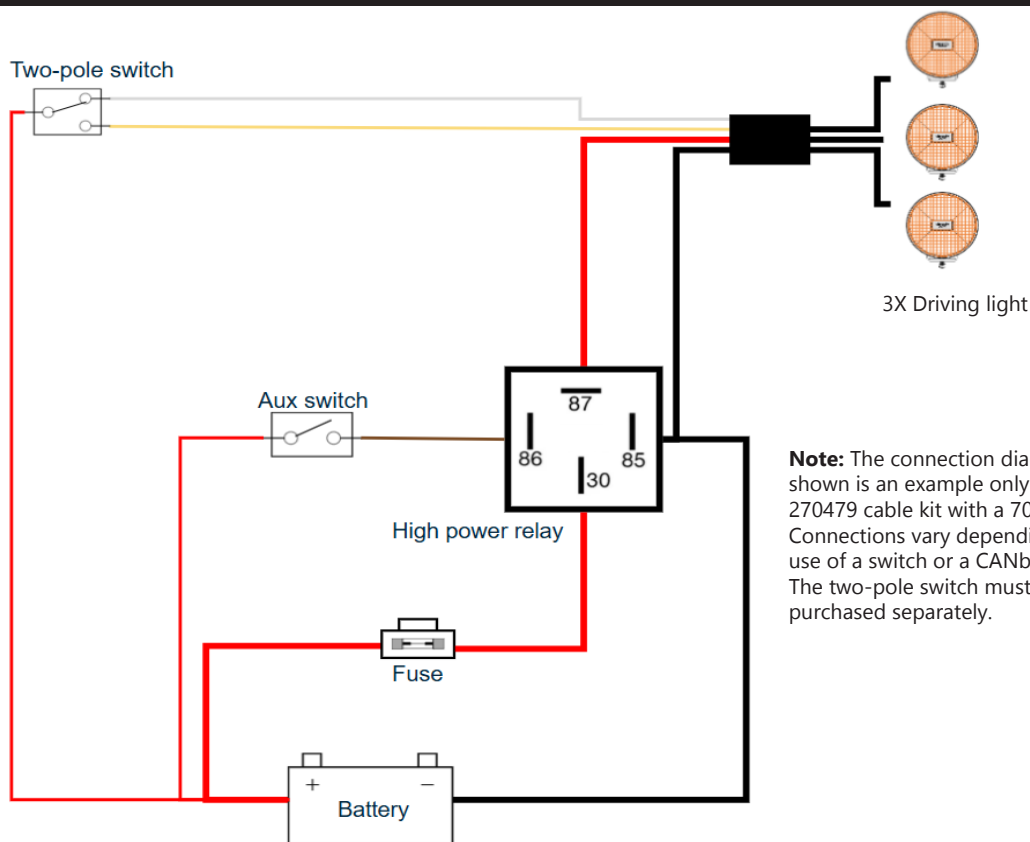

READ THIS BEFORE INSTALLATION

READ ALL INSTRUCTIONS AND STUDY DIAGRAMS BEFORE INSTALLING YOUR NEW LIGHTS!

LEGAL MOUNTING

Check with state or local authorities for laws governing usage and proper mounting of your new lights.

TAKE CARE OF YOUR PRODUCT

Keep the product clean. Dirt on the lens and heat-sink may shorten the products lifetime.

We recommend using lukewarm water and alkaline degreasing.

Follow the degreasing instructions carefully and rinse off gently with cold or lukewarm water on low pressure.

WARNING!

Strong chemicals should not be used on the product. If you accidentally get strong chemicals on the product, rinse off immediately, use plenty of water so that no chemicals remain in any joint. If the product is damaged or has inappropriate paint on the housing due to user actions, the warranty is void.

Some chemicals have a small amount of solvent in them, this can dissolve sealing adhesives and compromise the product's waterproofness.

Some chemicals pull out liquid from plastic and rubber-based components, which makes the plastic or rubber brittle and bursts more easily.

Be careful not to use high water pressure close up on the product.

If you use high water pressure at short distances, most products find it difficult to close out the water.

INSTALLATION

If there is a contact/connector on the product, it should not be cutted. If the connector is cut, the warranty is not valid.

If the product has loose cable and no connector. If the cable is shorter than 50 cm, the cable must not be cutted. If the cable is cut, the warranty is not valid.

If the cable is longer than 50 cm, it is ok to shorten the cable, but not shorter than 50 cm.

If the cable is cut shorter than 50 cm, the warranty is not valid.

Tighten screws and bolts so that they do not loosen or chafe.

Do not tighten screws so hard that the protective bearings on the product breaks.

WARNING!

Do not use higher volts than the product description states.

This light becomes hot under continuous use. Don't remove or touch the casing for at least 30 minutes after turning the lamp off.

Part no. 270945

Contact us if you need support: support@strands.se or +46(0)320-450450

2/2



www.strands.se
www.strandseurope.com