


OWNER'S MANUAL

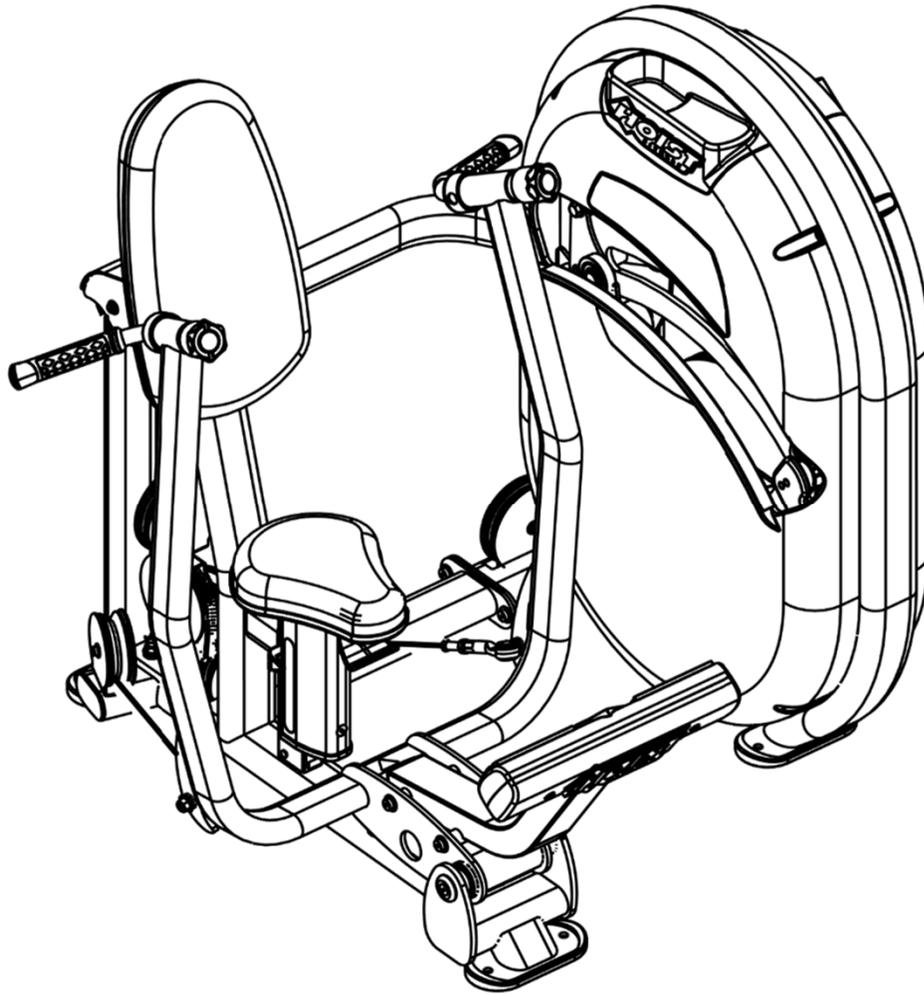

CL-3301 CHEST PRESS



****WARNING!****

TO PREVENT POSSIBLE TIPPING, BOLT THIS UNIT TO THE EXERCISE FLOOR USING MINIMUM 4-1/2" LENGTH BOLTS. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY OR DEATH.

Note: Both Serial Number and Model Number are Required when Ordering Parts

RECORD SERIAL NUMBER HERE

MACHINE CODE

C03

Customer Service

(800) 548-5438

(858) 578-7676

Fax

(858) 578-9558



www.facebook.com/hoistfitness

OWNER'S MANUAL

CONTENTS

INSTRUCTIONS.....	02
FRAME ASSEMBLY.....	04
PRE-ASSEMBLY.....	23
DECAL PLACEMENT.....	26
DECAL REFERENCE.....	27
PART LIST.....	28
ABBREVIATIONS.....	31
BOLT SIZING CHART.....	32
WASHER SIZING CHART.....	33
MAINTENANCE SCHEDULE.....	35
GENERAL MAINTENANCE INFORMATION.....	36
WEIGHT TRAINING TIPS.....	37
WEIGHT RATIOS.....	38
EXERCISE LOG.....	39
LIMITED WARRANTY.....	40

OWNER'S MANUAL

INSTRUCTIONS

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only HOIST replacement parts when servicing. Failure to do so will void your warranty and could result in personal injury.

HOIST equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized HOIST dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

TOOLS REQUIRED

Ratchet Wrench

1/2", 9/16" and 3/4" Sockets

Adjustable Wrench

Rubber Mallet

Tape Measure

Level

SAE Hex Key Wrench Set


Two People

OWNER'S MANUAL

THIS PAGE WAS INTENTIONALLY LEFT BLANK

OWNER'S MANUAL

FRAME ASSEMBLY

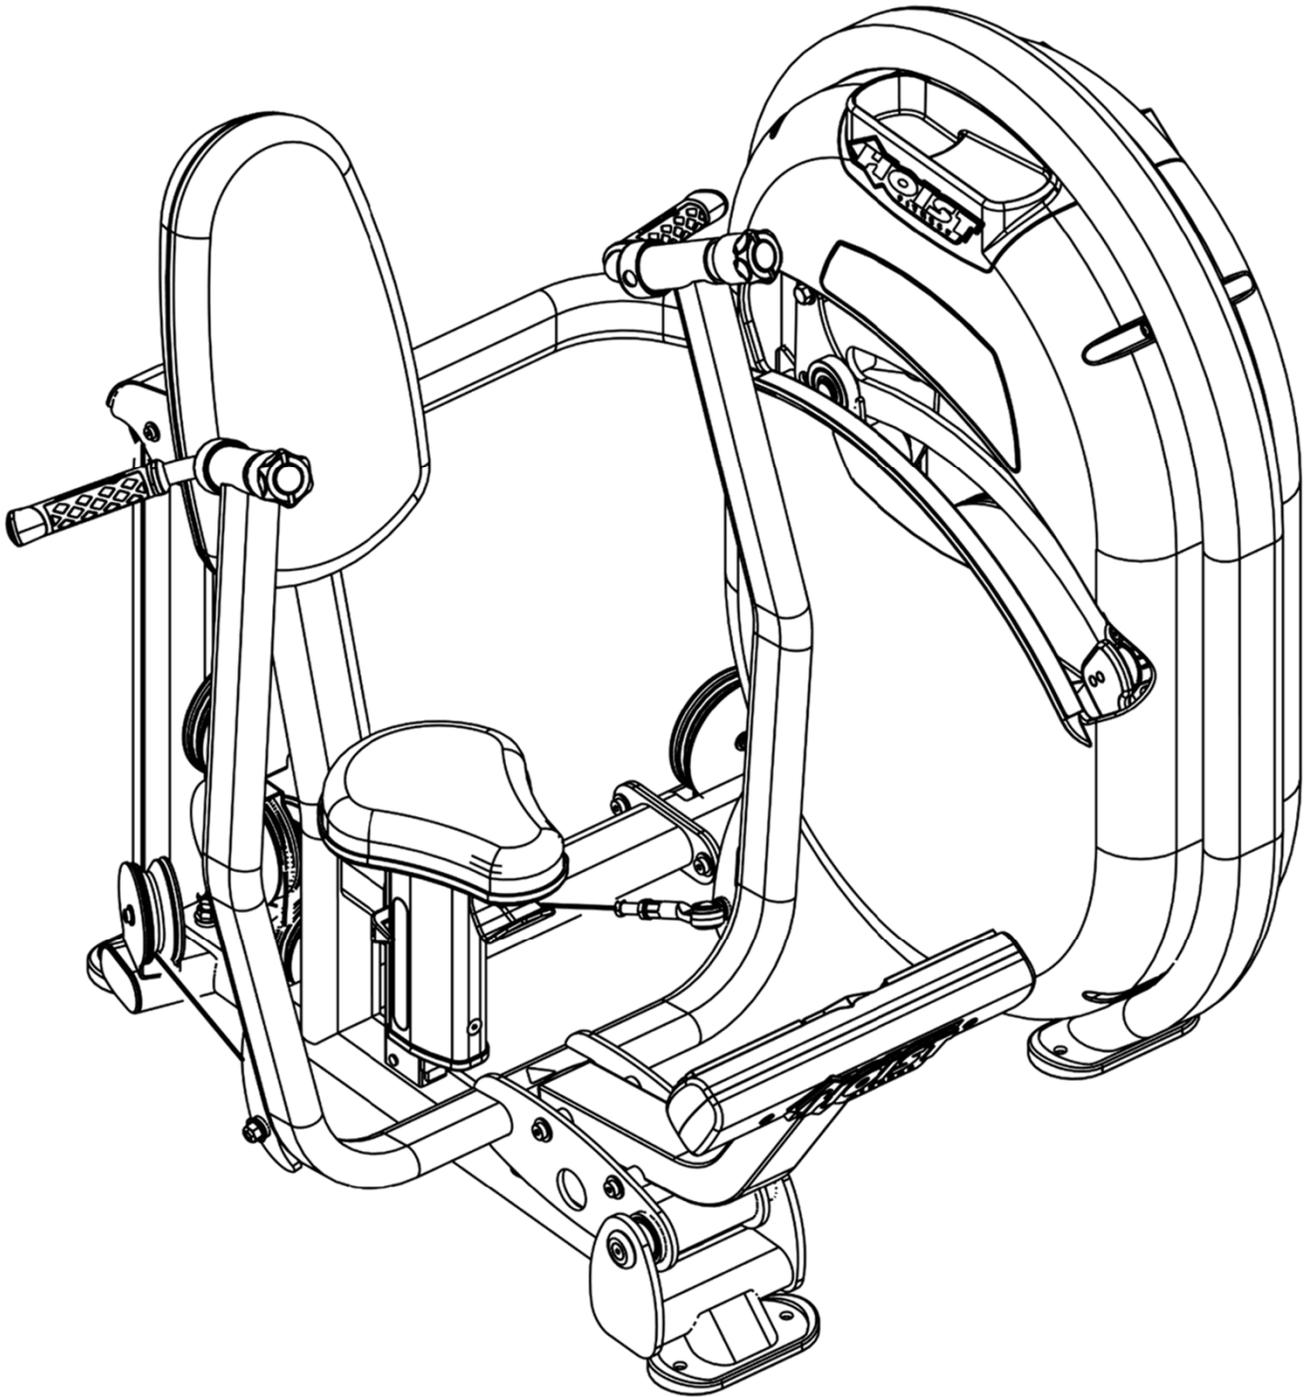


OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:

- HAND TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

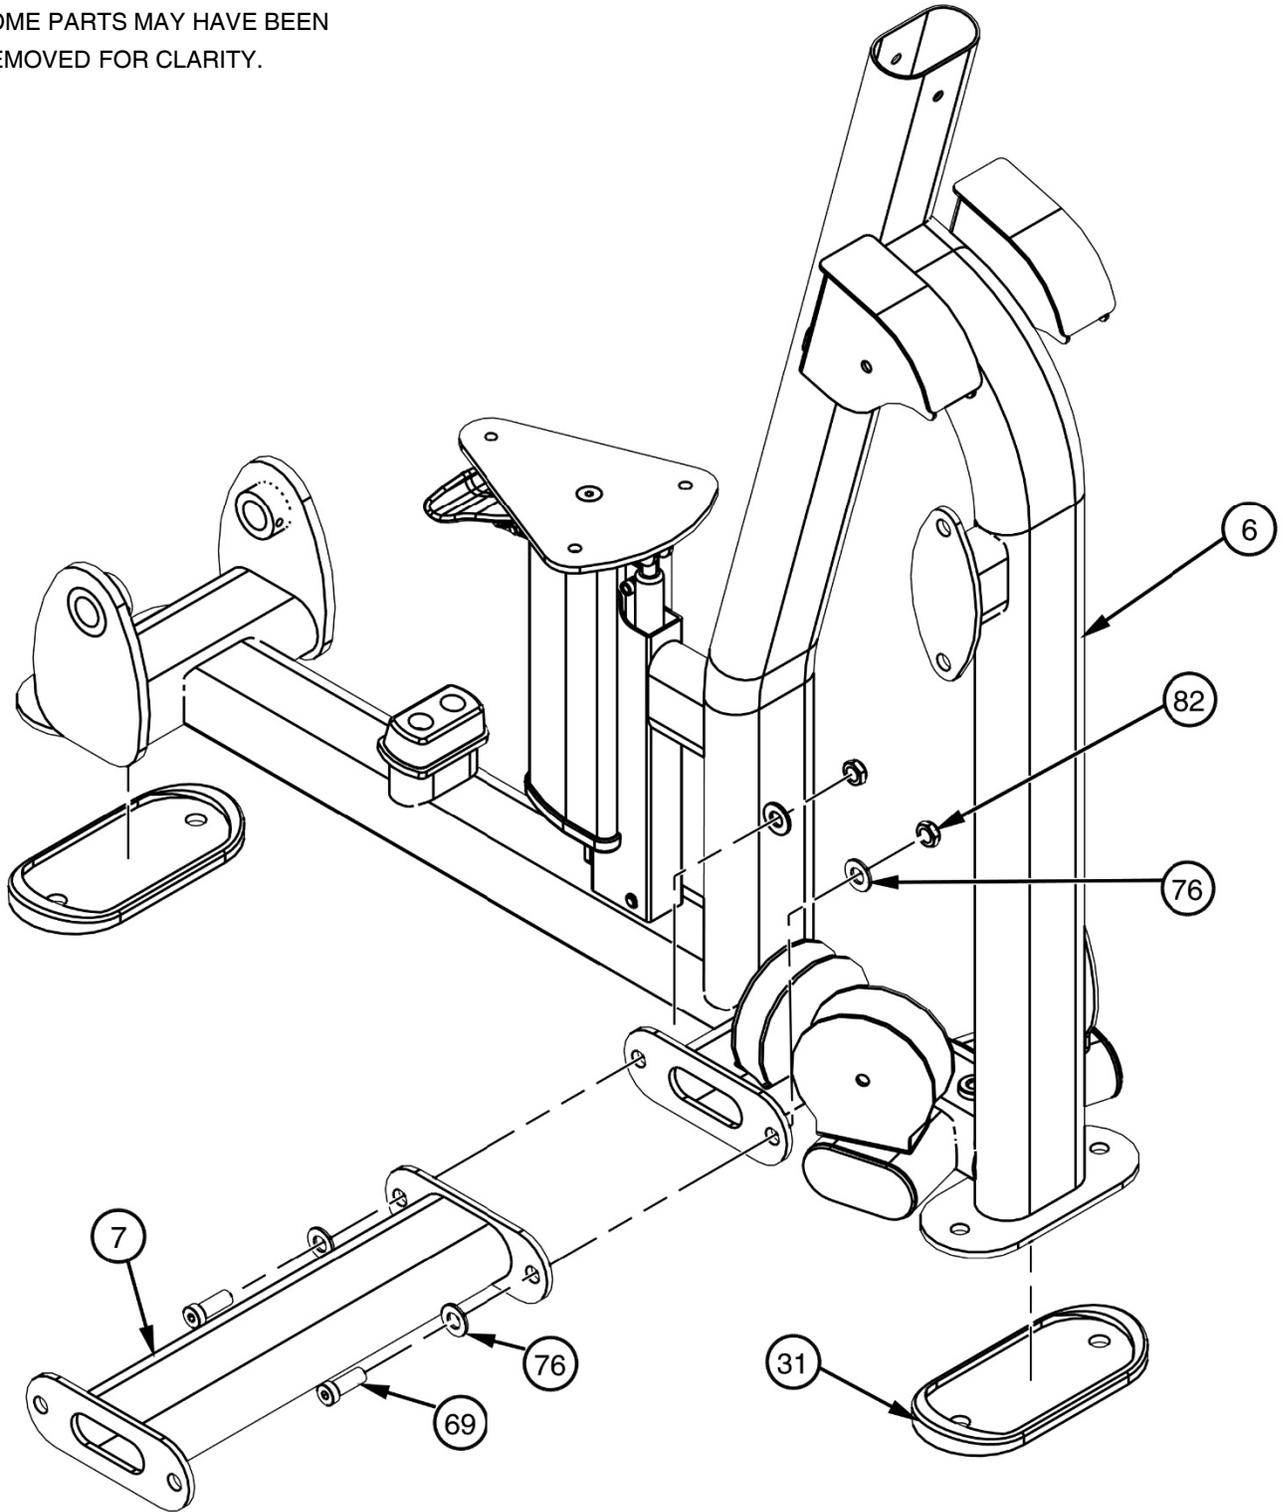


OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:

- HAND TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

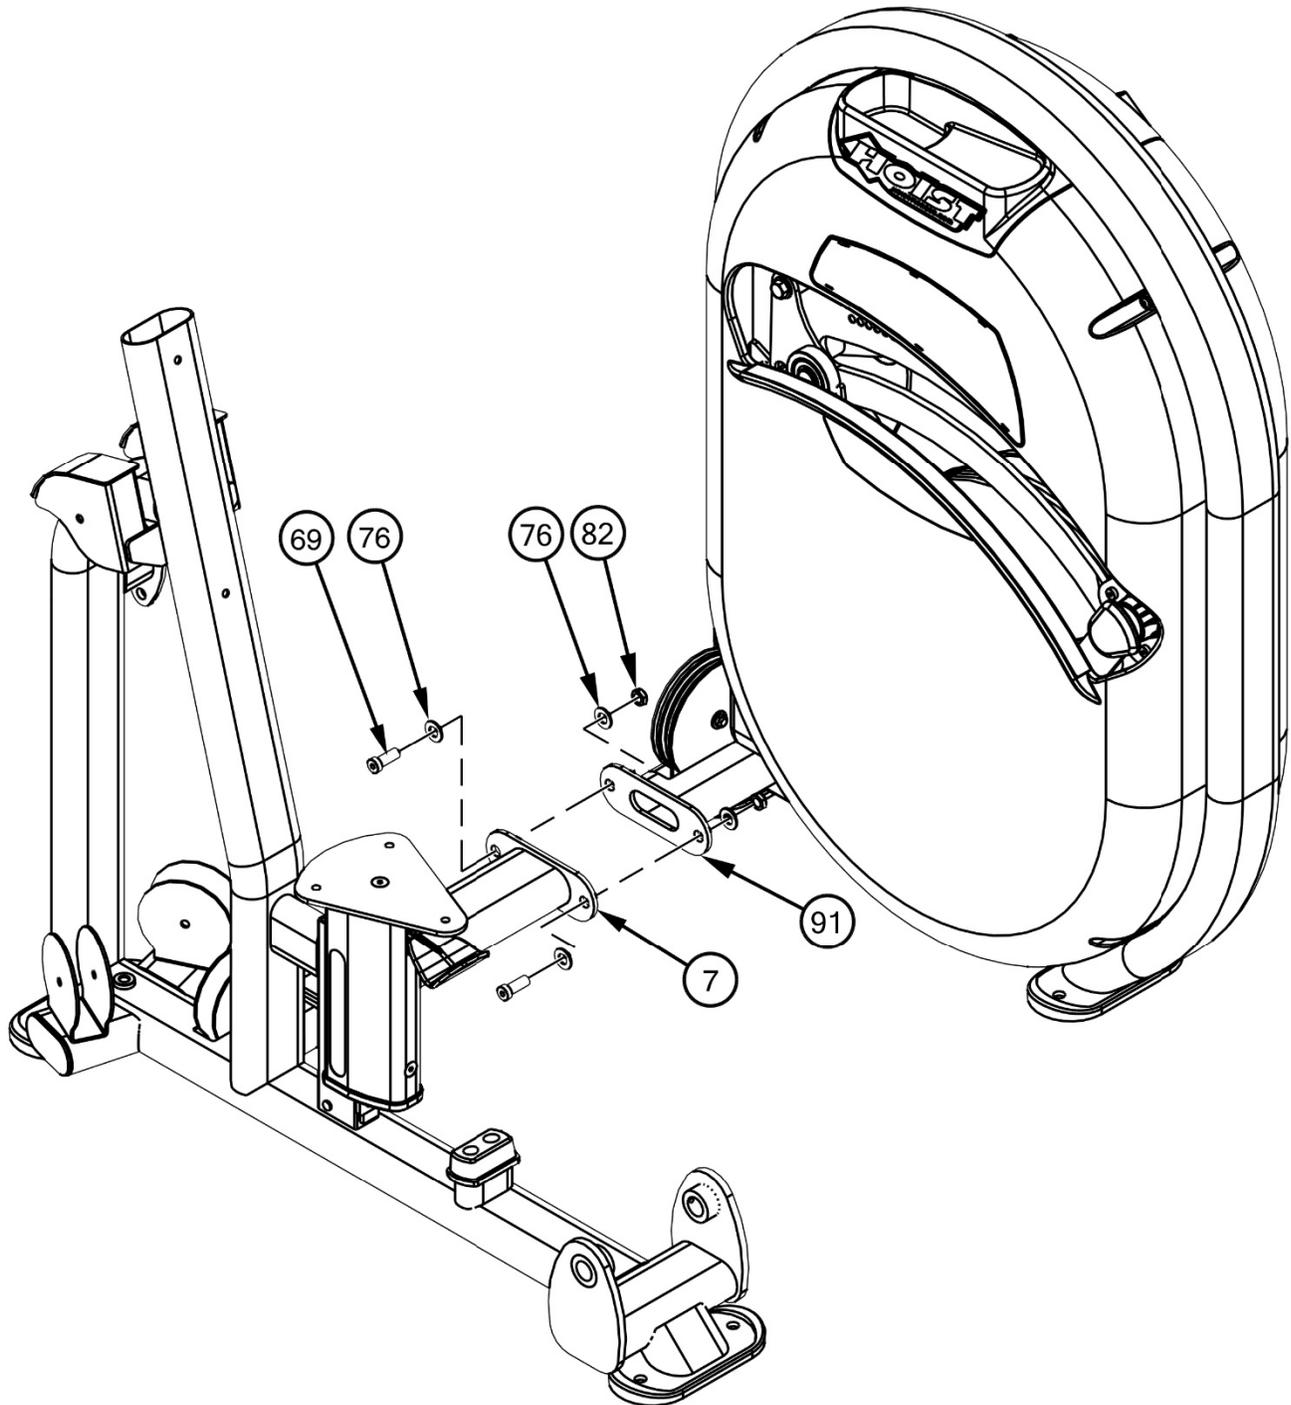


OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:

- HAND TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

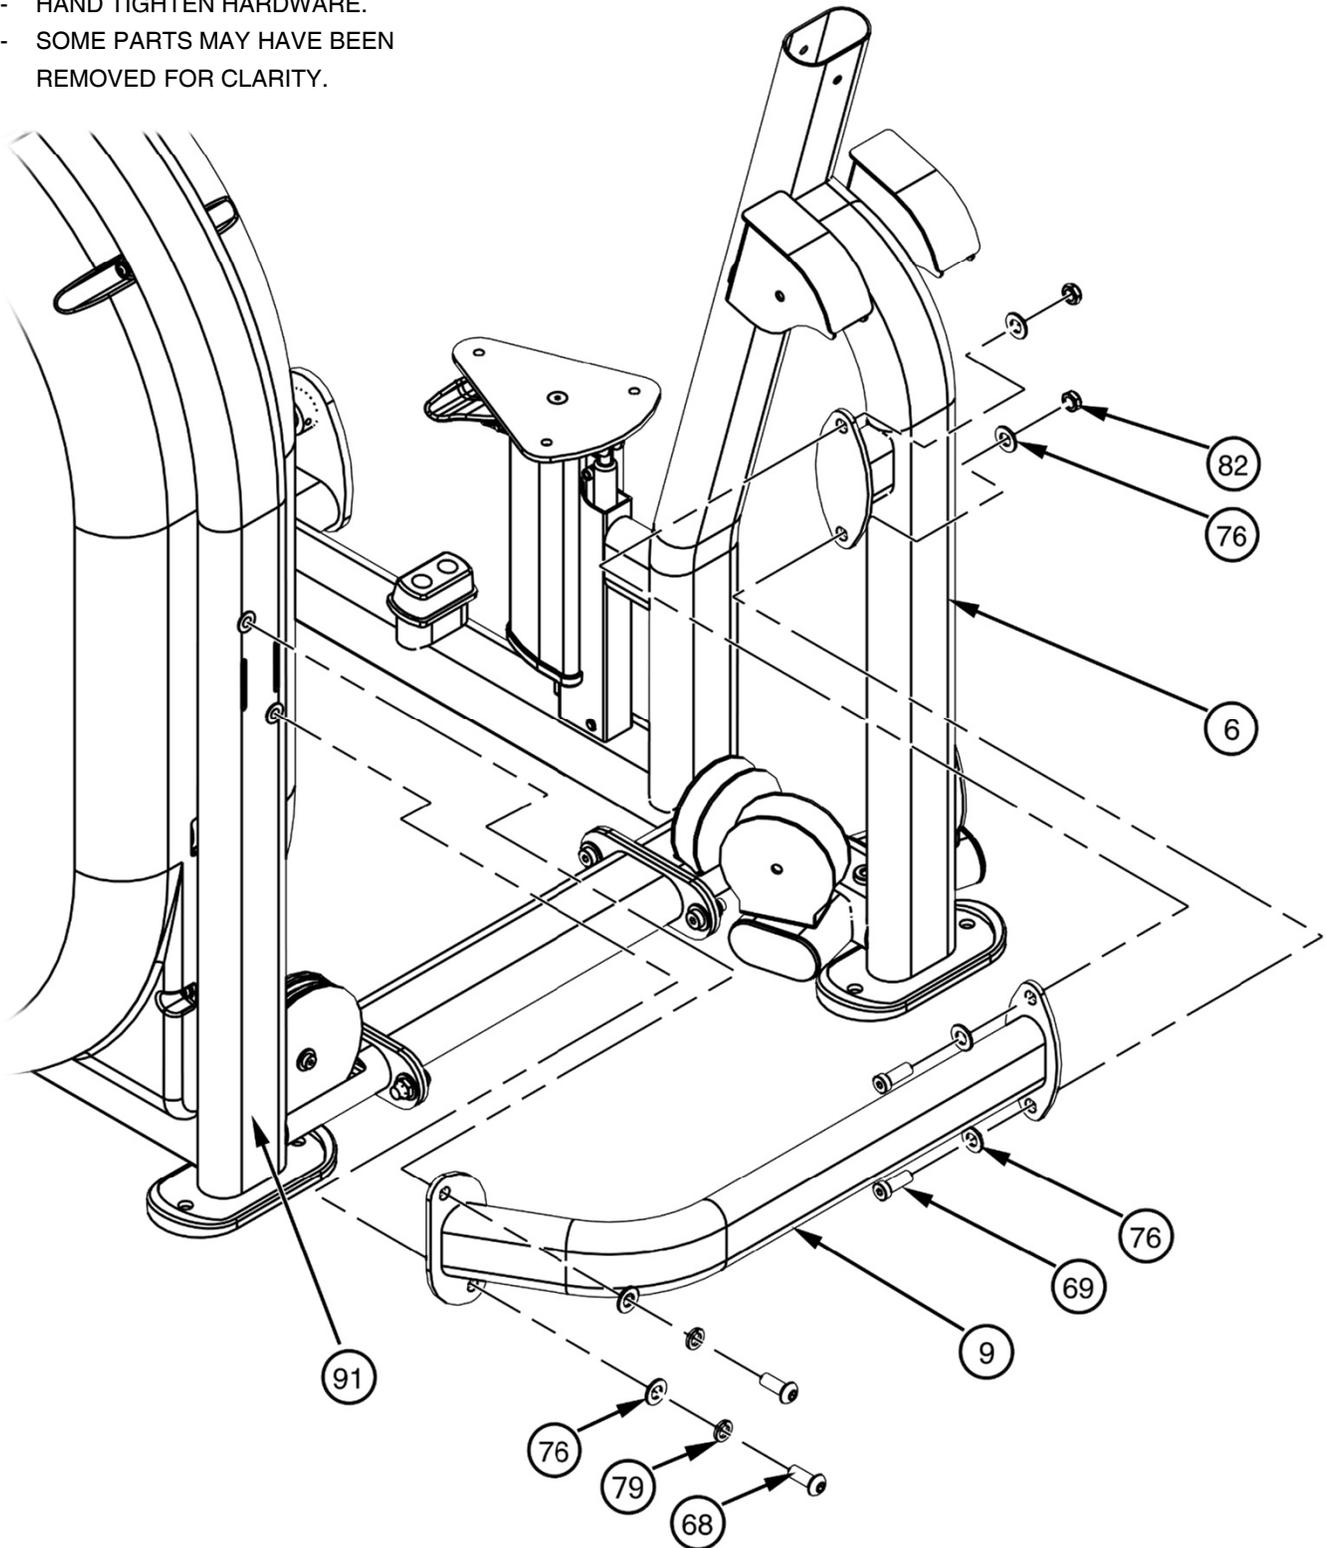


OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:

- HAND TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

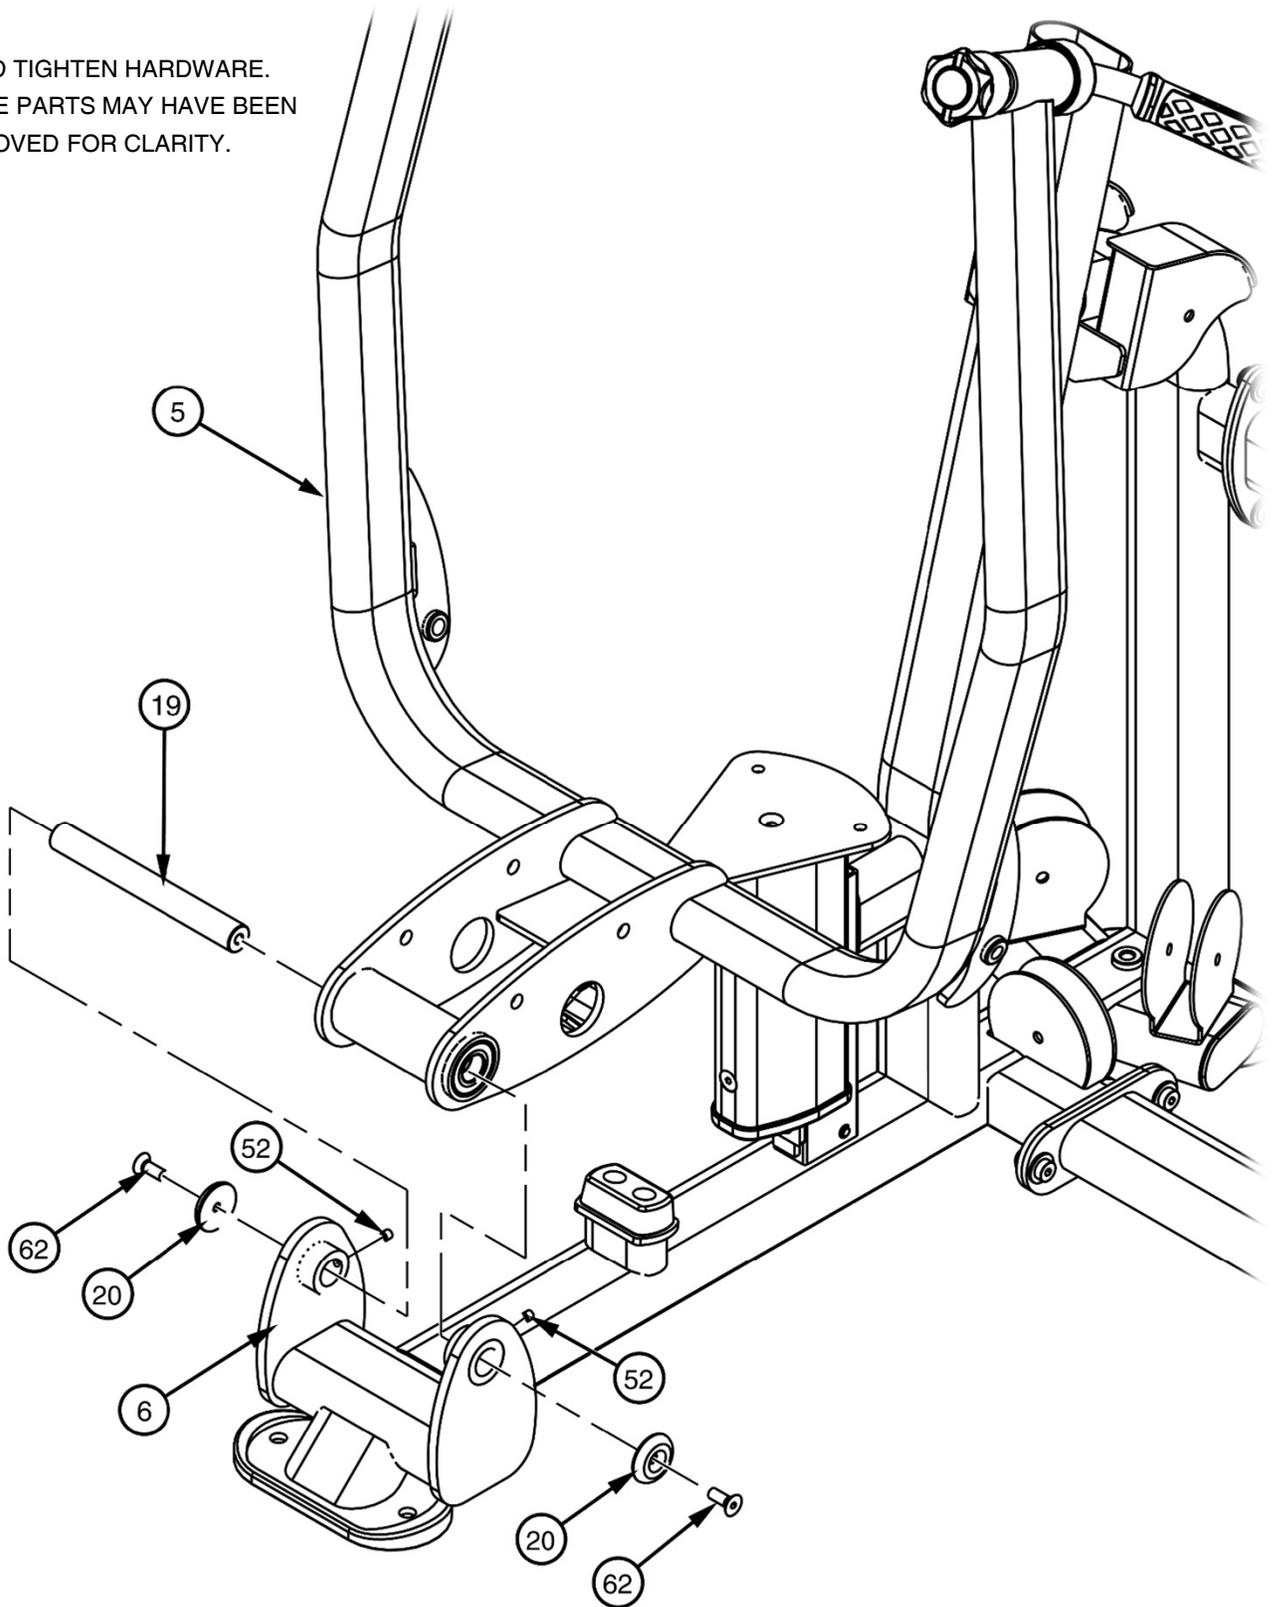


OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:

- HAND TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

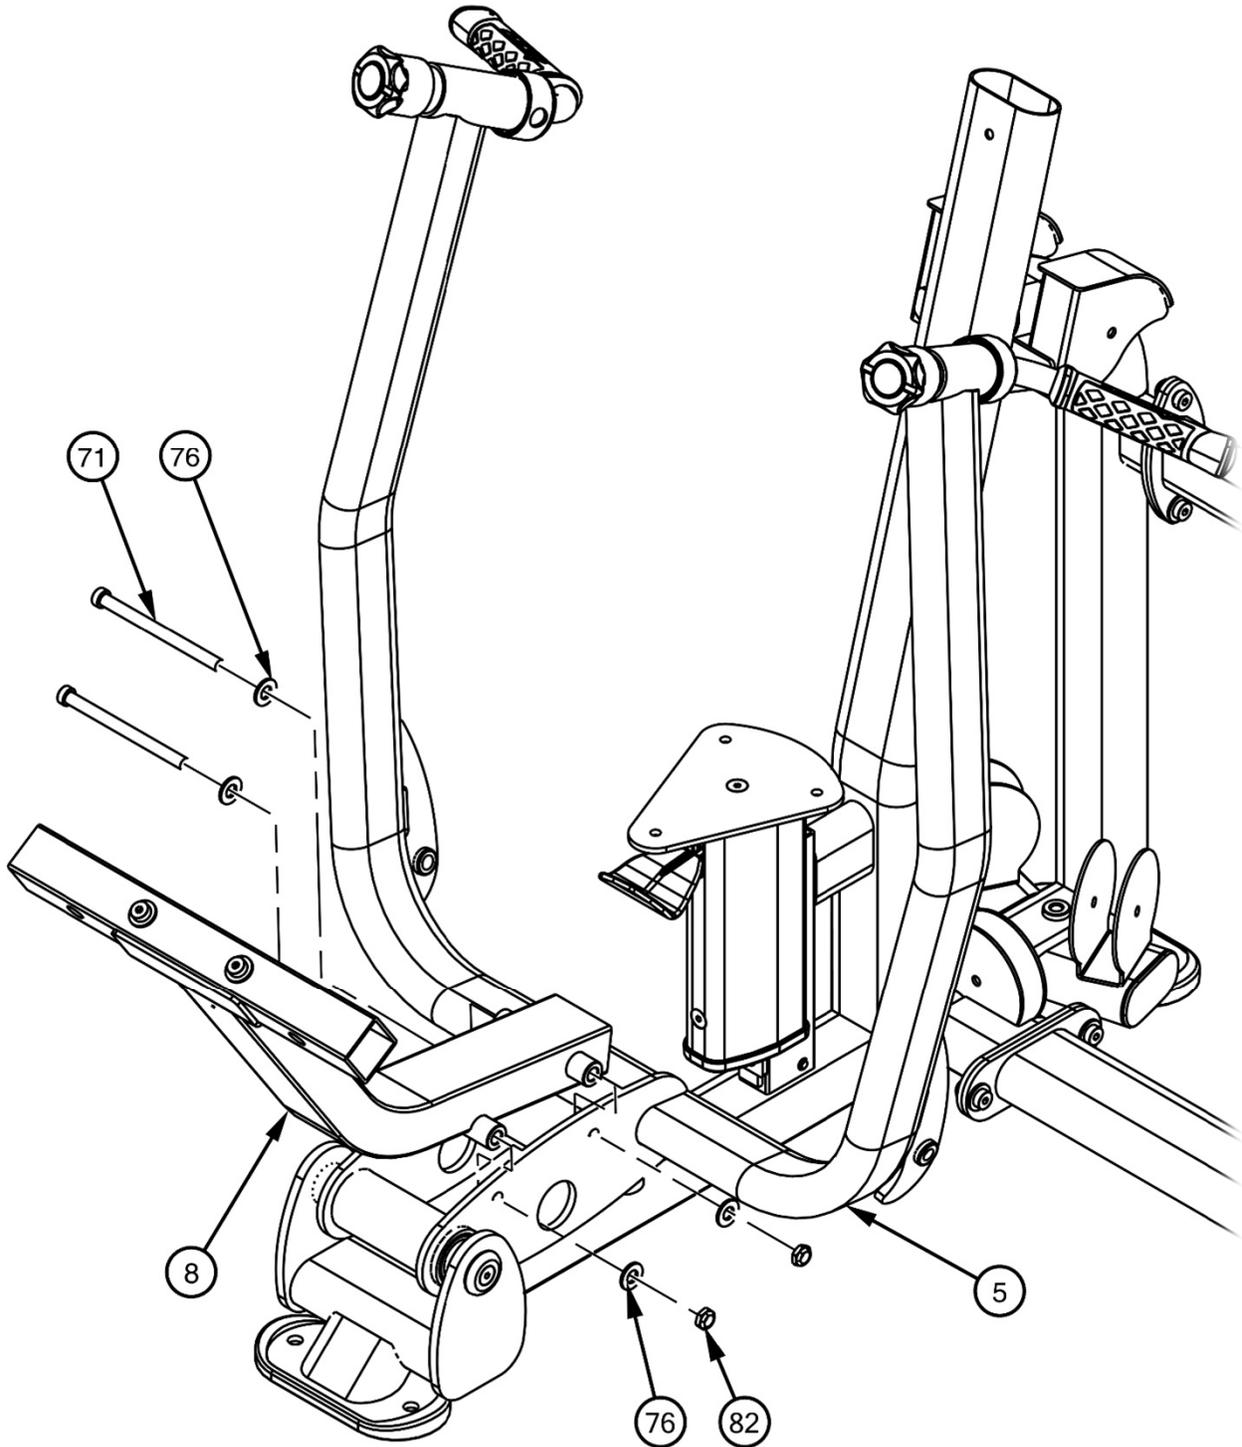


OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:


- HAND TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

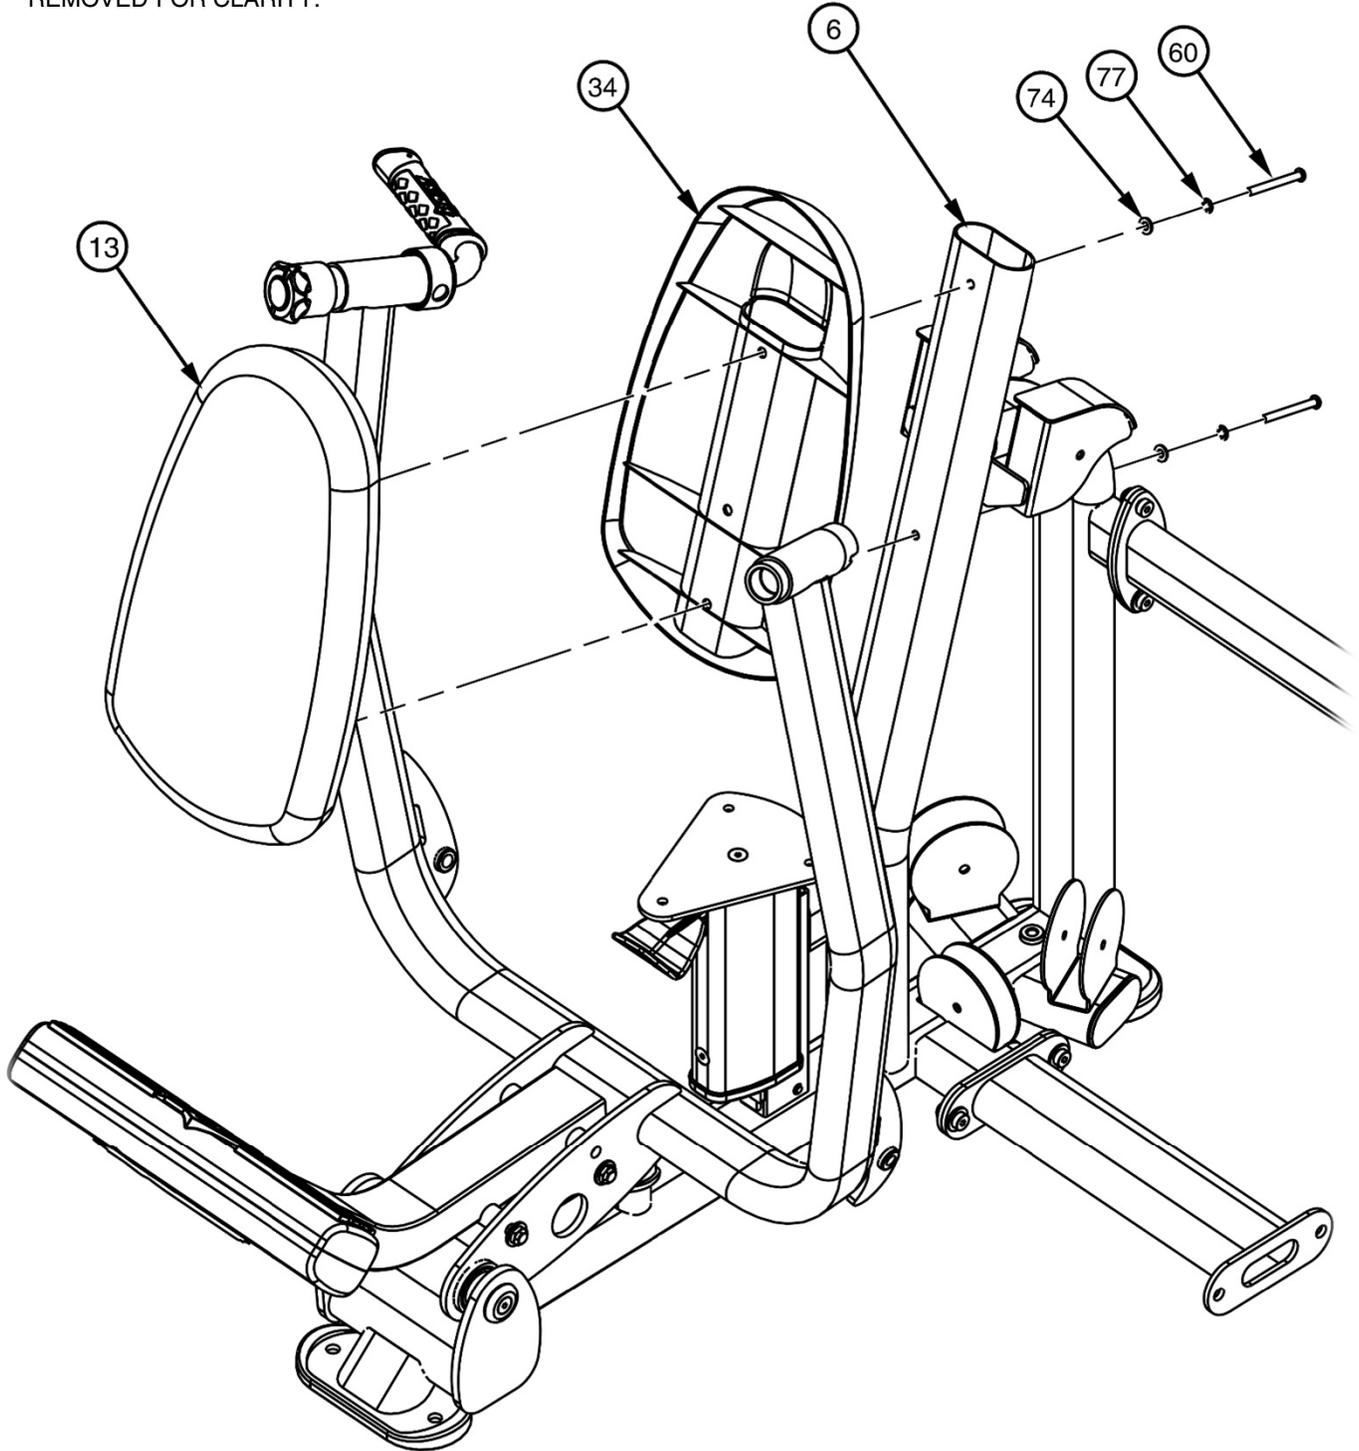

FRAME ASSEMBLY

NOTE:

- HAND TIGHTEN HARDWARE.
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

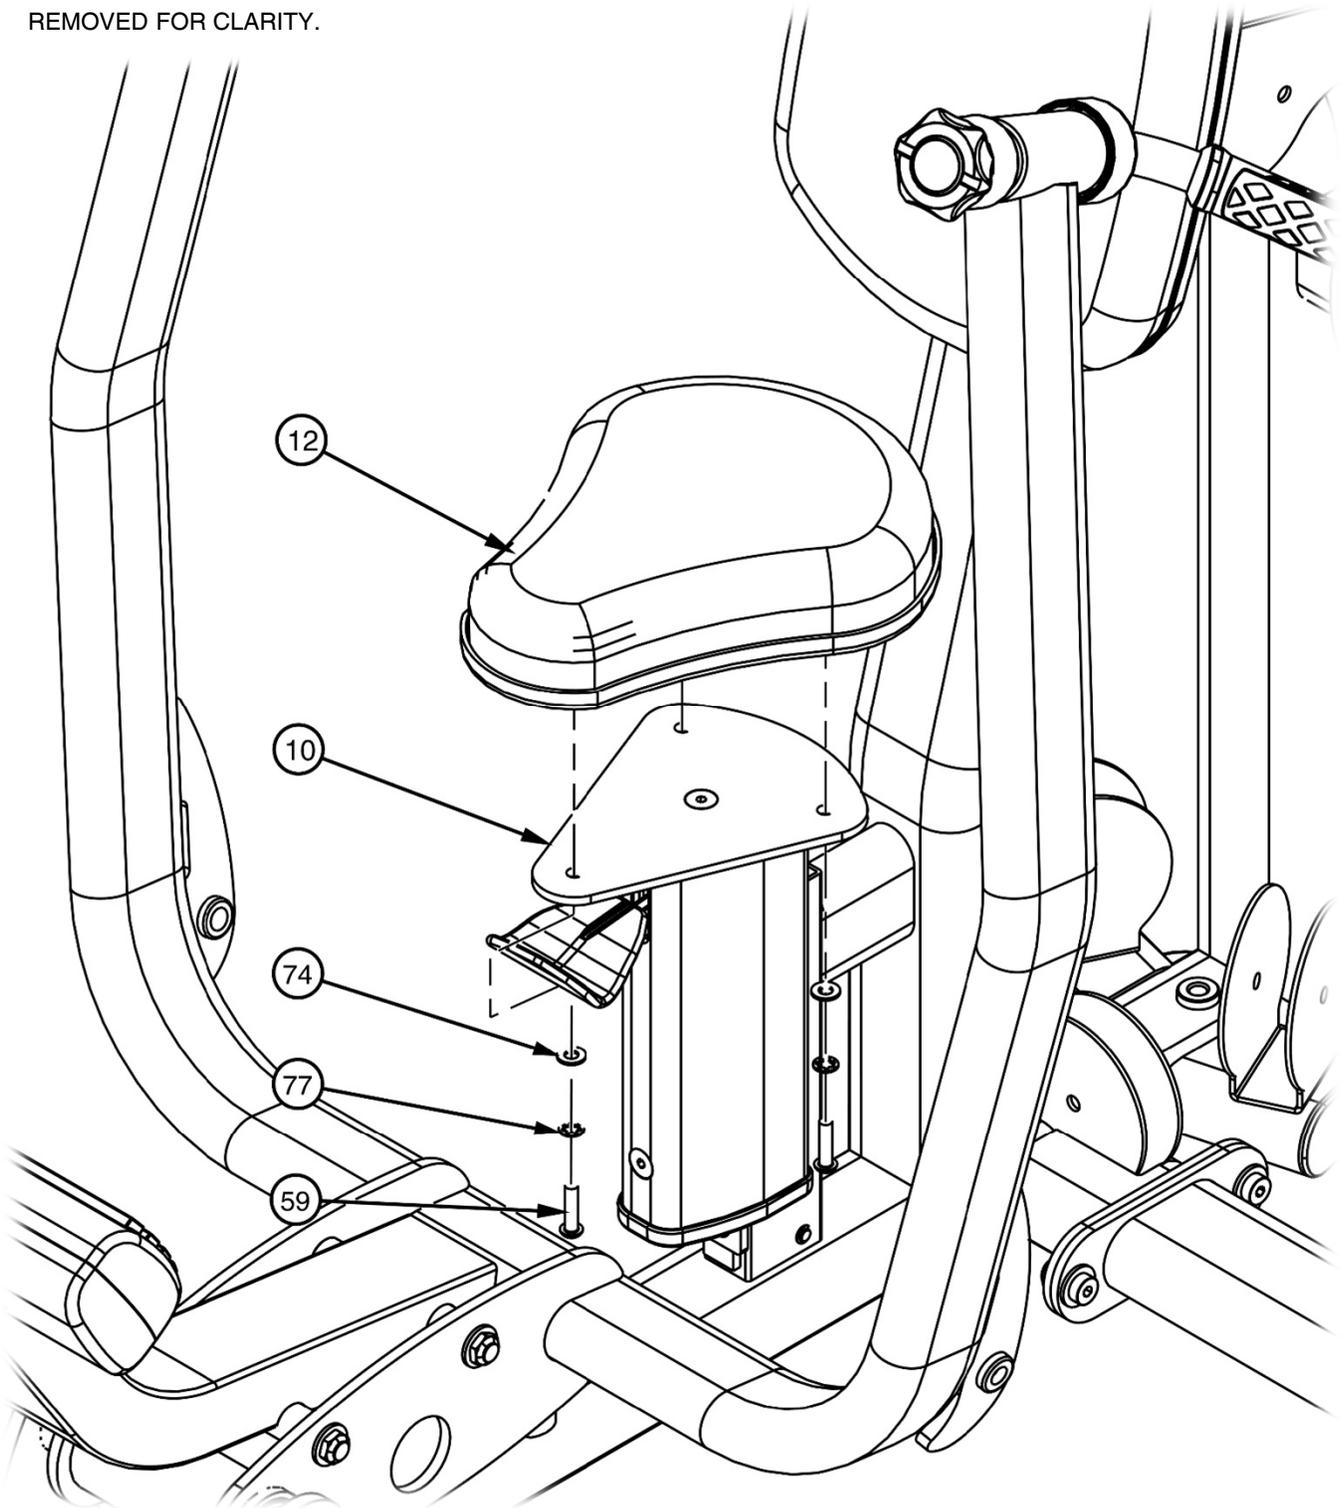


OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:

- WRENCH TIGHTEN HARDWARE.
- WRENCH TIGHTEN ALL PREVIOUSLY HAND TIGHTENED HARDWARE.
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

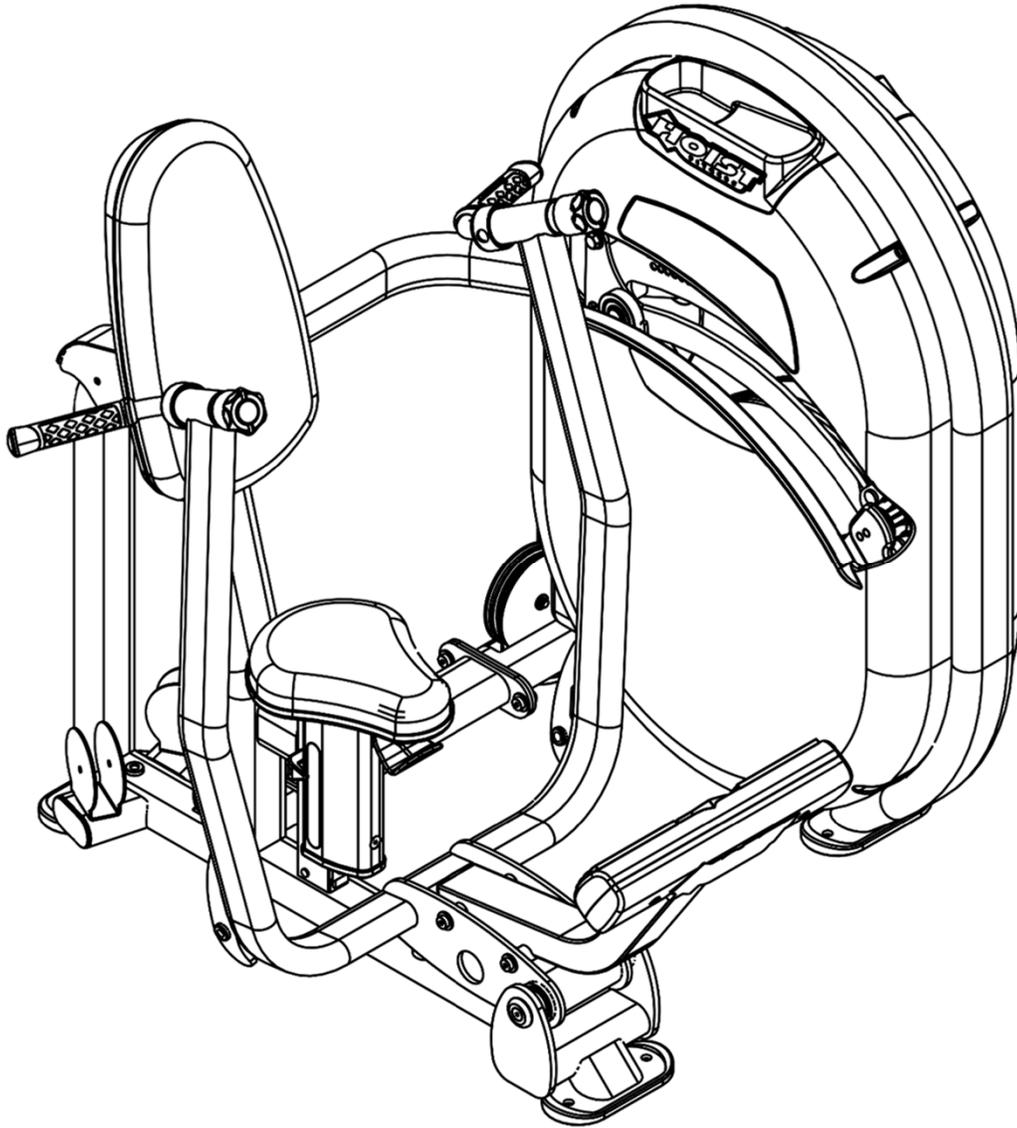

IMPORTANT



NOW THAT THE CL-3301 IS COMPLETELY ASSEMBLED, TAKE TIME TO ASSURE THAT YOUR UNIT IS ASSEMBLED SQUARE AND PERPENDICULAR. IF IT IS NOT PERPENDICULAR IN BOTH DIRECTIONS, IT WILL BE NECESSARY TO LOOSEN SOME FRAME HARDWARE TO RE-ALIGN THE FRAME AND RETIGHTEN BOLTS.

OWNER'S MANUAL

CABLE PROFILE VIEW

NOTE:

**REFER TO SSS-CAGE-60 MANUAL FOR
DETAILED INSTRUCTIONS ON CABLE
ROUTING WITHIN THE CAGE ITSELF**

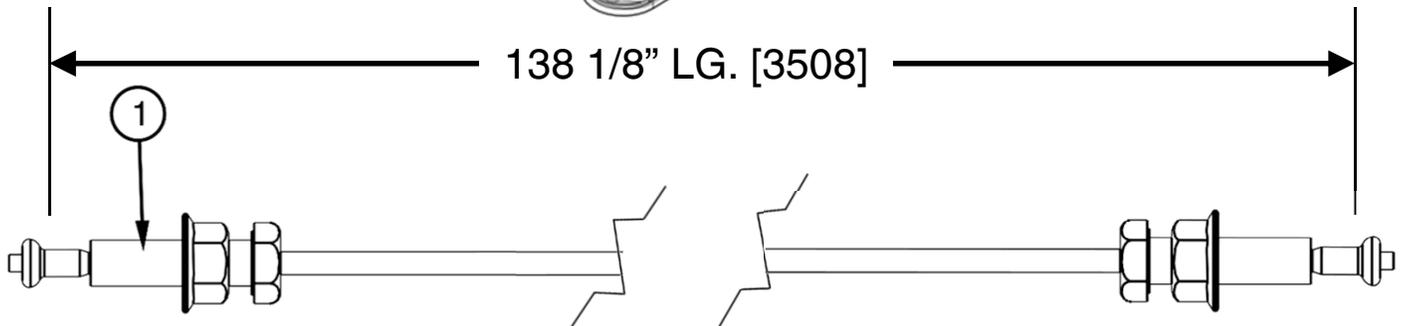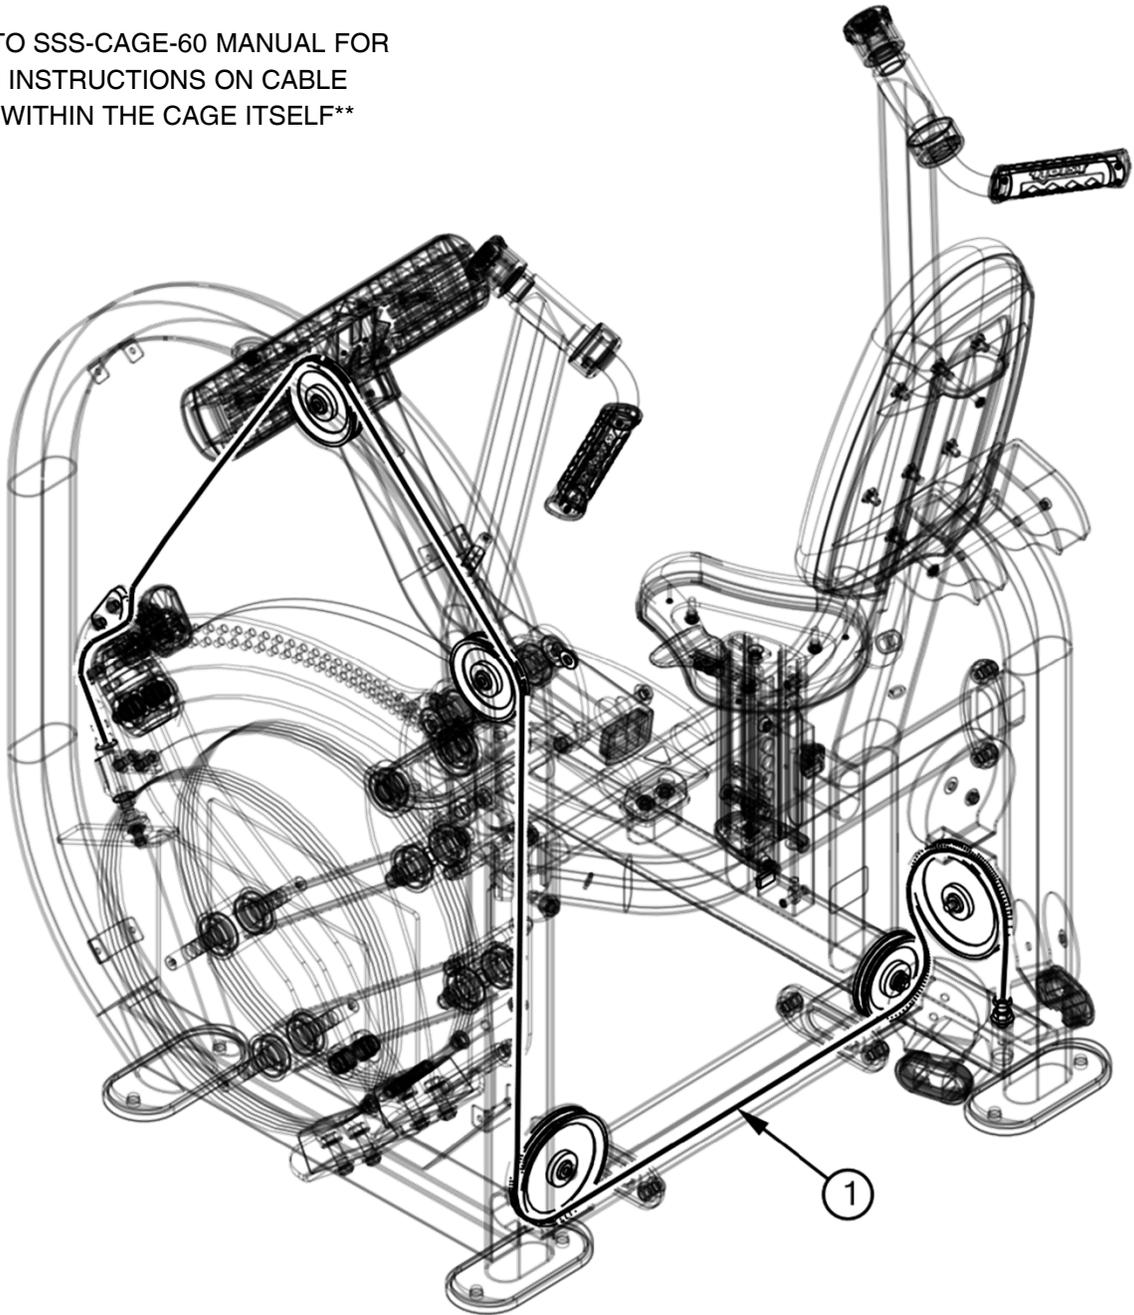


OWNER'S MANUAL

FRAME ASSEMBLY

NOTE:

- HAND TIGHTEN HARDWARE.
- INSTALL CABLES AND PULLEYS AT THE SAME TIME
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

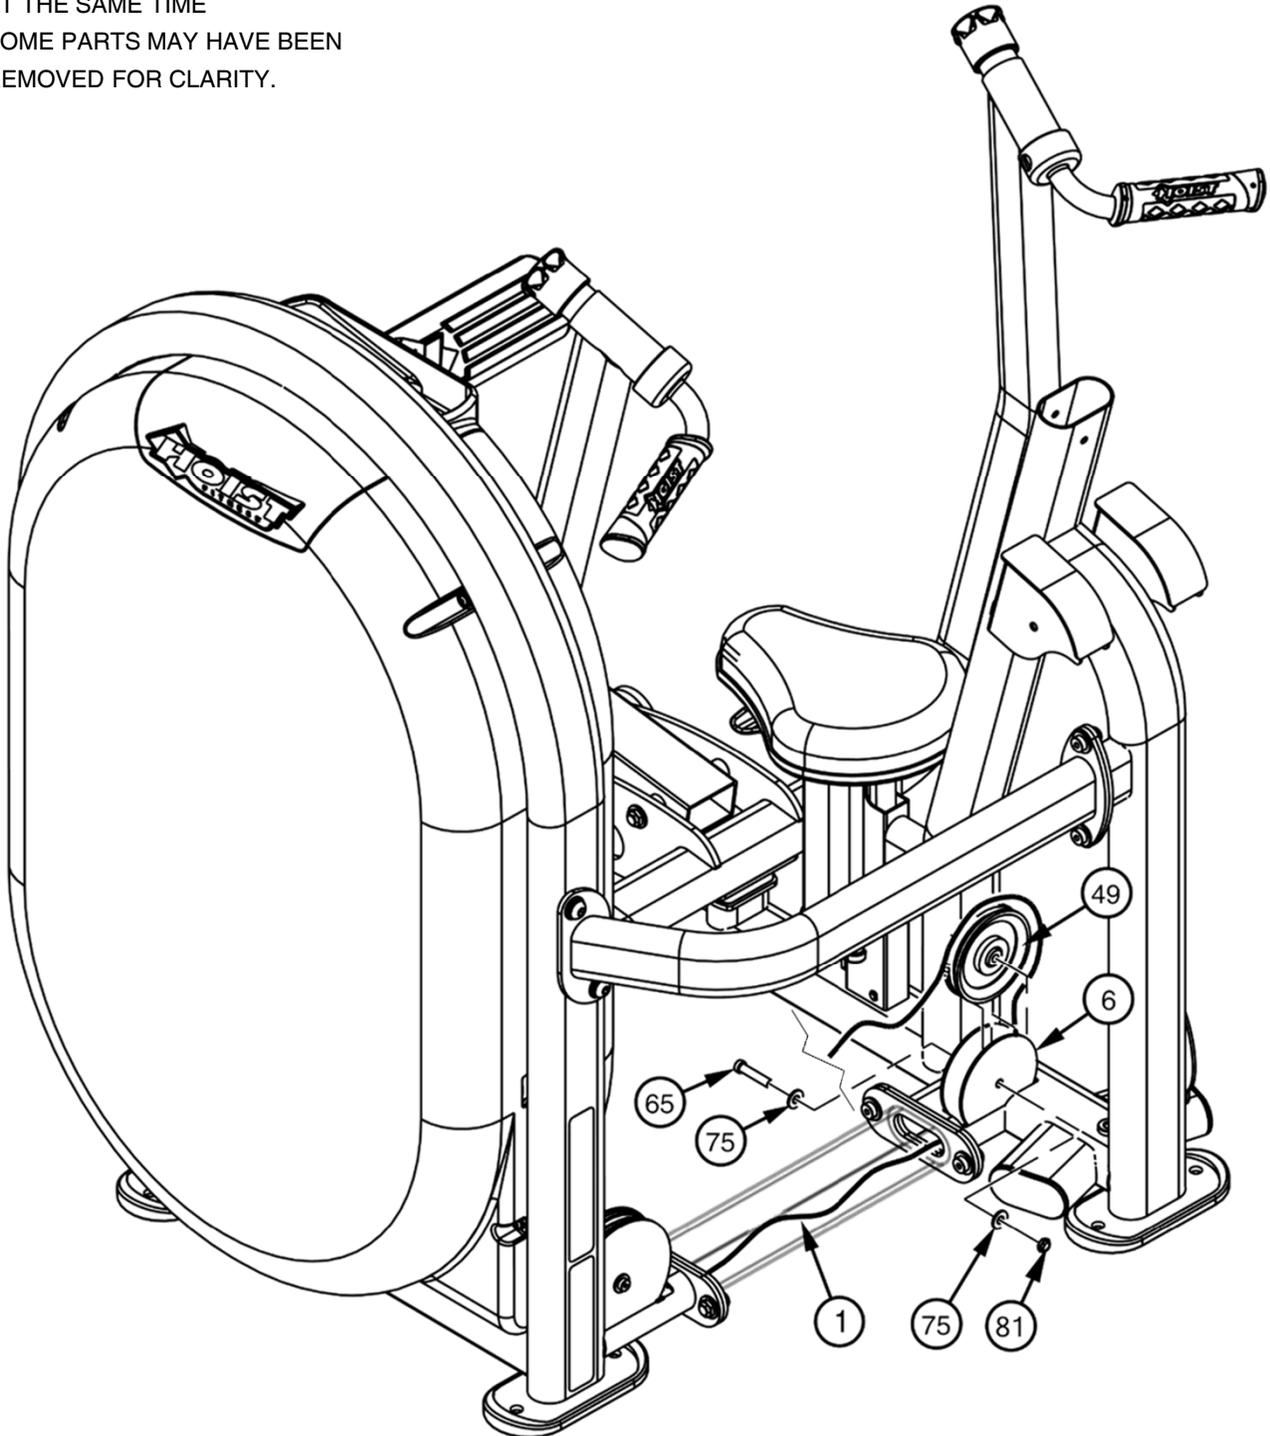

FRAME ASSEMBLY


FINE TUNING

LOOSEN JAM NUT AND THREAD BOLT IN/OUT TO GIVE THE CABLE PROPER TENSION. RE-TIGHTEN JAM NUT.

WARNING – CABLE BOLT MUST BE THREADED A MINIMUM OF 3/8" WITH JAM NUT TIGHTENED SECURELY TO ENSURE PROPER CONNECTION.



NOTE:

- HAND TIGHTEN HARDWARE.
- INSTALL CABLES AND PULLEYS AT THE SAME TIME
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

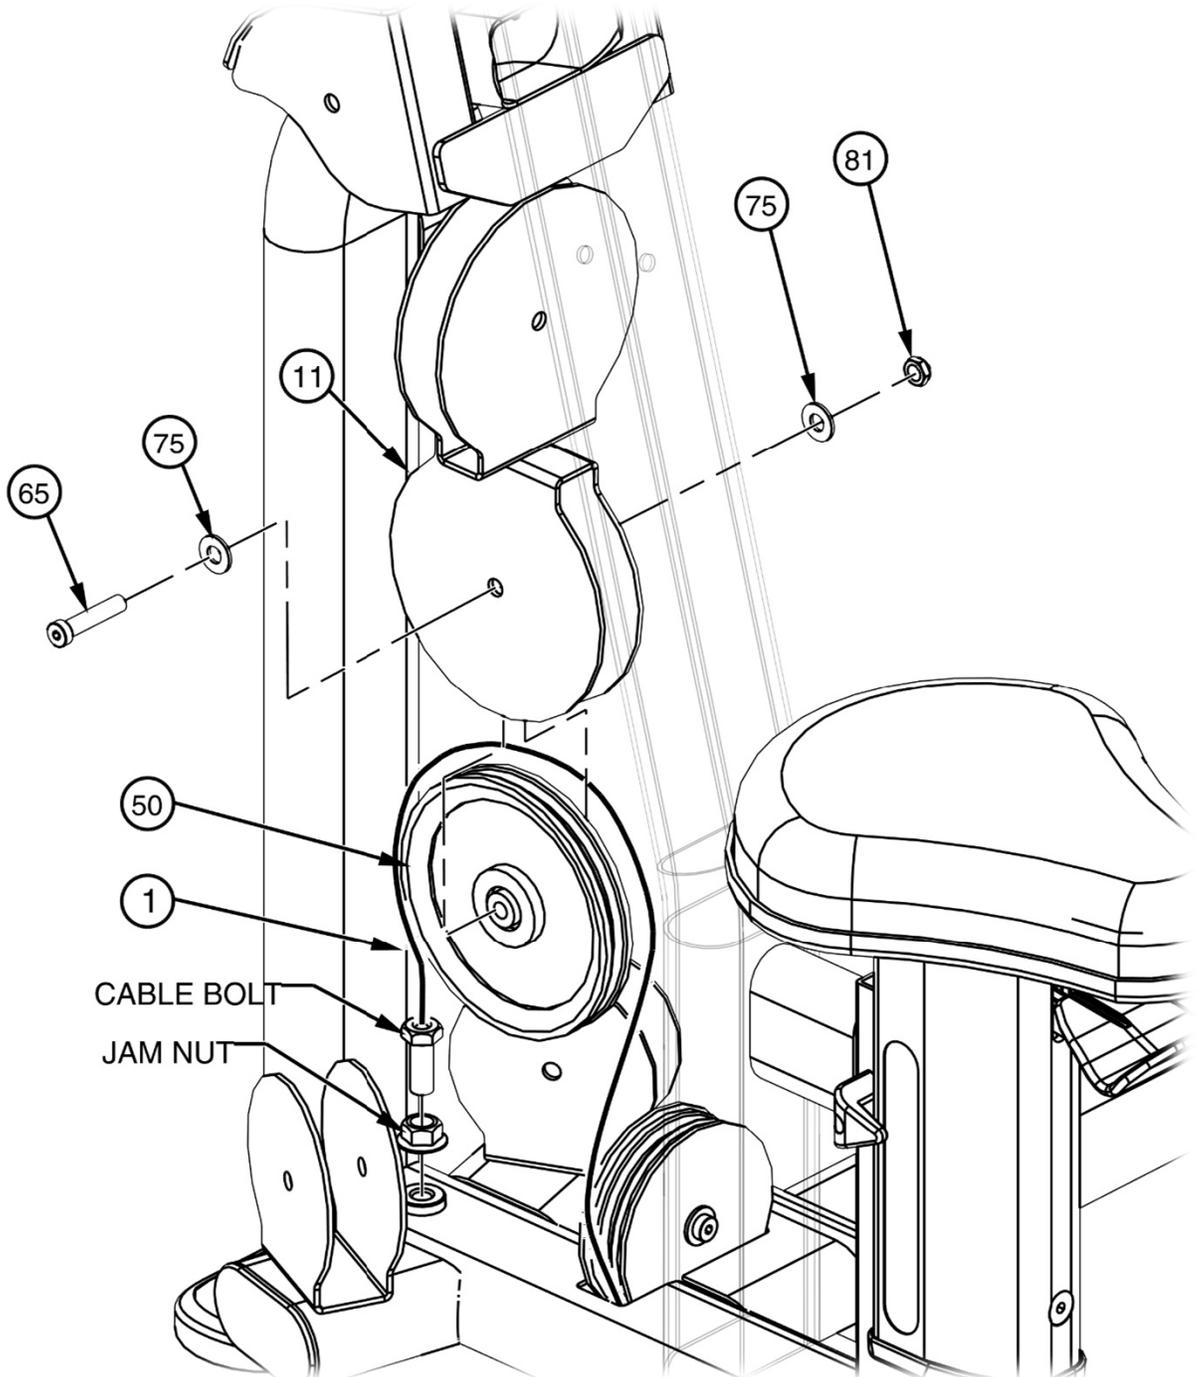

OWNER'S MANUAL


CABLE PROFILE VIEW

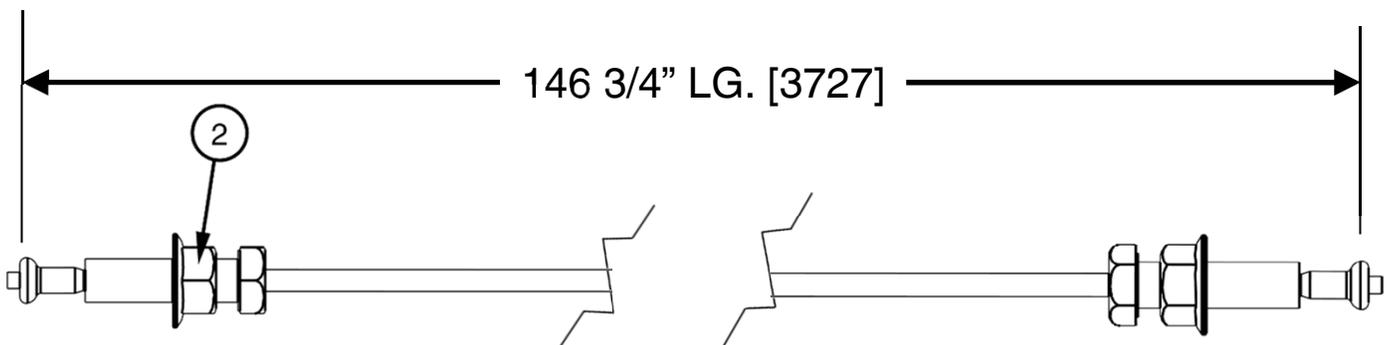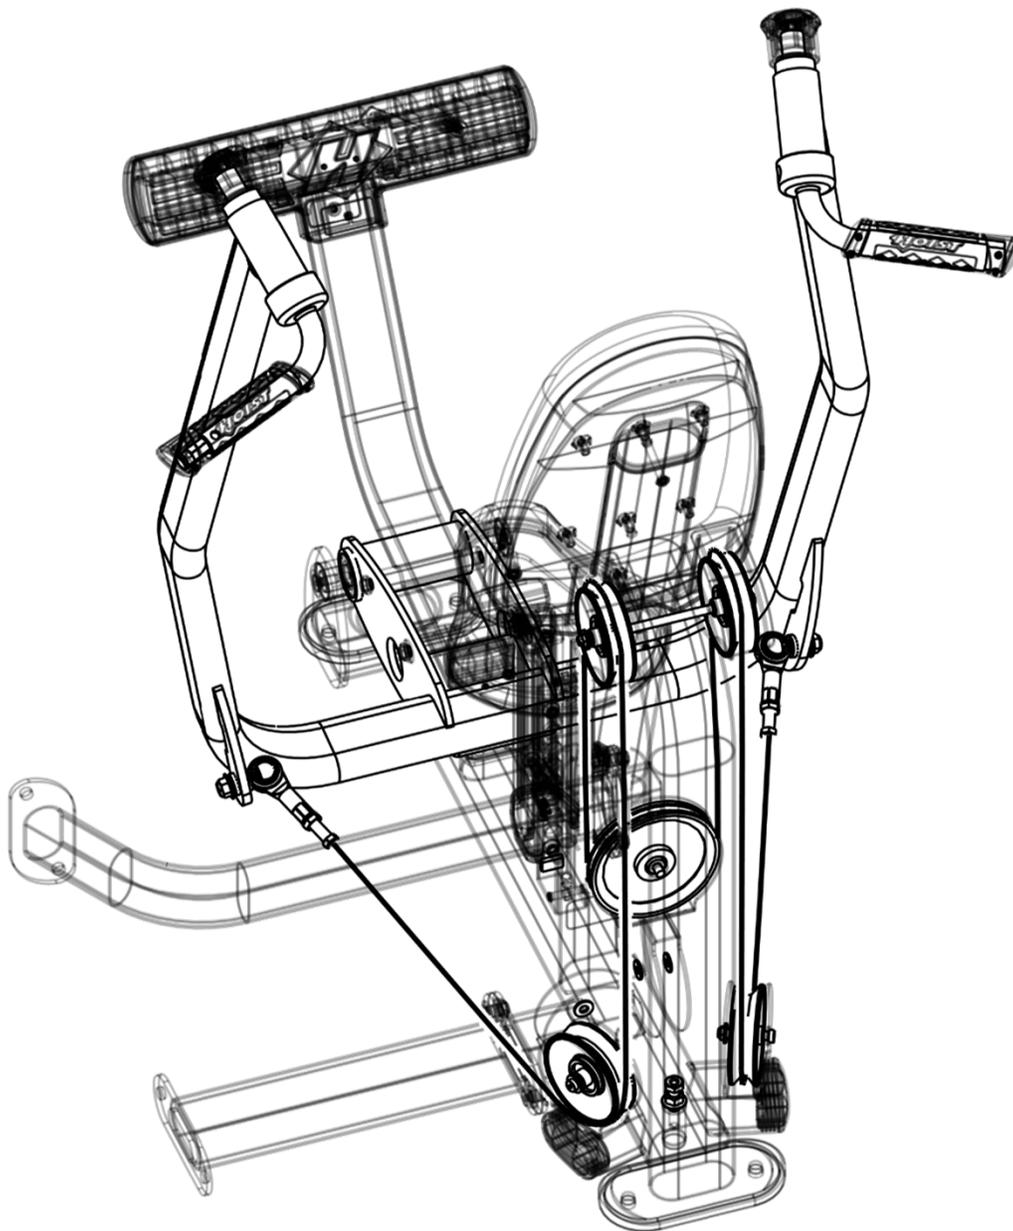

FRAME ASSEMBLY

NOTE:

- HAND TIGHTEN HARDWARE.
- INSTALL CABLES AND PULLEYS AT THE SAME TIME
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

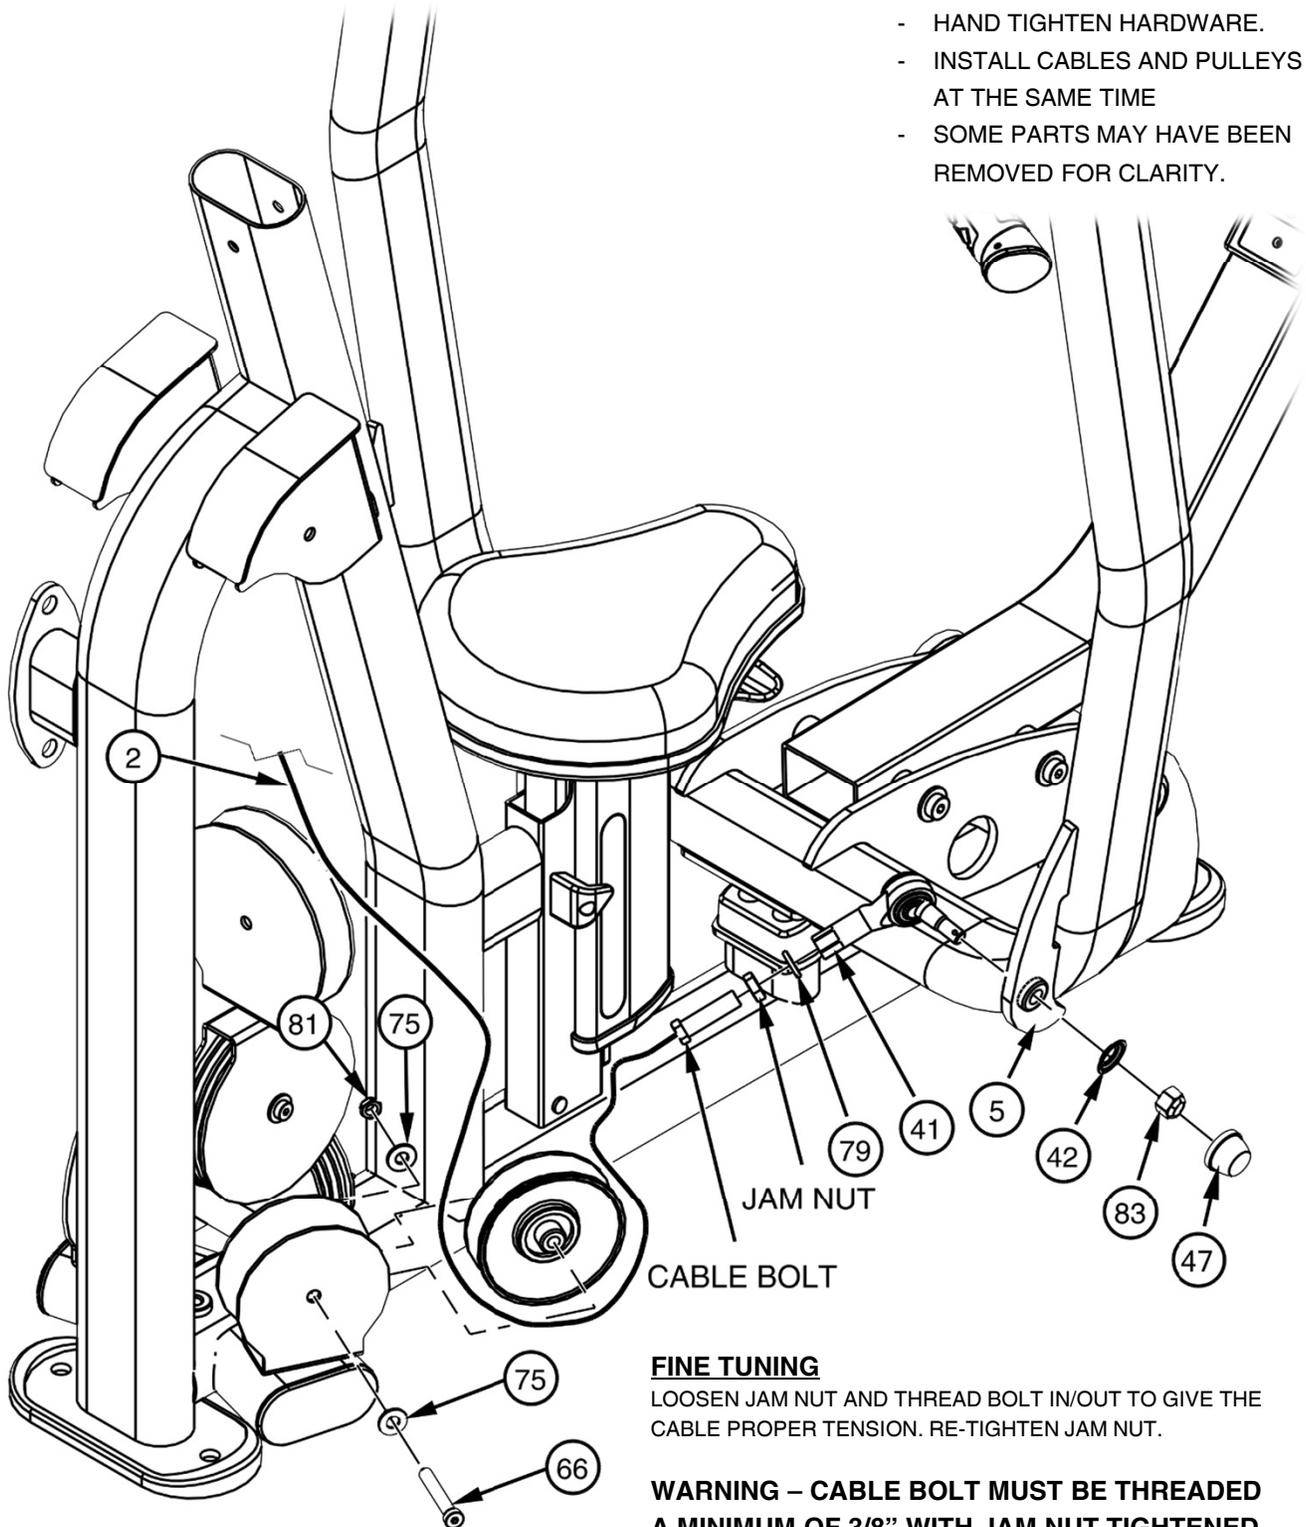

FINE TUNING


LOOSEN JAM NUT AND THREAD BOLT IN/OUT TO GIVE THE CABLE PROPER TENSION. RE-TIGHTEN JAM NUT.

WARNING – CABLE BOLT MUST BE THREADED A MINIMUM OF 3/8" WITH JAM NUT TIGHTENED SECURELY TO ENSURE PROPER CONNECTION.

FRAME ASSEMBLY

NOTE:


- INSERT BOLT (67) TO TEMPORARILY HOLD PULLEY (48) IN PLACE
- INSTALL CABLES AND PULLEYS AT THE SAME TIME
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

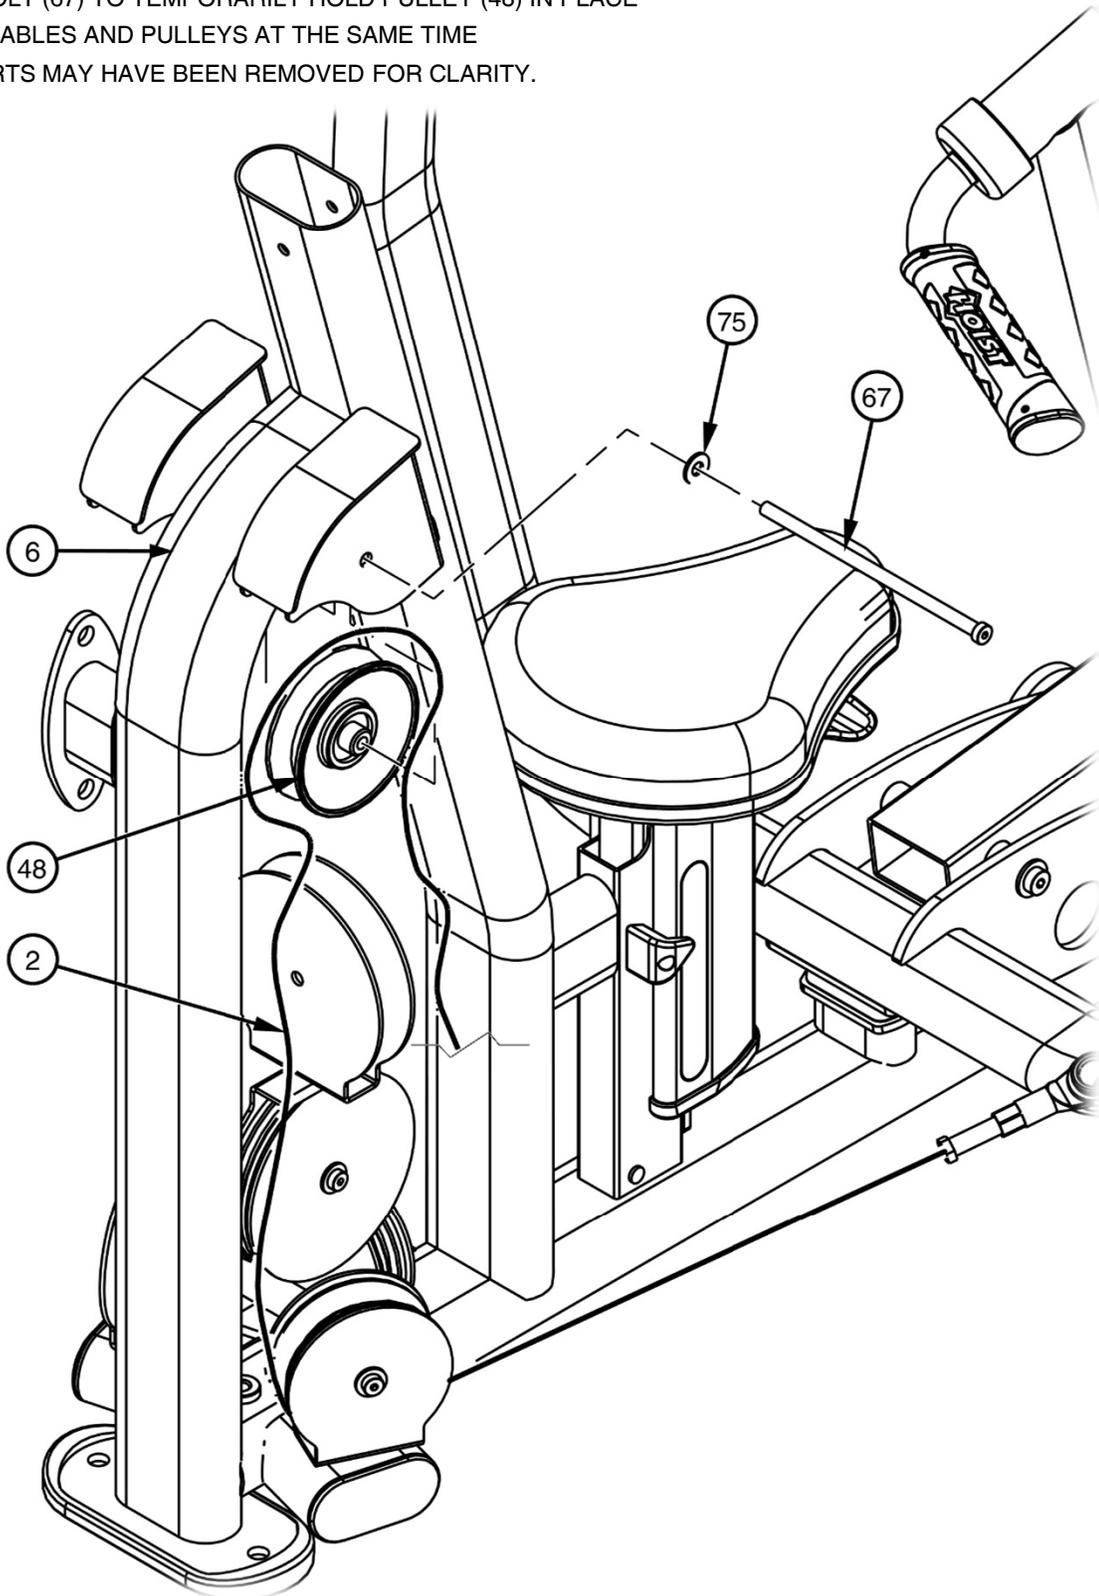

FRAME ASSEMBLY

NOTE:


- HAND TIGHTEN HARDWARE
- INSTALL CABLES AND PULLEYS AT THE SAME TIME
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

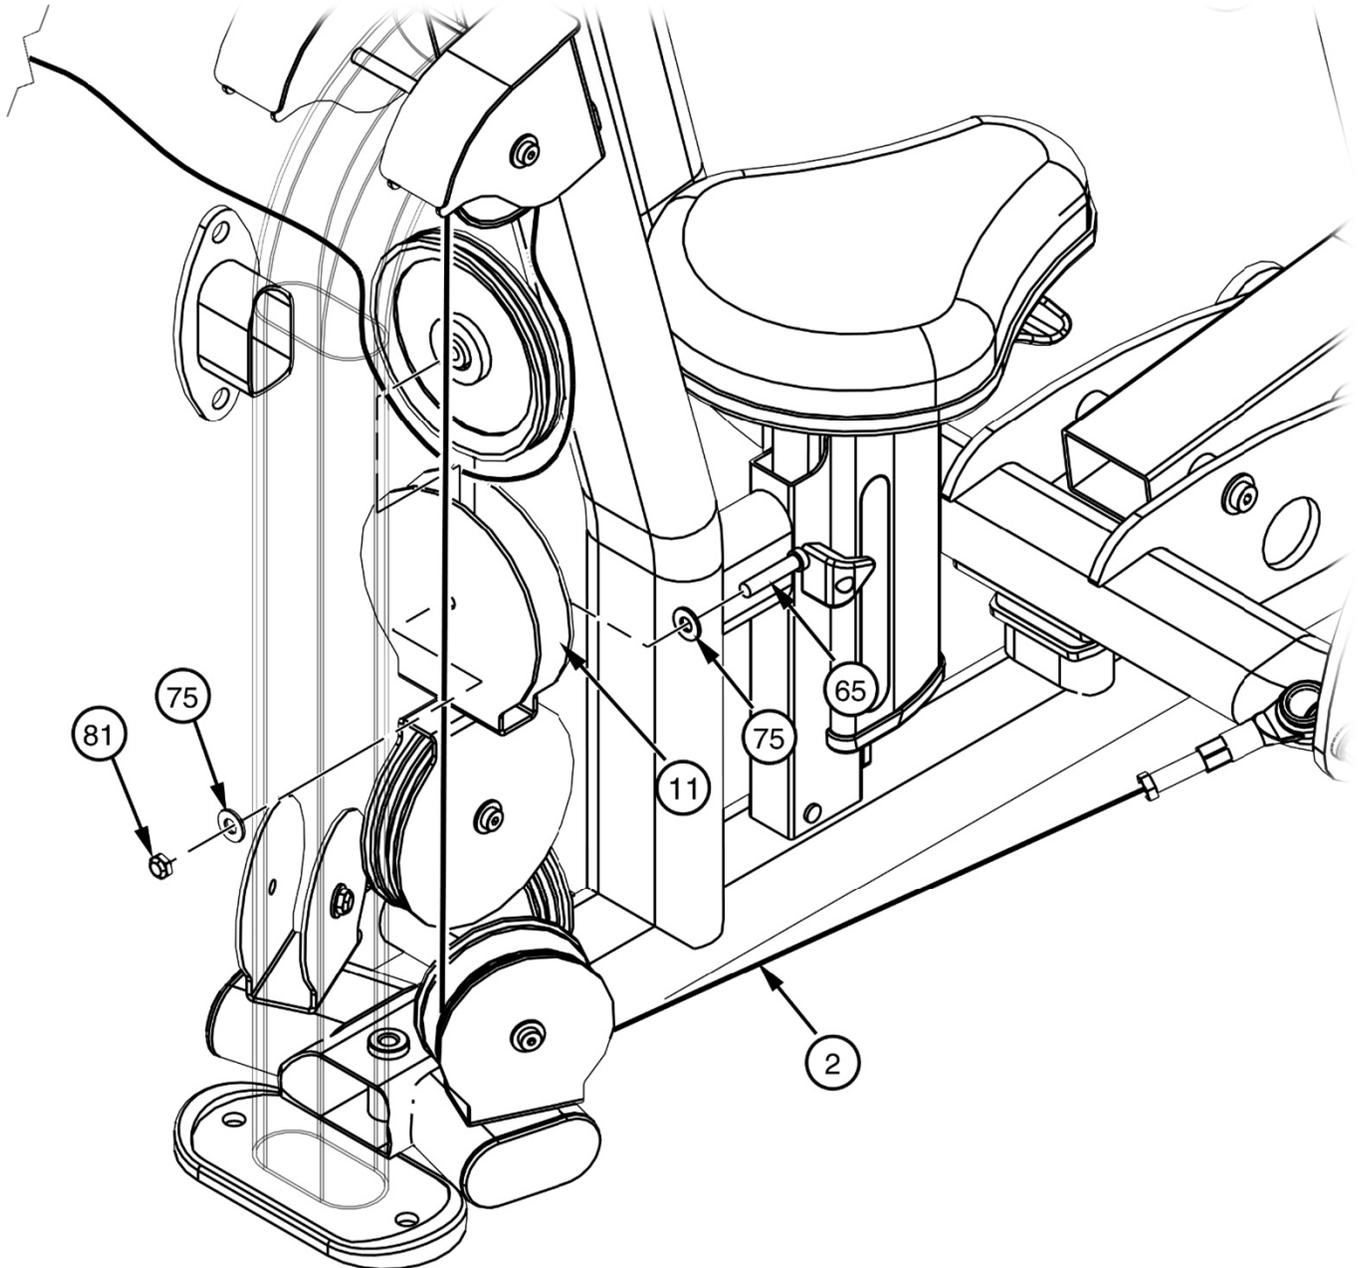

FRAME ASSEMBLY

NOTE:


- PULL BOLT (67) OUT JUST FAR ENOUGH TO INSTALL PULLEY (48) BUT STILL ABLE TO HOLD THE OTHER PULLEY IN PLACE
- INSTALL CABLES AND PULLEYS AT THE SAME TIME
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

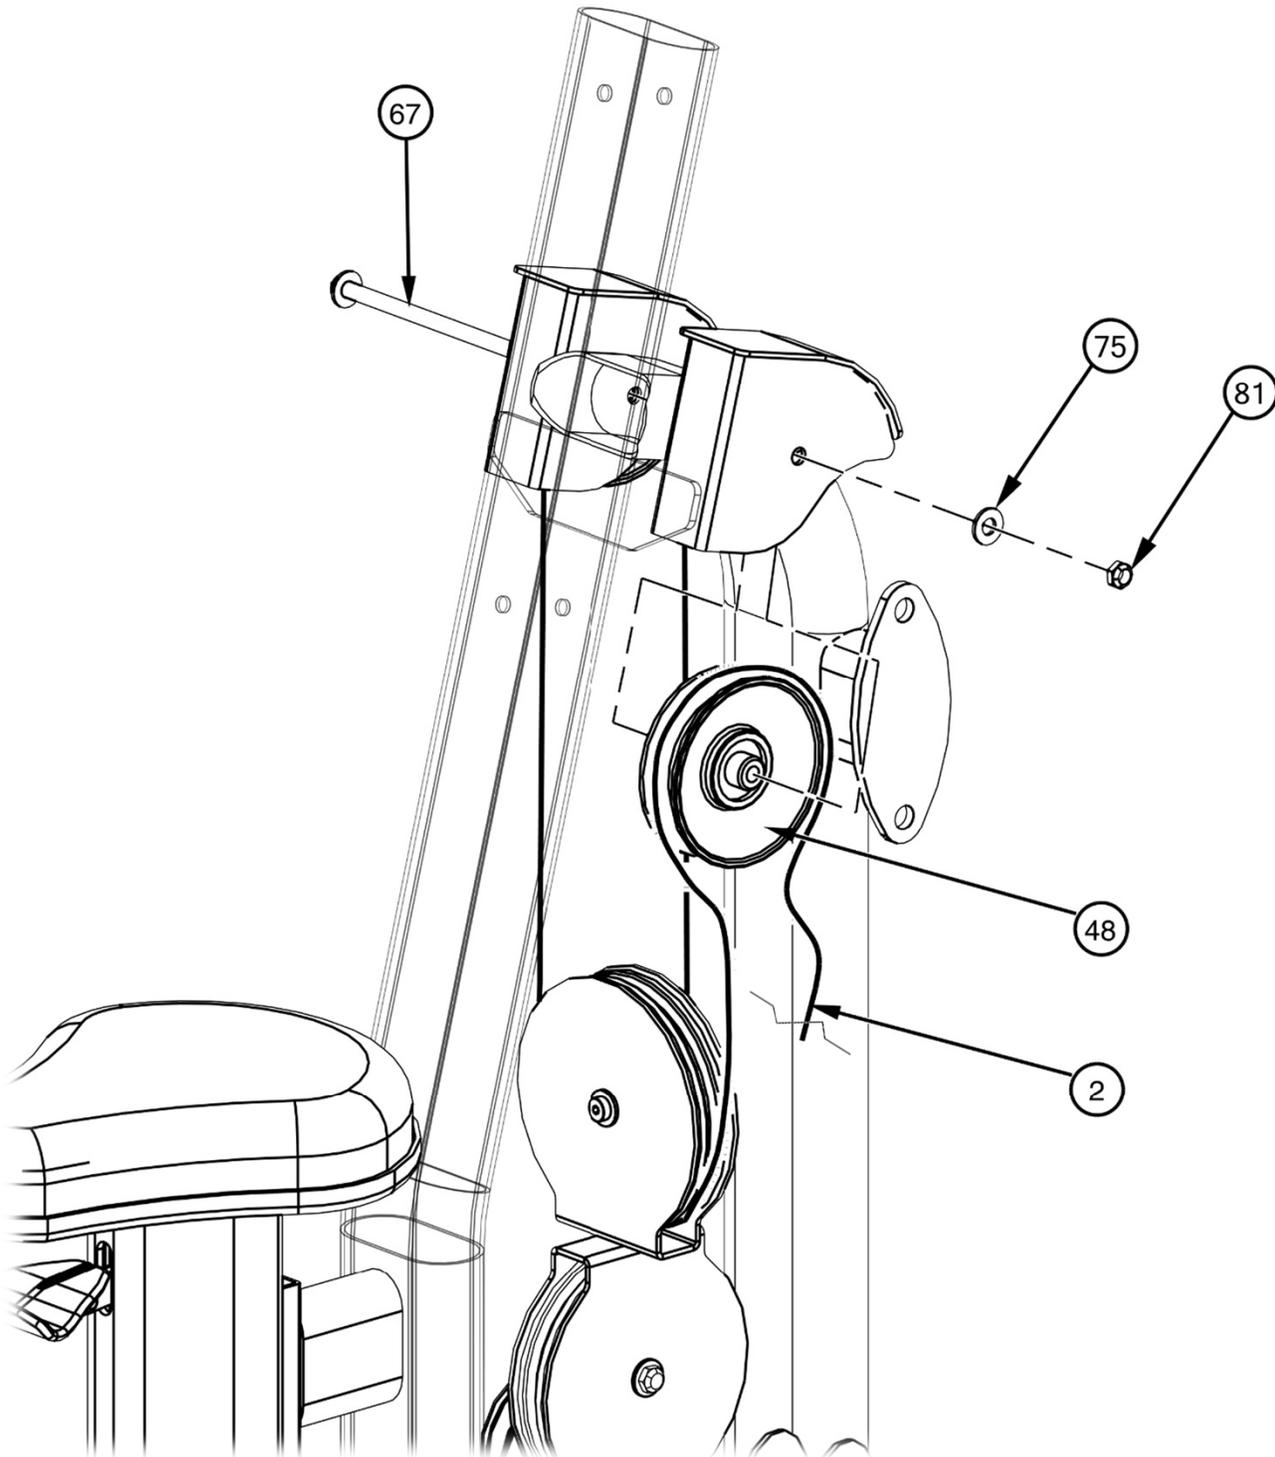

FRAME ASSEMBLY

NOTE:

- HAND TIGHTEN HARDWARE
- INSTALL CABLES AND PULLEYS AT THE SAME TIME
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

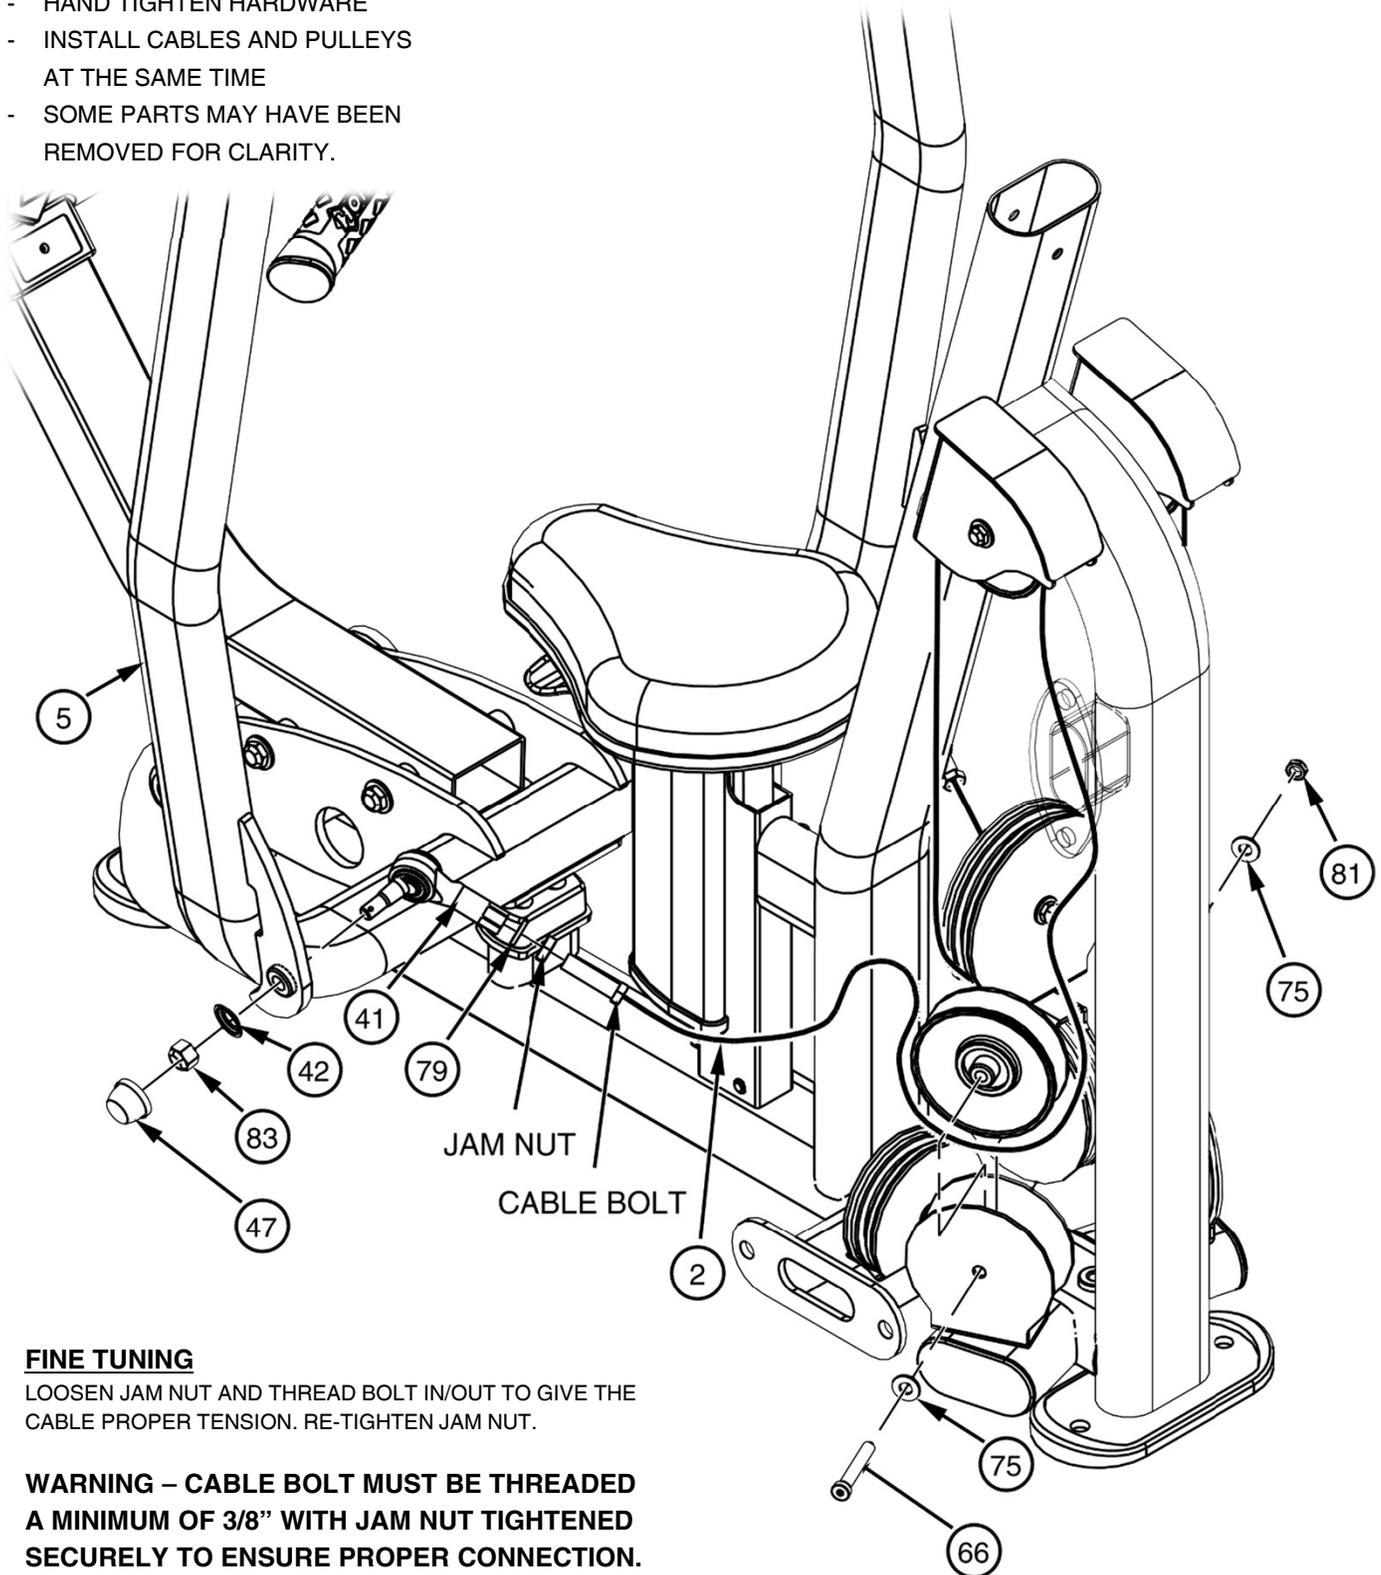

FINE TUNING

LOOSEN JAM NUT AND THREAD BOLT IN/OUT TO GIVE THE CABLE PROPER TENSION. RE-TIGHTEN JAM NUT.


WARNING – CABLE BOLT MUST BE THREADED A MINIMUM OF 3/8" WITH JAM NUT TIGHTENED SECURELY TO ENSURE PROPER CONNECTION.

OWNER'S MANUAL

PRE-ASSEMBLY CONTINUED

NOTE:

- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

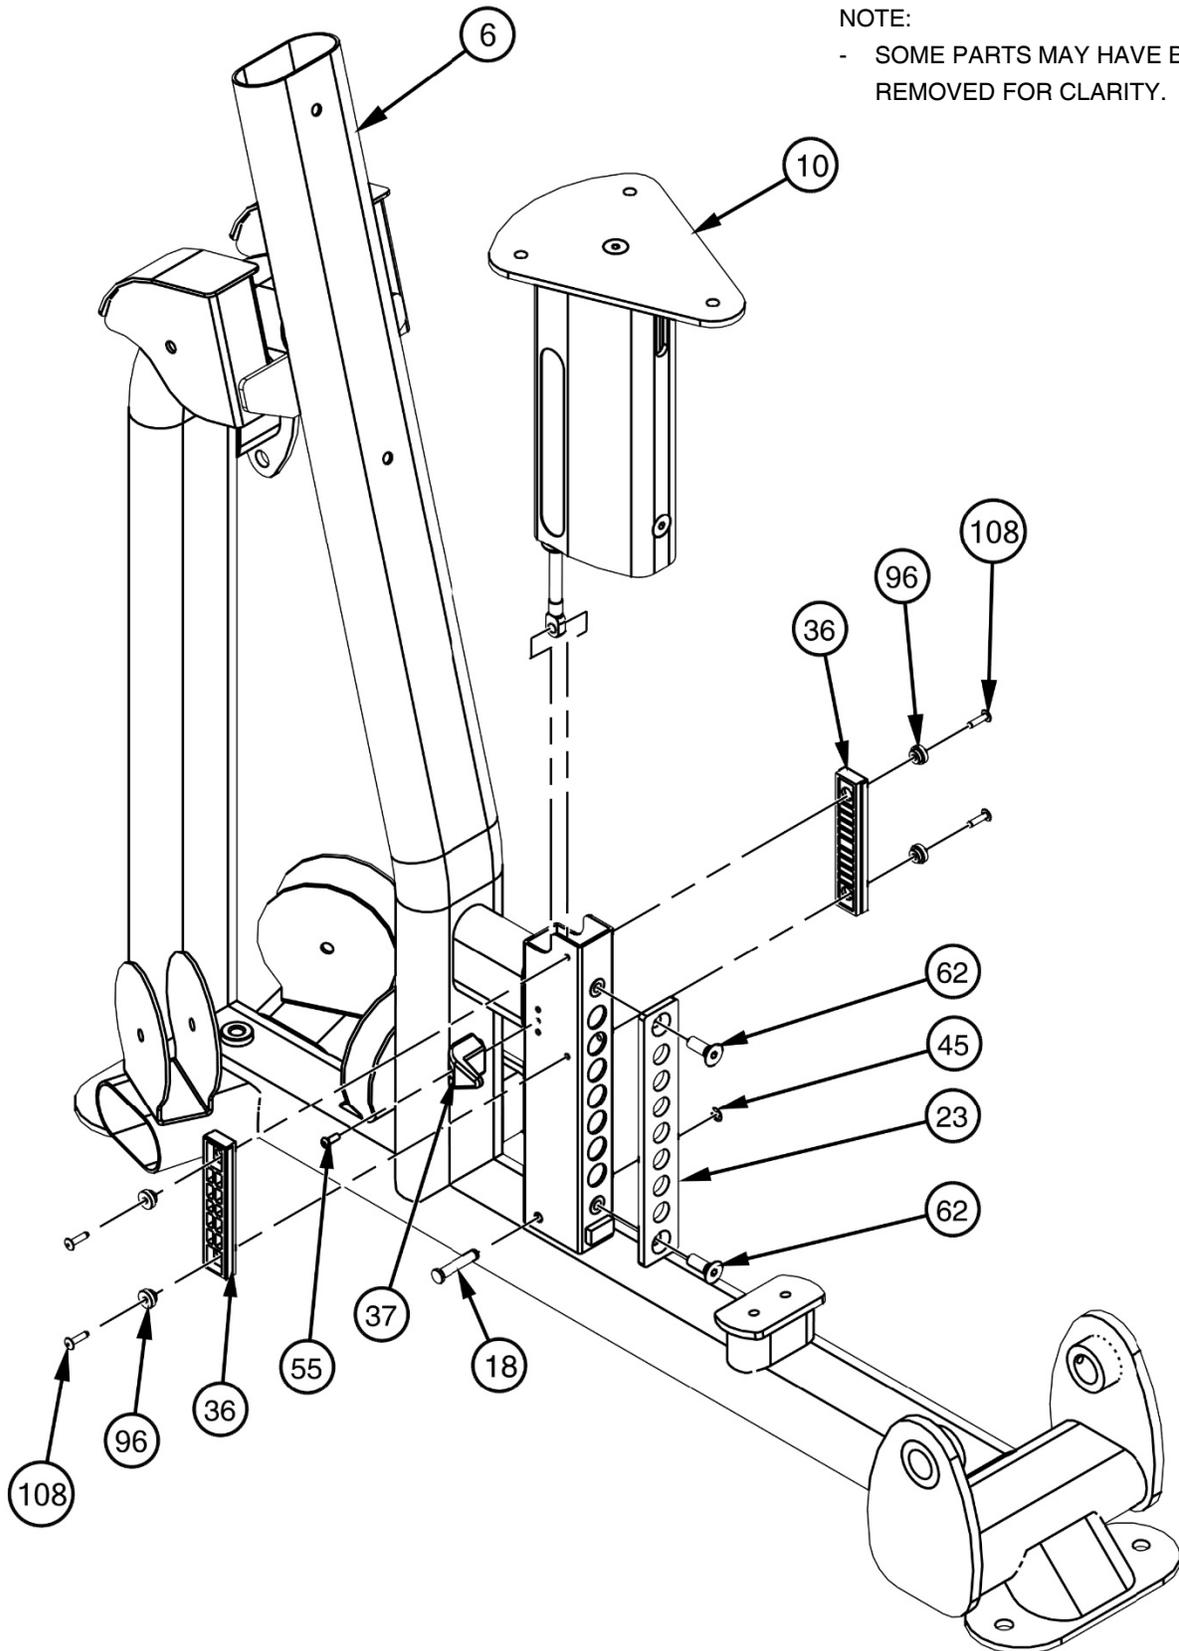


OWNER'S MANUAL

PRE-ASSEMBLY CONTINUED

NOTE:


- REPEAT ASSEMBLY ON OTHER HANDLE (97)* & (107)*.
- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

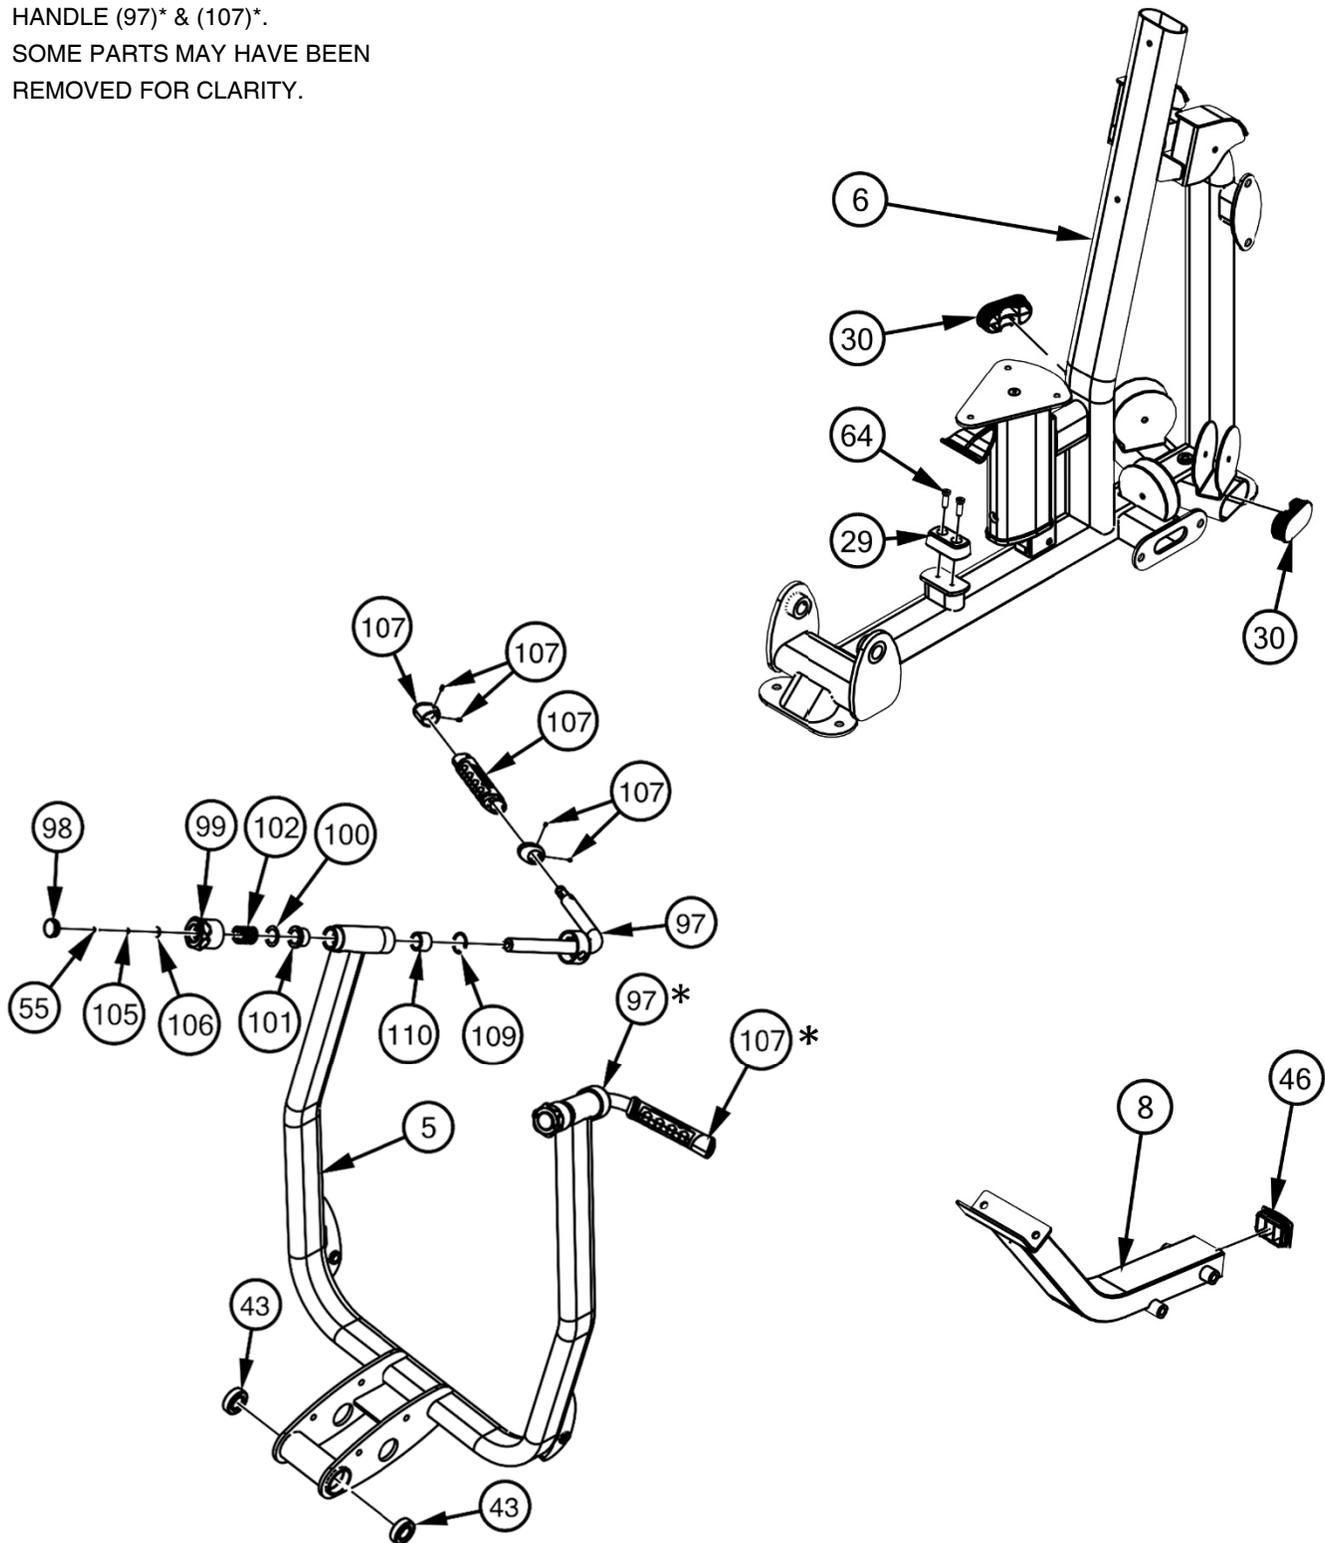


PRE-ASSEMBLY CONTINUED

NOTE:

- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

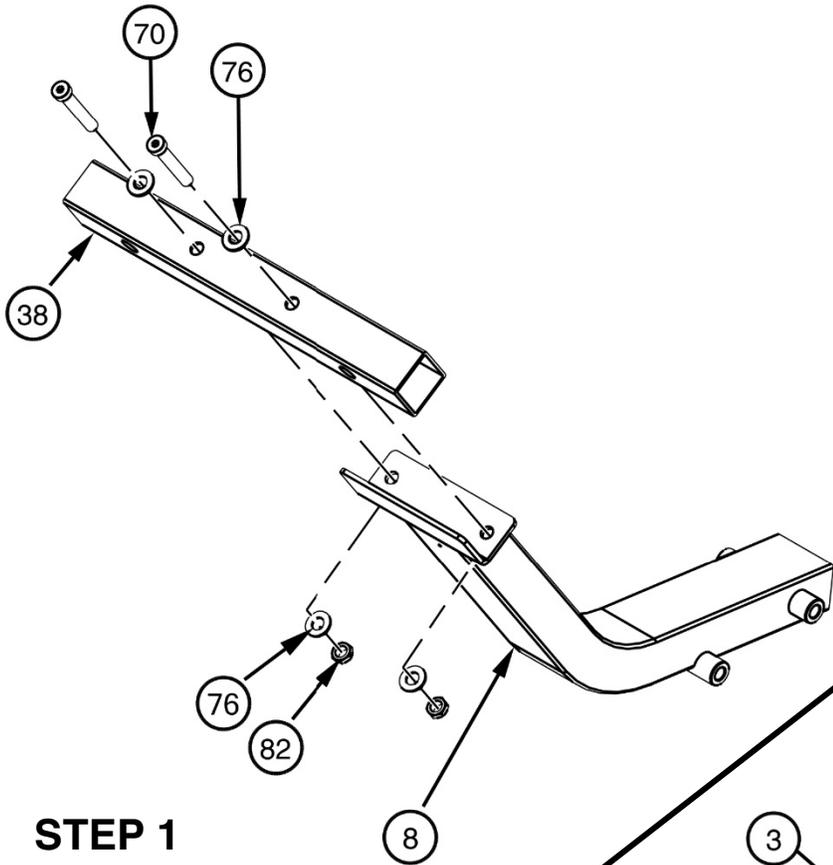

STEP 1

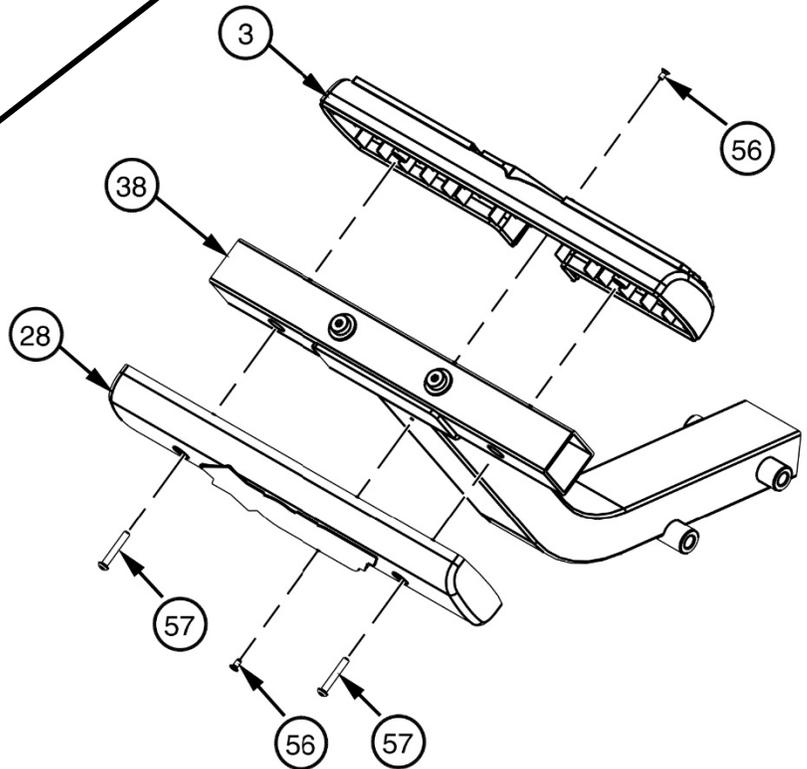


STEP 2

DECAL PLACEMENT

NOTE:

- SOME PARTS MAY HAVE BEEN REMOVED FOR CLARITY.

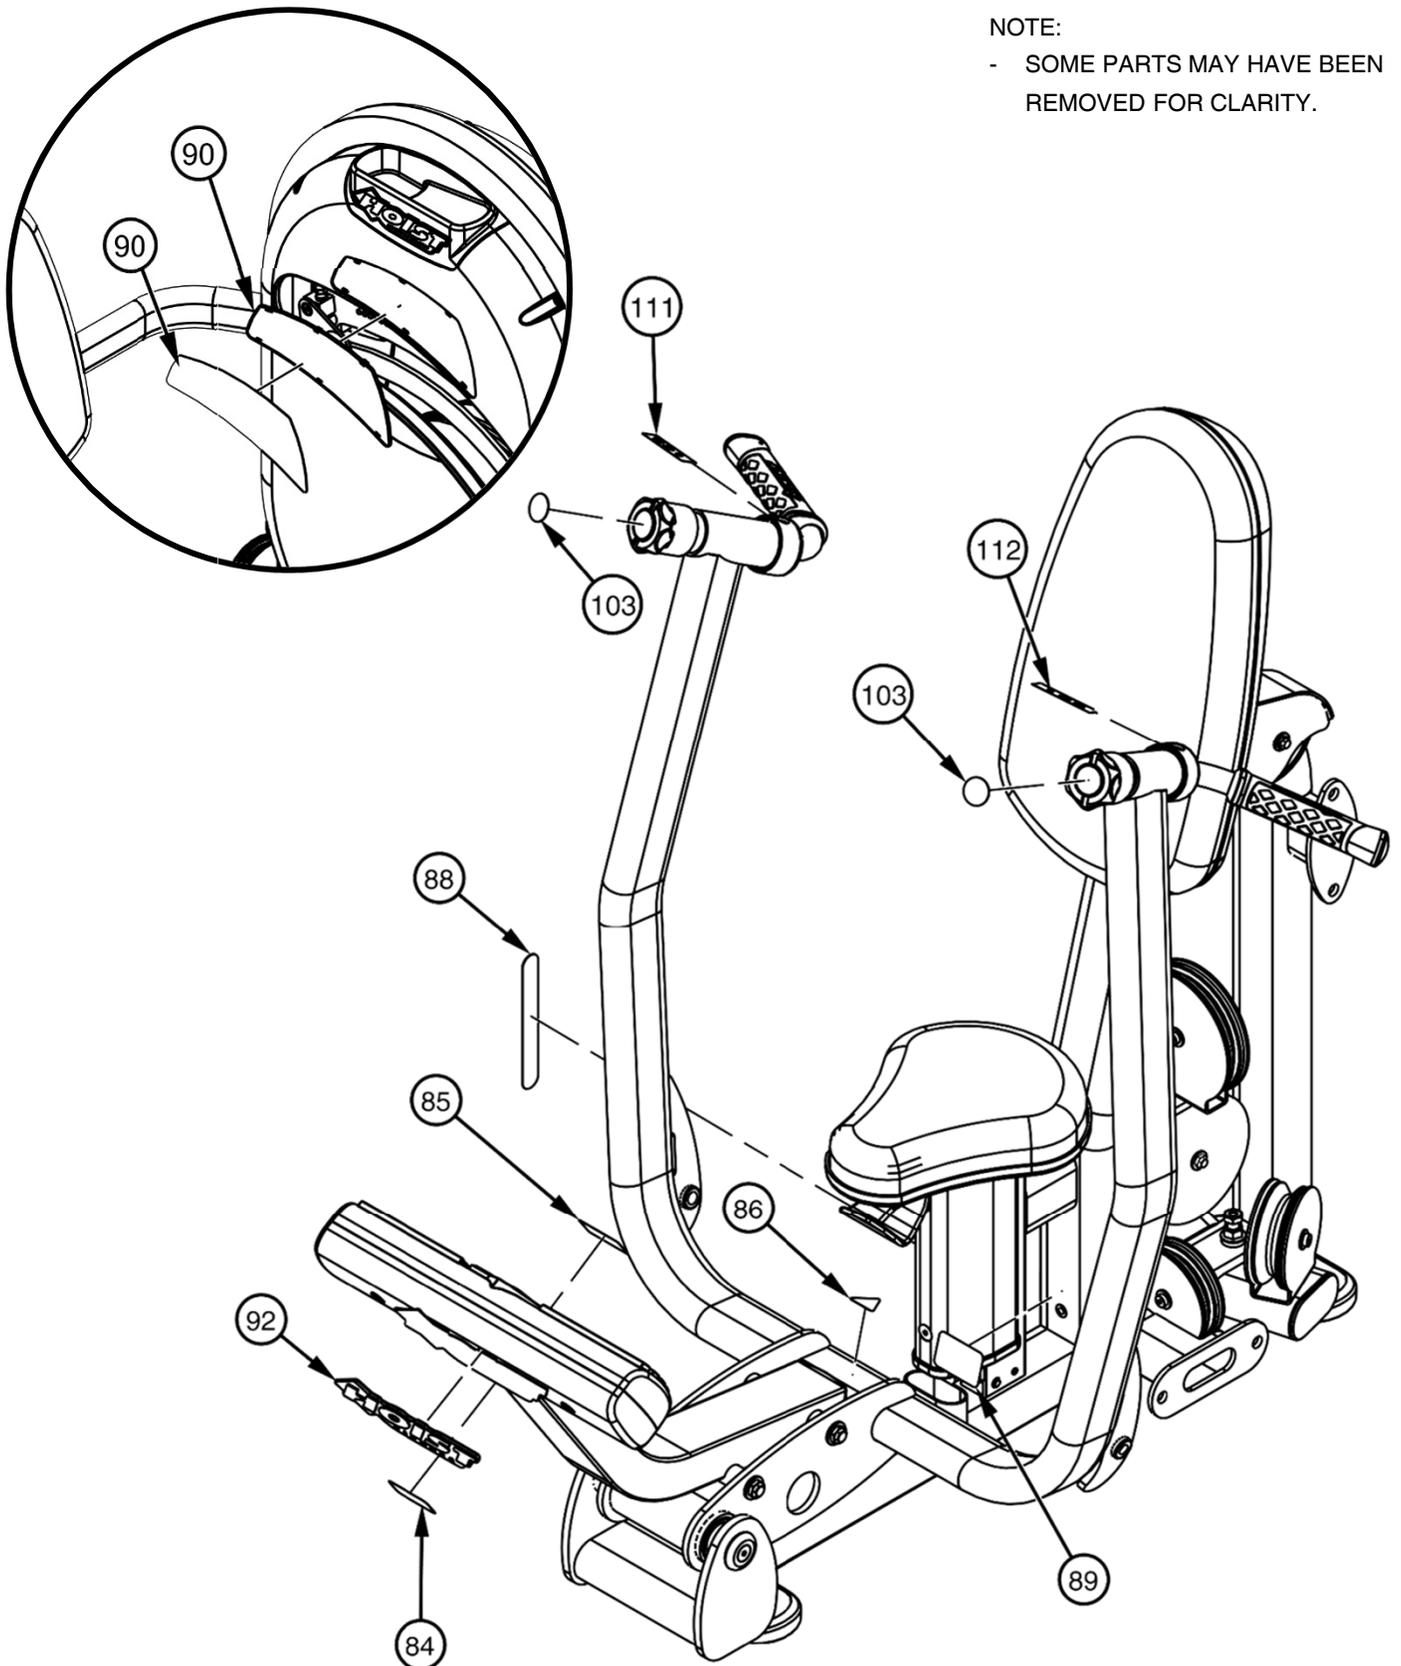

DECAL REFERENCE

- 1
- 2
- 3
- 4
- 5
- 6
- 7

CLUB LINE
Chest Press CL-3301

1. Select appropriate weight.
2. Adjust seat so handles are at chest level.
3. Grasp handles and push forward.
4. Use feet to activate assist if needed.

WARNING! ONLY ADJUST WEIGHT WHILE MACHINE IS AT REST

START FINISH

TO ADJUST WEIGHT SQUEEZE AND SLIDE

021-0013318
(Assembly P/N: 026-01X7327)



021-0004197



021-0004207



021-0004208



021-0003512



SERIAL # DECAL



021-0003503



021-0003093

021-0003911

OWNER'S MANUAL

PART LIST

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	010-01C0698	Ø.188" X Ø.25" CABLE ASSY. (CL-3301) 138 1/8" LG.	1
2	010-01C0801	Ø.188" X Ø.25" CABLE ASSY. (CL-3301) 146 3/4" LG.	1
3	026-01X2860	PLASTIC FOOT ASSIST - 'H'	1
4	026-01X6960	PULL PIN RETRACTOR FRAME	1
5	026-01X7439	PRESS ARM	1
6	026-01X7346	MAIN FRAME	1
7	026-01X7289	CROSSMEMBER, BASE	1
8	026-01X7347	LEVER ARM	1
9	026-01X7291	CROSSMEMBER, UPPER	1
10	026-01X7292	SEAT PAD MOUNT	1
11	026-01X7300	DBL. FLOATING PULLEY, 6"	1
12	022-01PD2099-A	SEAT PAD ASSEMBLY	1
13	022-01PD2114-2-M	MOLDED PAD ASSY.	1
16	026-01M3493	SEAT ADJUSTER SELECTOR PIN	1
17	026-01M3495	RETAINING PIN, 8MM OD, 1.03" LG	1
18	026-01M3496	RETAINING PIN, 8MM OD, 1.72" LG	1
19	026-01M3560	SHAFT, Ø .984" X 8.3595" LG.	1
20	026-01M3605	RETAINING CAP	2
23	026-01P4836	ADJUSTER STRIP	1
28	026-01PL2148	PLASTIC FOOT ASSIST - 'HOIST'	1
29	026-01PL2291	RUBBER STOP	1
30	026-01PL2566	50 X 100 OVAL DOMED END CAP	2
31	026-01PL2838	RUBBER FOOT PAD	2
32	026-01PL2848	END CAP, EXTRUDED HOUSING	1
33	026-01PL2850	ADJUSTER LEVER	1
34	026-01PL2936	BACK PAD PLASTIC BACKING	1

OWNER'S MANUAL

PART LIST CONTINUED

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
36	026-01PL2938-M	SLIDE GUIDE	2
37	026-01PL2939	POINTER	1
38	026-01T2968	FOOT ASSIST TUBE	1
39	020-0006009	GAS SPRING, 40 LBS, 8MM ENDS	1
40	020-0011026	COMPRESSION SPRING, .48" OD X1.31" LG, 12 COIL, .064" WIRE	1
41	026-01X3725	TIE-ROD END RIGHT HANDED ASSEMBLY	2
42	013-0001003	.50" CAP WASHER	2
43	014-0012014	BEARING: FLANGELESS - 25mm I.D.	2
45	014-0015046	RETAINING RING, E CLIP, FOR 7-9MM SHAFT	2
46	016-0201034	END CAP-R 2.00" X 3.00" (BLACK)	1
47	016-0003001	.50" CAP WASHER CAP	2
48	018-0002014	CABLE PULLEY: WIDE (BORED HUB) Ø4.50"	4
49	018-0001003	CABLE PULLEY: Ø4.50"	1
50	018-0002017	PULLEY 6.00" OD	2
52	011-0711002	SET SCREW: 5/16"- 18 X .25" LG. (Ni)	2
53	011-0701150	10-32 UNC X 1" LG, FHCS (Ni)	1
54	012-0609007	CLIP ON NUT, 10-32	1
55	011-0701112	#10-32UNC x .5 BHCS (Ni)	3
56	011-0708002	M5 X 20mm FHB (Ni)	2
57	011-0701078	1/4"-20UNC X 1.50" BHCS (Ni)	2
58	011-0116204	1/4"-20UNC X .75" LOW HEAD SHCS (Ni)	2
59	011-0701004	5/16"-18UNC X 1.25" BHCS (Ni) WITH DRI-LOC PATCH	3
60	011-0701011	5/16"-18UNC X 3.00" BHCS (Ni)	2
62	011-0702020	3/8"-16UNC X 1.00" FHCS (Ni) W/NYLON PATCH	6
64	011-0116142	3/8"-16UNC X 1.00" LOW HEAD SHCS (Ni)	2
65	011-0116145	3/8"-16UNC X 1.75" LOW HEAD SHCS (Ni)	3
66	011-0116147	3/8"-16UNC X 2.25" LOW HEAD SHCS (Ni)	2
67	011-0116170	3/8"-16UNC X 8.00" LOW HEAD SHCS (Ni)	1
68	011-0701048	1/2"-13UNC X 1.25" BHCS (Ni)	2
69	011-0116107	1/2"-13UNC X 1.00" LOW HEAD SHCS (Ni)	6
70	011-0116114	1/2"-13UNC X 2.75" LOW HEAD SHCS (Ni)	2

OWNER'S MANUAL

PART LIST CONTINUED

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
71	011-0116127	1/2"-13UNC X 6.00" LOW HEAD SHCS (Ni)	2
73	013-1002008	1/4" X 16mm SAE FLAT WASHER (Ni)	4
74	013-1002010	5/16" SAE FLAT WASHER (Ni)	5
75	013-1002007	3/8" X 22mm FLAT WASHER (Ni)	14
76	013-1002006	1/2" X 27mm SAE FLAT WASHER (Ni)	22
77	013-1010003	5/16" INTERNAL LOCK WASHER (Ni)	5
79	013-1006004	1/2" SPLIT LOCK WASHER (Ni)	4
80	012-0504004	1/4"-20 UNC THIN NYLOCK NUT (Ni)	2
81	012-0504005	3/8"-16 UNC THIN NYLOCK NUT (Ni)	6
82	012-0504002	1/2"-13 UNC THIN NYLOCK NUT (Ni)	10
83	012-0504011	12mm THICK NYLOCK NUT (Ni)	2
84	021-0003093	DECAL MOVING PARTS 1.20" X 2.38" (HOR)	1
85	021-0003503	DECAL "ASSIST BAR"	1
86	021-0003512	DECAL PINCH POINT 1.18" X 1.35" (TRIANGLE)	1
88	021-0003911	DECAL ADJUST 1-7 VERTICAL GREY BKGRND	1
89	SERIAL # DECAL	DECAL HOIST SERIAL # 1.63" X 2.63"	1
90	026-01X7327	CL-3301 EXERCISE PLACARD, MOUNTED	1
91	SSS-CAGE60	CL-S3 RESISTANCE SYSTEM (300 LB.)	1
92	021-0018022	HOIST EMBLEM + 2 SIDED TAPE	1
93	011-0712012	6MM O.D. X 30MM LG. SHOULDER BOLT	1
95	012-0503002	M5 X 0.8 FLANGED NYLOCK NUT	1
96	026-01M3721	FLANGED SPACER, ϕ ".1910 X .180 LG.	4
97	026-01X7438	INDEXING HANDLE	2
98	026-01PL2687	KNOB CAP	2
99	026-01PL2949	TURN KNOB	2
100	014-0024001	THRUST WASHER, 1"	2
101	014-0101005	BUSHING: OILITE FLANGED ϕ 1.34" O.D. X ϕ 1.00" I.D. X .79" LG.	2
102	020-0011006	SPRING	2
103	021-0004197	PUSH AND TURN	2
105	013-1010007	#10 INTERNAL LOCK WASHER (Ni)	2

OWNER'S MANUAL

PART LIST CONTINUED


NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
106	013-1003002	#10 FENDER WASHER (Ni)	2
107	026-01X7351	HOIST ERGO GRIP-01	2
108	RIVET-316	3/16" BLIND RIVET, 18-8 SS	4
109	90301A518	Internal Retaining Ring, 38mm	2
110	014-0104002	BEARING: SLEEVE, BRONZE 1.00 I.D. X 1.38 O.D. X 1.00" LG.	2
111	021-0004208	ADJUSTER HANDLE DECAL, RIGHT	1
112	021-0004207	ADJUSTER HANDLE DECAL, LEFT	1
113	026-01P7050	SEAT ADJUSTER LEFT PIVOT ARM	1
114	026-01P7051	SEAT ADJUSTER RIGHT PIVOT ARM	1
115	011-0712010	3/8" X .50" SHSS (Ni)	1
116	012-0504006	5/16"-18UNC THIN NYLOCK NUT (Ni)	1

OWNER'S MANUAL

ABBREVIATIONS

BZ = Black Zinc
Ni = Nickel Plated
SS = Stainless Steel
WZ = White Zinc

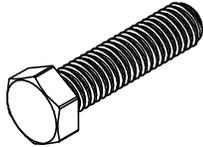


HHB = Hex Head Bolt



FHCS = Flat Head Cap Screw




BHCS = Button Head Cap Screw

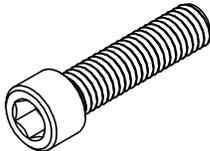

SHCS = Socket Head Cap Screw




Low Head SHCS = Low Head Socket
Head Cap Screw

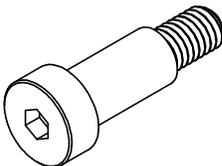


SHSS = Socket Head Shoulder Screw

OWNER'S MANUAL

 
BOLT SIZING CHART



 
1/4" HHB
RECOMMENDED
TORQUE RANGE:
6-8 ft-lbs



 5/16" HHB
RECOMMENDED
TORQUE RANGE:
14-17 ft-lbs




3/8" HHB
RECOMMENDED
TORQUE RANGE:
24-30 ft-lbs

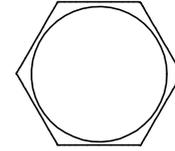


1/2" HHB
RECOMMENDED
TORQUE RANGE:
60-75 ft-lbs



 
1/4" BHCS
RECOMMENDED
TORQUE RANGE:
5-7 ft-lbs



5/16" BHCS
RECOMMENDED
TORQUE RANGE:
11-15 ft-lbs

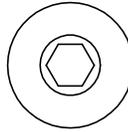

3/8" BHCS
RECOMMENDED
TORQUE RANGE:
19-26 ft-lbs

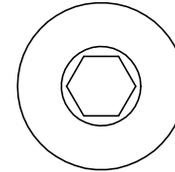


1/2" BHCS
RECOMMENDED
TORQUE RANGE:
47-65 ft-lbs




1/4" LOW HEAD SHCS
RECOMMENDED
TORQUE RANGE:
4-6 ft-lbs



 5/16" LOW HEAD SHCS
RECOMMENDED
TORQUE RANGE:
9-12 ft-lbs




3/8" LOW HEAD SHCS
RECOMMENDED
TORQUE RANGE:
18-23 ft-lbs

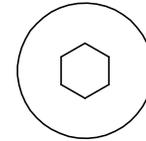


1/2" LOW HEAD SHCS
RECOMMENDED
TORQUE RANGE:
40-50 ft-lbs




 
1/4" SHCS
RECOMMENDED
TORQUE RANGE:
11-14 ft-lbs



 
5/16" SHCS
RECOMMENDED
TORQUE RANGE:
23-29 ft-lbs



 
3/8" SHCS
RECOMMENDED
TORQUE RANGE:
39-49 ft-lbs

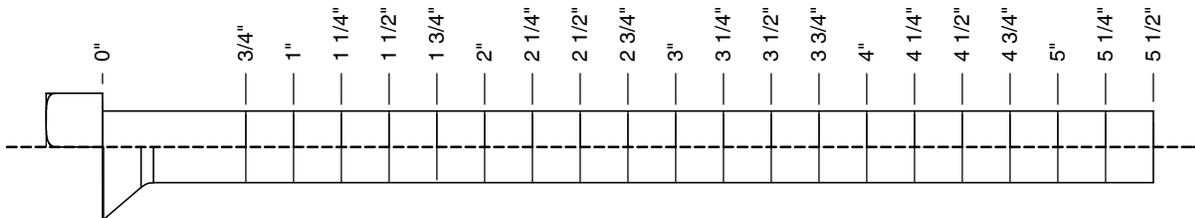


1/4" FHCS
RECOMMENDED
TORQUE RANGE:
5-7 ft-lbs

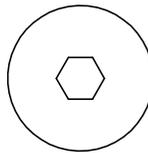

3/8" FHCS
RECOMMENDED
TORQUE RANGE:
19-26 ft-lbs

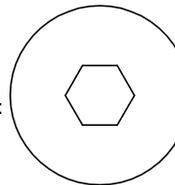


1/2" FHCS
RECOMMENDED
TORQUE RANGE:
47-65 ft-lbs

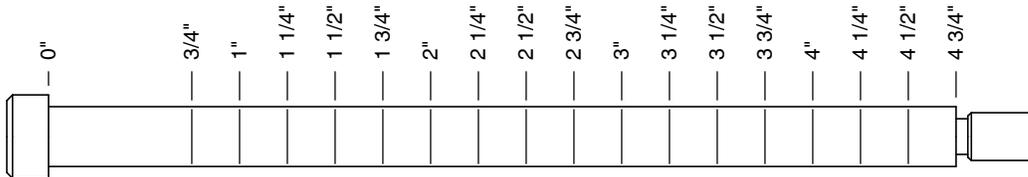

1/4" SHSS
RECOMMENDED
TORQUE RANGE:
3-4 ft-lbs



5/16" SHSS
RECOMMENDED
TORQUE RANGE:
8-10 ft-lbs

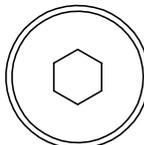


3/8" SHSS
RECOMMENDED
TORQUE RANGE:
17-22 ft-lbs


OWNER'S MANUAL

WASHER SIZING CHART

 
013-0002003
1/4"
FLAT WASHER
SMALL, SAE, 13mm




013-0102004
5/16"
FLAT WASHER
LARGE, USS, 22mm

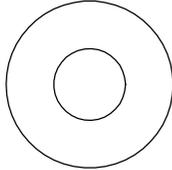


013-0002004
3/8"
FLAT WASHER
SMALL, SAE, 21mm

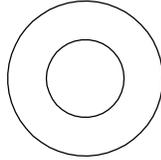


013-0402005
3/8"
FLAT WASHER
LARGE, USS, 25mm

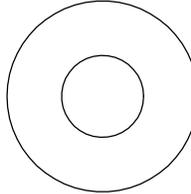


013-0102003
1/2"
FLAT WASHER
SMALL, SAE, 27mm

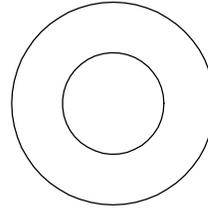


013-0102026
1/2"
FLAT WASHER
LARGE, USS, 34mm

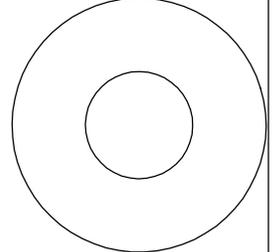

013-0102028
3/8"
CURVED WASHER

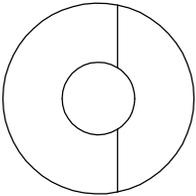


013-0402007
3/8"
FLAT WASHER
22mm O.D.

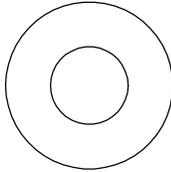


013-0102019
1/4"
LOCK WASHER





013-0102020
3/8"
LOCK WASHER

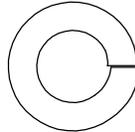


013-0102018
1/2"
LOCK WASHER

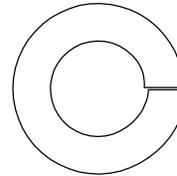


014-0018001
1/2" LONG
SPACER

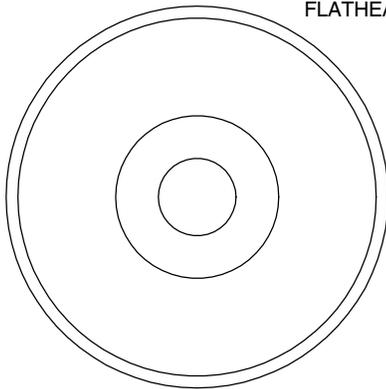 


026-01M0238
2" ALUMINUM
FLATHEAD CAP

 


016-0009003
1" SHIM WASHER

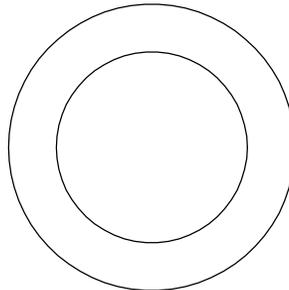


013-0003002
3/8" FENDER WASHER

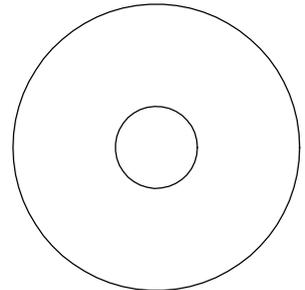


013-0003004
1 1/16"
FENDER WASHER

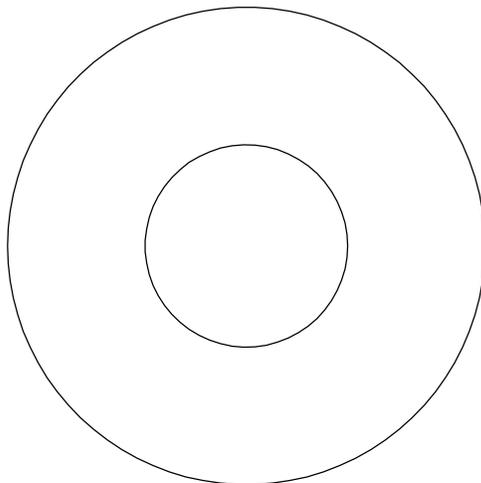

026-01PL151
PLASTIC 1 1/16"
FENDER WASHER

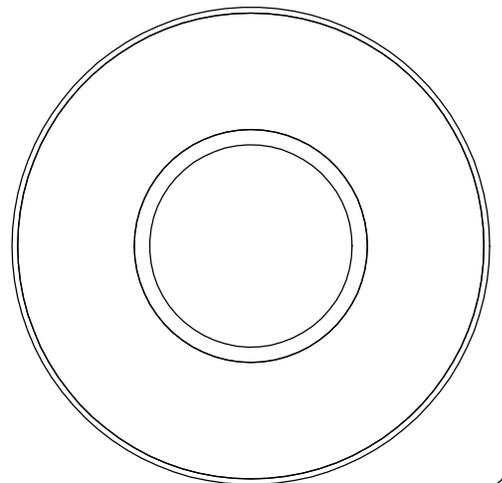


014-0018002
1" LONG
SPACER

 


OWNER'S MANUAL

WASHER SIZING CHART (CONTINUED)


026-01M0211
1/4" LONG
FLANGED SPACER

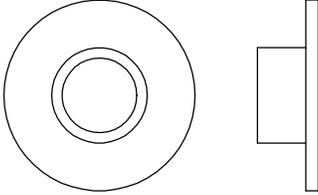


026-01M0198
1/2" LONG
FLANGED SPACER

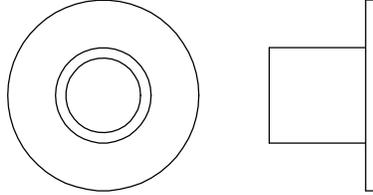


026-01M0760
1/2" LONG HEAVY
FLANGED SPACER

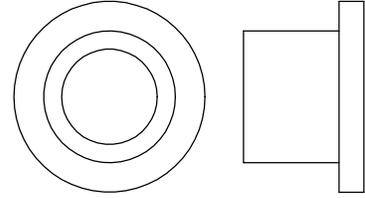


026-01M211T
1/4" LONG HEAVY
FLANGED SPACER

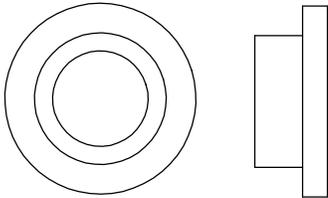


026-01M0532
11/16" LONG HEAVY
FLANGED SPACER

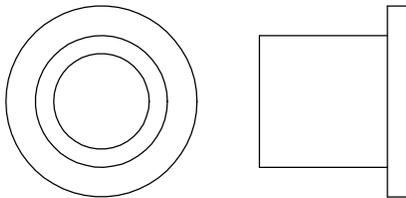


026-01M0551
1" LONG HEAVY
FLANGED SPACER

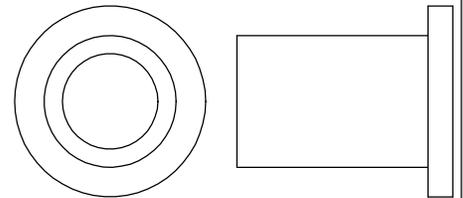


026-01M0788
.81" LONG HEAVY
FLANGED SPACER

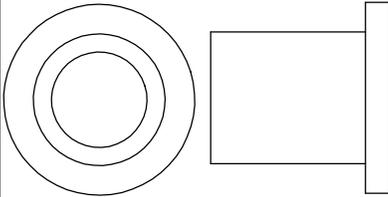


026-01M0780
.65" LONG HEAVY
FLANGED SPACER

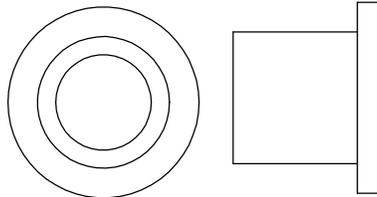


026-01M0761
1 11/16" LONG HEAVY
FLANGED SPACER

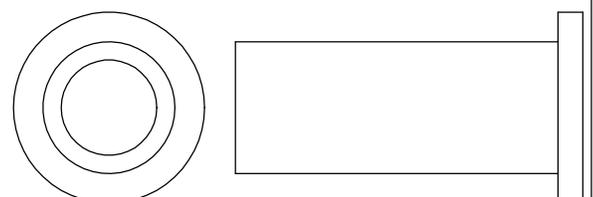


026-01M0789
.44" LONG HEAVY
FLANGED SPACER

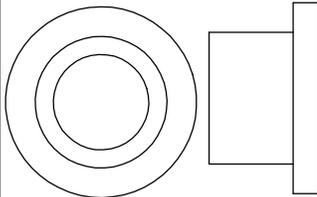


026-01M0762
1 1/2" LONG HEAVY
FLANGED SPACER

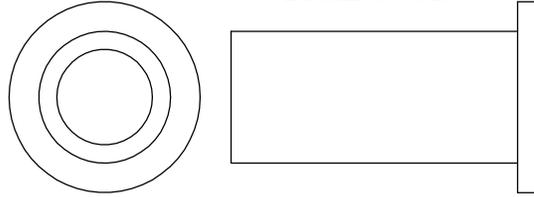


026-01M0768
1 1/4" LONG HEAVY
FLANGED SPACER

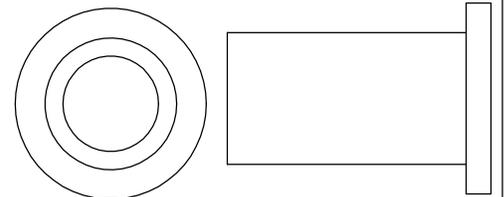


026-01M0600
.625" LONG
FLANGED SPACER

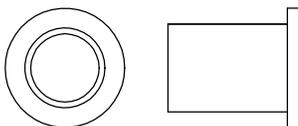

026-01M0240
1 3/8" ALUMINUM
FLATHEAD CAP

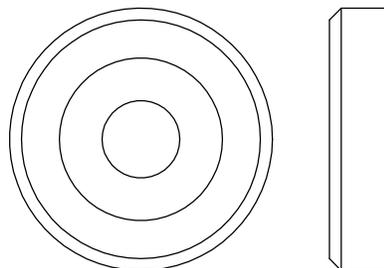

026-01M0239
1 5/8" ALUMINUM
FLATHEAD CAP

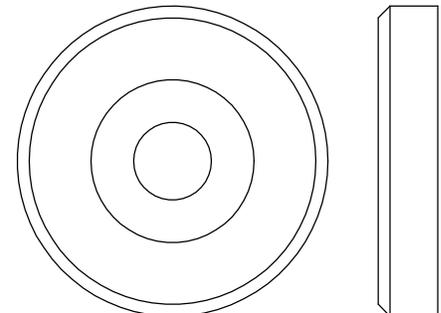

OWNER'S MANUAL

MAINTENANCE SCHEDULE

ROUTINE	COMMERCIAL / LIGHT COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY																	
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY																		
Clean; Upholstery	DAILY	WEEKLY																		
Inspect; Cables or Belts and their tension	DAILY	WEEKLY																		
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS																		
Inspect; All Decals	WEEKLY	3 MONTHS																		
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS																		
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS																		
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS																		
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS																		
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY																		
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY																		
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS																		

*Your equipment comes with a commercial maintenance decal.
For personal, in home use, please follow the home maintenance schedule listed above.*

Never use ammonia, acid-based, or petroleum-based solvents on any portion of the machine as it may damage the finish.

OWNER'S MANUAL

HOIST FITNESS SYSTEMS **GENERAL MAINTENANCE INFORMATION**

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- *Check all pieces for signs of visible wear or damage.
- *Check springs in snap hooks and pull-pins for proper tension and alignment.
- *If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- *To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- *Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- *Replace ripped or worn upholstery immediately.
- *Keep sharp or pointed objects clear of all upholstery.

Decals:

- *Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- *Inspect all nuts and bolts for any loosening and tighten if needed.
- *Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

- *These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- *Hoist uses only high quality belt, and mil-spec cables.
- *Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- *While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- *Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- *Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- *Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- *Wipe down adjusting tubes with a dust free rag before applying lubricant.
- *Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

- *Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

OWNER'S MANUAL

WEIGHT TRAINING TIPS

Use this manual to guide you through the basic exercises you can perform on your CL-3301 HOIST® Fitness System. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your CL-3301 HOIST® Fitness System, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.


Enjoy your CL-3301 HOIST® Fitness System!

OWNER'S MANUAL

WEIGHT RATIOS

WEIGHT SETTING (LBS)	VERTICAL (80%)	HORIZONTAL (68%)
20	16	13.6
25	20	17
30	24	20.4
35	28	23.8
40	32	27.2
45	36	30.6
50	40	34
55	44	37.4
60	48	40.8
65	52	44.2
70	56	47.6
75	60	51
80	64	54.4
85	68	57.8
90	72	61.2
95	76	64.6
100	80	68
105	84	71.4
110	88	74.8
115	92	78.2
120	96	81.6
125	100	85
130	104	88.4
135	108	91.8
140	112	95.2
145	116	98.6
150	120	102
155	124	105.4
160	128	108.8
165	132	112.2
170	136	115.6
175	140	119
180	144	122.4
185	148	125.8
190	152	129.2
195	156	132.6
200	160	136
205	164	139.4
210	168	142.8
215	172	146.2
220	176	149.6
225	180	153
230	184	156.4
235	188	159.8
240	192	163.2
245	196	166.6
250	200	170

255	204	173.4
260	208	176.8
265	212	180.2
270	216	183.6
275	220	187
280	224	190.4
285	228	193.8
290	232	197.2
295	236	200.6
300	240	204

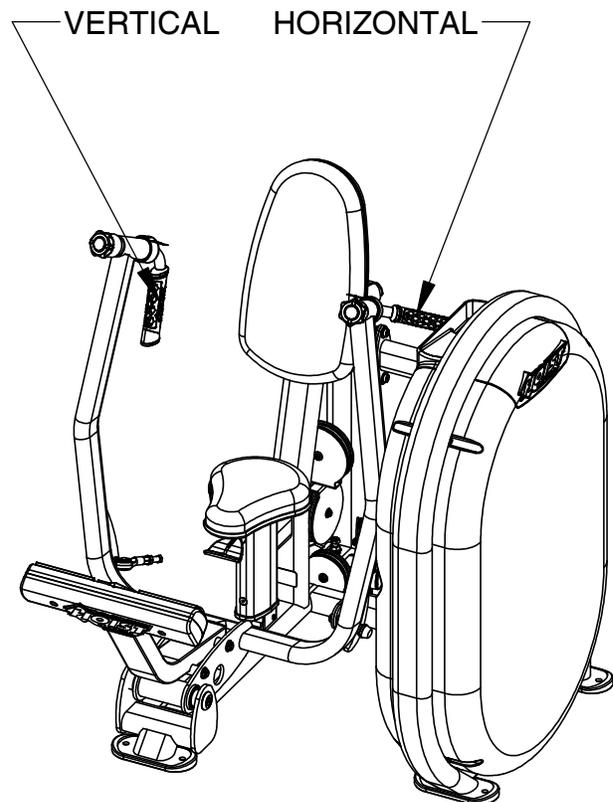

The above chart shows the standard weight stack for this unit. The weights listed are approximate. HOIST reserves the right to modify the machine without prior notice.

OWNER'S MANUAL

HOIST FITNESS SYSTEMS **LIMITED LIFETIME WARRANTY**

Hoist Fitness Systems warrants this product to the **original purchaser** to be free from defects in workmanship and/or materials under normal use or service. If at any time a component part is defective, Hoist Fitness Systems shall repair or replace it (at Hoist Fitness Systems option) within a reasonable period of time. This warranty does not cover costs of removal, transportation or reinstallation. This warranty shall not apply if the defect was caused by misuse, neglect or normal wear and tear.

WARRANTY CLAIMS. All claims require: Model number, Serial number, Date of installation, and any information supporting the existence of the alleged defect.

To complete Warranty Registration visit:
www.HOISTFITNESS.com
and click on the Warranty Registration link

Starting from the original date of purchase, this warranty covers the following:

COMMERCIAL USE: All malfunctions of upholstery, grips, and coatings that occur up to one year; all malfunctions of belts or cables up to one year; all malfunctions of pulleys, bearings, or bushings that occur up to three years. The frame and body components are warranted for ten years, with structural moving parts warranted for five years.

LIGHT COMMERCIAL USE: All malfunctions of upholstery, grips, and coatings that occur up to one year; all malfunctions of belts or cables up to one year; all malfunctions of pulleys, bearings, or bushings that occur up to three years. The frame and body components are warranted for ten years, with structural moving parts warranted for five years.

HOME USE: All malfunctions of grips, paint, and chrome that occur up to ten years; all malfunctions of electronic components, belts, cables, or upholstery that occur up to ten years; all malfunctions of pulleys, bearings, or bushings that occur up to ten years. The frame and all welded components are warranted for the life of the product.

PLEASE NOTE THAT NOT ALL HOIST PRODUCTS ARE MADE FOR COMMERCIAL USE. Refer to the instructions page of your owner's manual or consult with your fitness product dealer to establish if a product is made for commercial use or not. Using a non-commercial product in a commercial setting can result in serious injury or death! Hoist Fitness Systems sole responsibility shall be to repair or replace the component within the terms stated above. Hoist Fitness Systems shall not be liable for any loss or damage of any kind including any incidental or consequential damages resulting, directly or indirectly from any warranty expressed or implied or any other failure of this product.

LIGHT COMMERCIAL USE: Our Light Commercial warranty applies to facilities that **DO NOT** charge monthly membership dues and where the equipment would be used by **no more than 50** people per day. Examples of Light Commercial facilities include hotels, apartment complexes, personal training studios, fire stations, police stations, etc., that meet the criteria stated above.

WHAT IS NOT COVERED BY THIS WARRANTY: Hoist's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additions below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

NO CONSEQUENTIAL DAMAGES: Hoist is not responsible for economic loss; profit loss; or special, indirect, or consequential damages.

WARRANTY IS NOT TRANSFERABLE: This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, expressed, implied or statutory, except the one (1) and five (5) year warranties described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof.

TRANSPORTATION COSTS: Hoist will accept parts covered under this warranty freight collect, provided that shipment has received prior approval. Hoist is not responsible for any other transportation costs but will ship freight collect parts either repaired or replaced under these warranties.

Hoist Fitness Systems
11900 Community Rd.
Poway, CA. 92064
(800)548-5438

PLEASE KEEP THIS FOR YOUR RECORDS