

OZZ HP P20''

88223 (black)

88224 (white)

Before installation

1. Check the local laws and regulations and the region your vehicle may travel to for Auxiliary light before installation, ensure they are compliance.
2. Read all installation instructions.
3. Make sure the dimension and weight of the lamps and device are matched to your vehicle. See figure 01.
4. Slight moisture inside may occur, it will be removed out from the vent after 2-4 time working.
5. Working Voltage: 9-36V DC.

Mounting

1. Drill 8.5 mm holes on the surface where you intend to install the light for screw placement.
2. Use the bolt to fasten the lamp, add the locking washer, and tighten the bolt securely.
3. Connect black cable to ground (-).
4. Connect red cable to positive (+).

Wiring connections & Functions

Black: Ground, -
Red: Flood light, +
White: White position light, +
Yellow: Amber position light, +
Green: E-marked mode, +

Figure 01

