


MANUAL

SIBERIA SKYLORD 7"

(PIN1)RED: + High-beam
(PIN2)BLACK: (-) Negative
(PIN3)WHITE: +White position light
(PIN4)YELLOW: +Amber position light
* DT- 4PIN connection

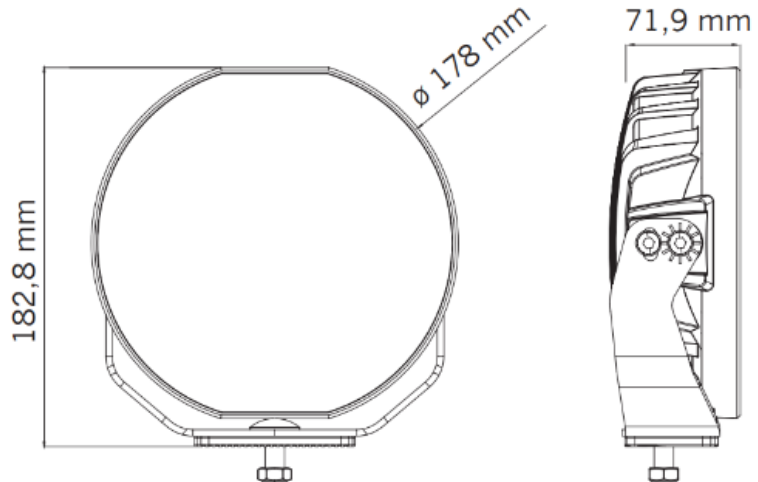

Default Setting: E-mode

Always start from the "off" state, meaning the light must have been turned off for at least five seconds to discharge any internal power.

To switch to Xperience mode:

1. Turn off the high beam for 5 seconds.
2. Turn the high beam on and let it run for 2 seconds.
3. Then, quickly flash the high beam 3 times within 5 seconds.

Switching back to E-mode:

1. Turn off the high beam for 5 seconds.
2. Turn the high beam on and let it run for 2 seconds.
3. Then, quickly flash the high beam 3 times within 5 seconds.

To Reset: (Default mode)


Regardless of the actual mode, if you flashes light rapidly 10 times within 20 seconds, it will immediately reset to E-mode. This occurs even if the normal mode change sequence isn't complete. This feature is designed for situations where multiple lights have inconsistent power settings and need to be quickly unified to same setting. *This mode from batch nr 48495 and production after 2025-07-20, old batch doesnt have reset mode. New batch will have new manual with reset mode.

Troubleshooting:

1. Ensure the car's engine is running and the battery is in good condition when switching modes.
2. When connecting two or more lights, use a suitable wire (not too long or thick) and connect them all together in one wire. Check the voltage between the power supply and light wires to ensure it is above 10V.
3. For changing modes, use a proper switch or method and ensure it doesn't introduce any extra delay.
4. Avoid excessively fast switching. Ensure each flash takes between 0.8 and 2 seconds, with 3 continuous flashes.
5. If you are experiencing issues with changing modes, ensure the position light is off while turning on the high beam.

strands®

-lighting division

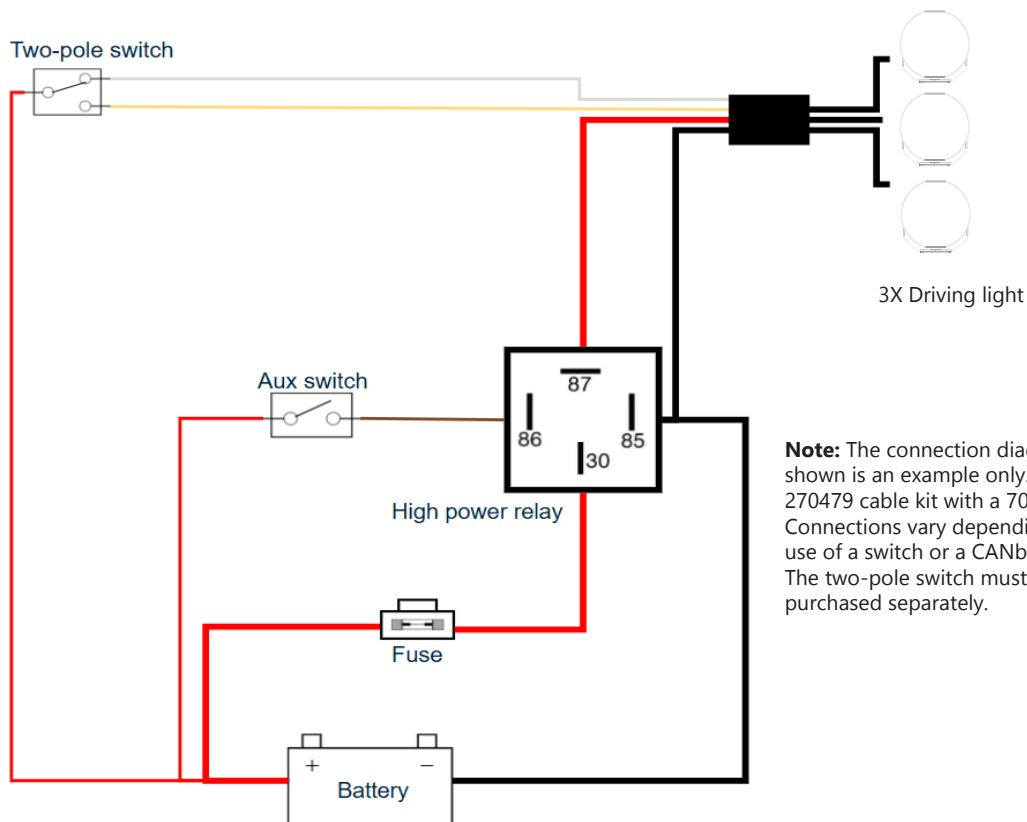

READ THIS BEFORE INSTALLATION

READ ALL INSTRUCTIONS AND STUDY DIAGRAMS BEFORE INSTALLING YOUR NEW LIGHTS! FOR THE UPDATED MANUAL, PLEASE ACTIVELY CHECK THE STRANDS WEBSITE FOR THE LATEST VERSION UNDER THE SPECIFIC PART NUMBER.

LEGAL MOUNTING

Check with state or local authorities for laws governing usage and proper mounting of your new lights.

TAKE CARE OF YOUR PRODUCT

Keep the product clean. Dirt on the lens and heat-sink may shorten the products lifetime.

We recommend using lukewarm water and alkaline degreasing.

Follow the degreasing instructions carefully and rinse off gently with cold or lukewarm water on low pressure.

WARNING!

Strong chemicals should not be used on the product. If you accidentally get strong chemicals on the product, rinse off immediately, use plenty of water so that no chemicals remain in any joint. If the product is damaged or has inappropriate paint on the housing due to user actions, the warranty is void.

Some chemicals have a small amount of solvent in them, this can dissolve sealing adhesives and compromise the product's waterproofness.

Some chemicals pull out liquid from plastic and rubber-based components, which makes the plastic or rubber brittle and bursts more easily.

Be careful not to use high water pressure close up on the product.

If you use high water pressure at short distances, most products find it difficult to close out the water.

INSTALLATION

If there is a contact/connector on the product, it should not be cutted. If the connector is cut, the warranty is not valid.

If the product has loose cable and no connector. If the cable is shorter than 50 cm, the cable must not be cutted. If the cable is cut, the warranty is not valid.

If the cable is longer than 50 cm, it is ok to shorten the cable, but not shorter than 50 cm.

If the cable is cut shorter than 50 cm, the warranty is not valid.

Tighten screws and bolts so that they do not loosen or chafe.

Do not tighten screws so hard that the protective bearings on the product breaks.

WARNING!

Do not use higher volts than the product description states.

This light becomes hot under continuous use. Don't remove or touch the casing for at least 30 minutes after turning the lamp off.

Part no. 270947

Contact us if you need support: support@strands.se or +46(0)320-450450

(Version 1) 2/2



www.strands.se
www.strandseurope.com