


RPL-5501-A PLATE-LOADED SHOULDER PRESS

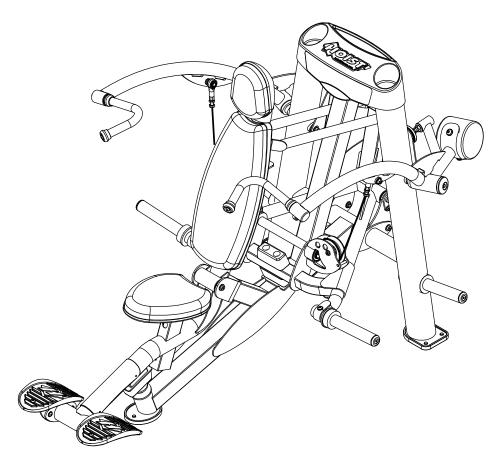

WARNING!

TO PREVENT POSSIBLE TIPPING, BOLT THIS UNIT TO THE EXERCISE FLOOR USING MINIMUM 4 -1/2" LENGTH BOLTS. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY OR DEATH.

Note: Both Serial Number and Model Number are Required when Ordering Parts RECORD SERIAL NUMBER HERE <u>Customer Service</u>

(800) 548-5438

(858) 578-7676

Fax

(858) 578-9558

B13

MACHINE CODE

www.facebook.com/hoistfitness

CONTENTS

INSTRUCTIONS	02
FRAME ASSEMBLY	04
MACHINE ADJUSTMENT	27
PRE-ASSEMBLY	29
DECAL PLACEMENT	31
DECAL REFERENCE	32
PART LIST	33
ABBREVIATIONS	37
BOLT SIZING CHART	38
WASHER SIZING CHART	39
MAINTENANCE SCHEDULE	41
GENERAL MAINTENANCE INFORMATION	42
WEIGHT TRAINING TIPS	43
EXERCISE LOG	44
LIMITED WARRANTY	45

INSTRUCTIONS

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only HOIST replacement parts when servicing. Failure to do so will void your warranty and could result in personal injury.

HOIST equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized HOIST dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

TOOLS REQUIRED

Ratchet Wrench

1/2", 9/16" and 3/4" Sockets

Adjustable Wrench

Rubber Mallet


Tape Measure


Level


Hex Key Wrench Set


Two People


THIS PAGE WAS INTENTIONALLY LEFT BLANK

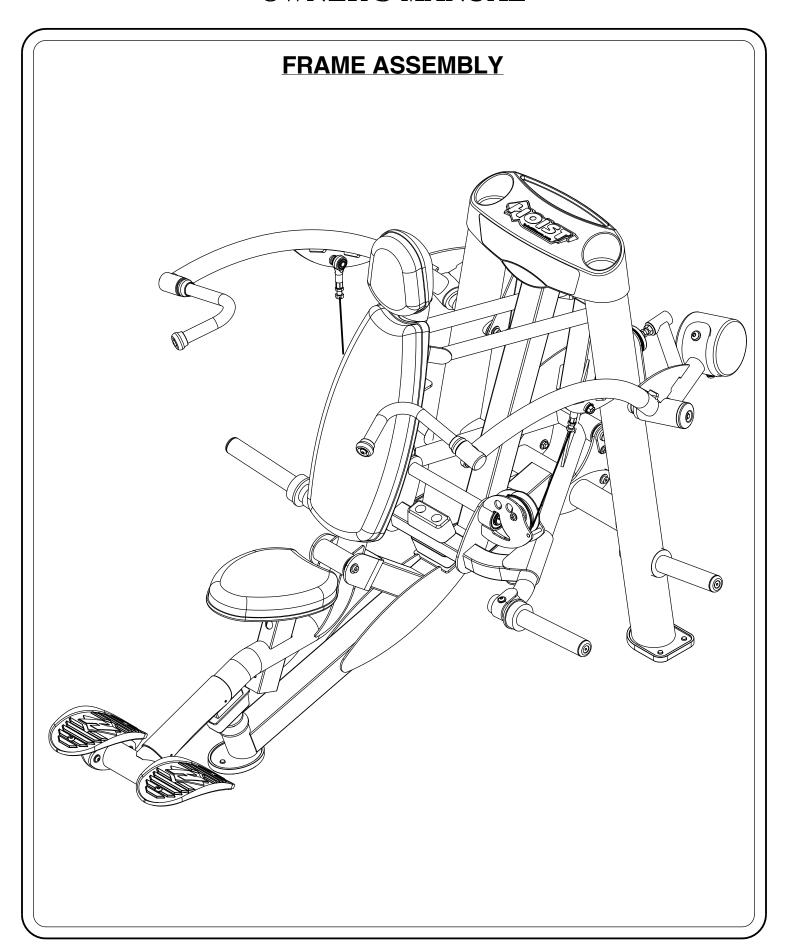


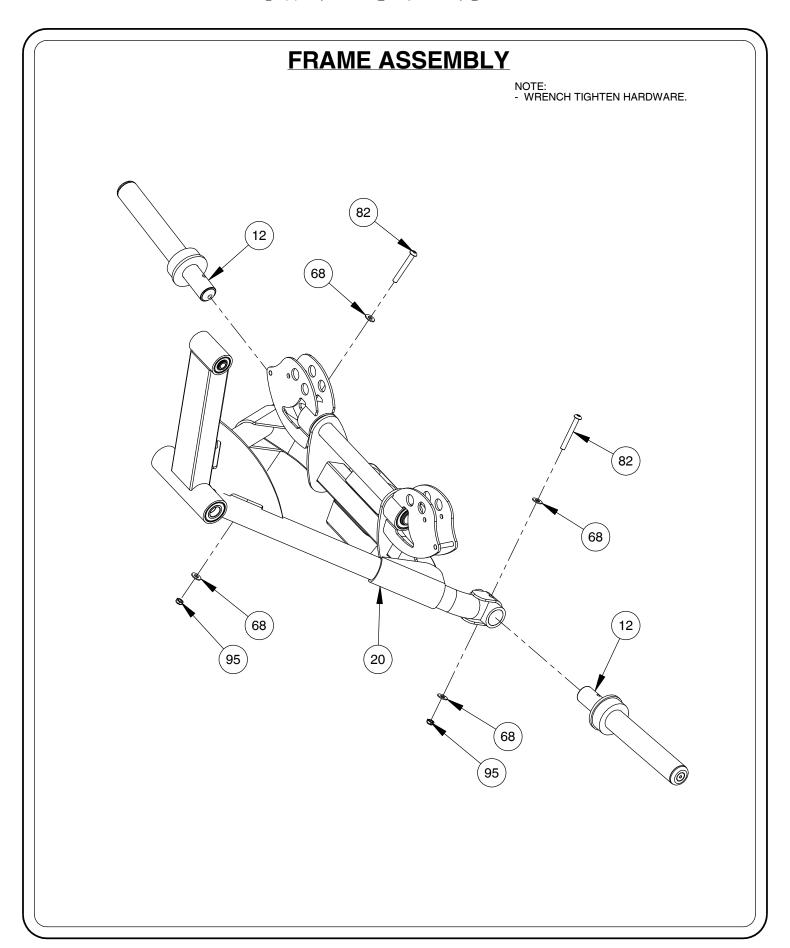


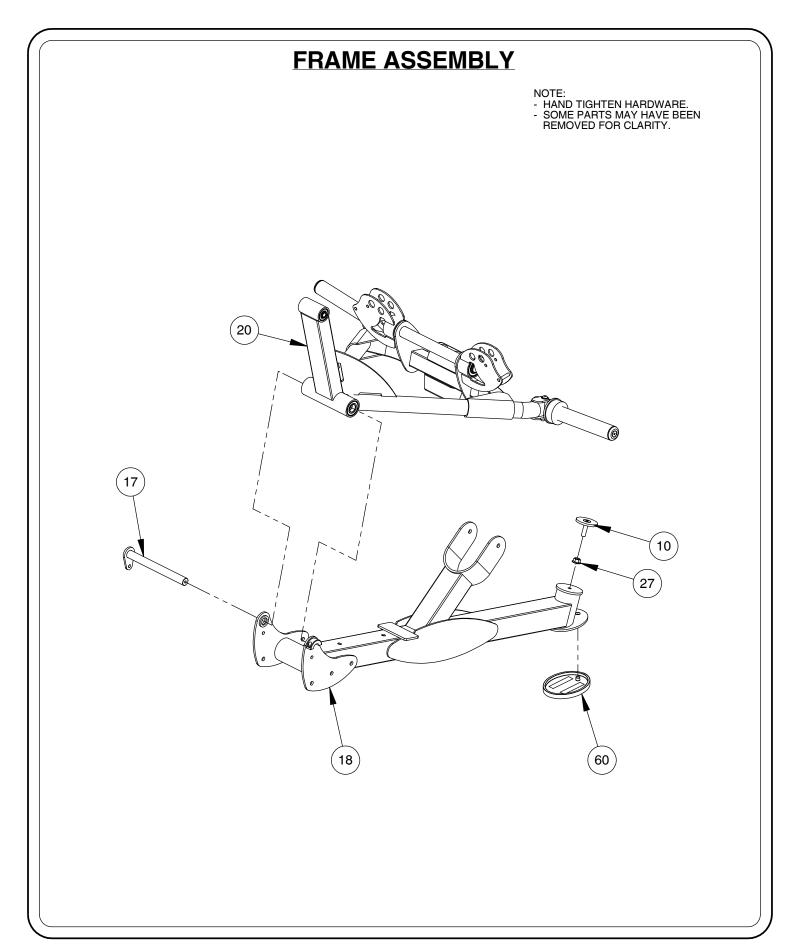


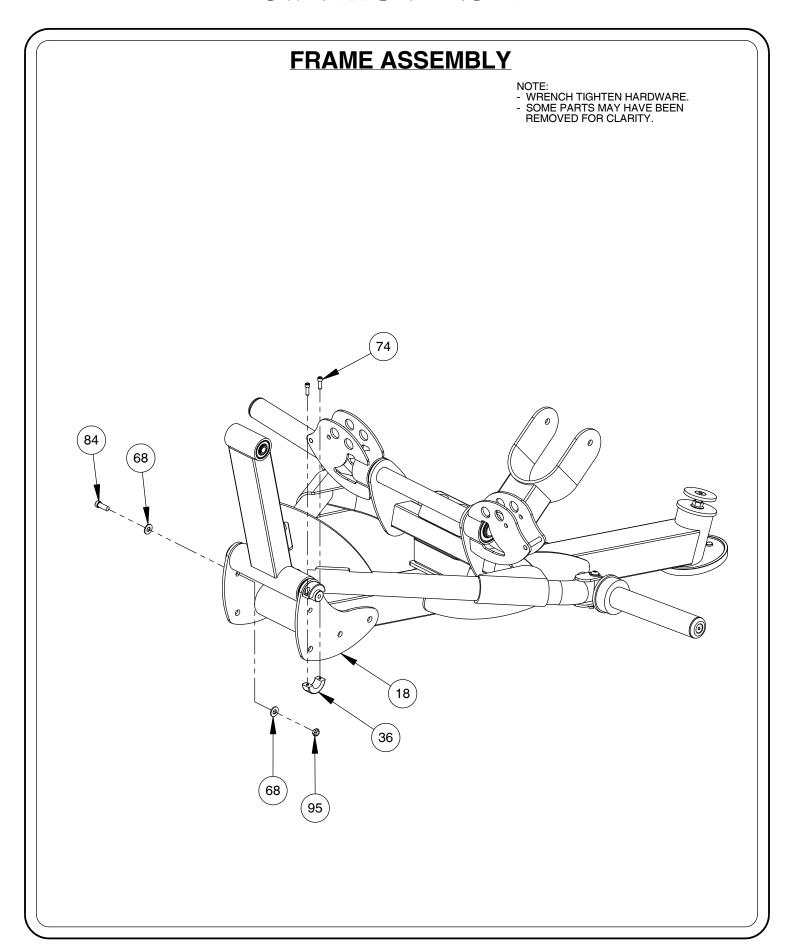


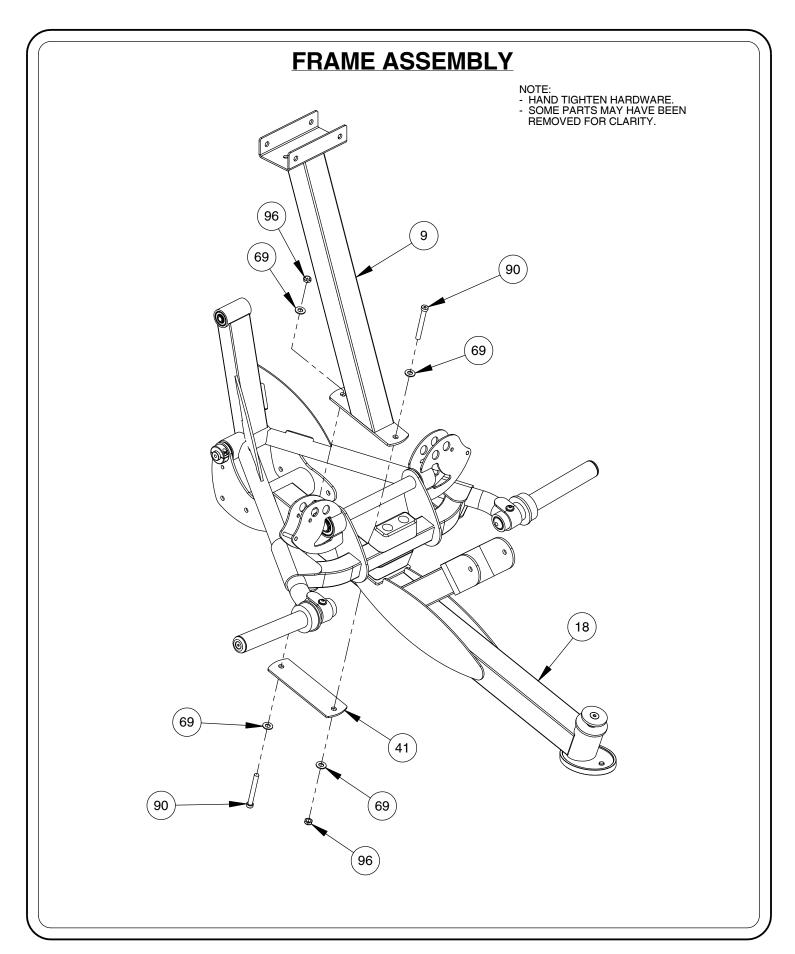


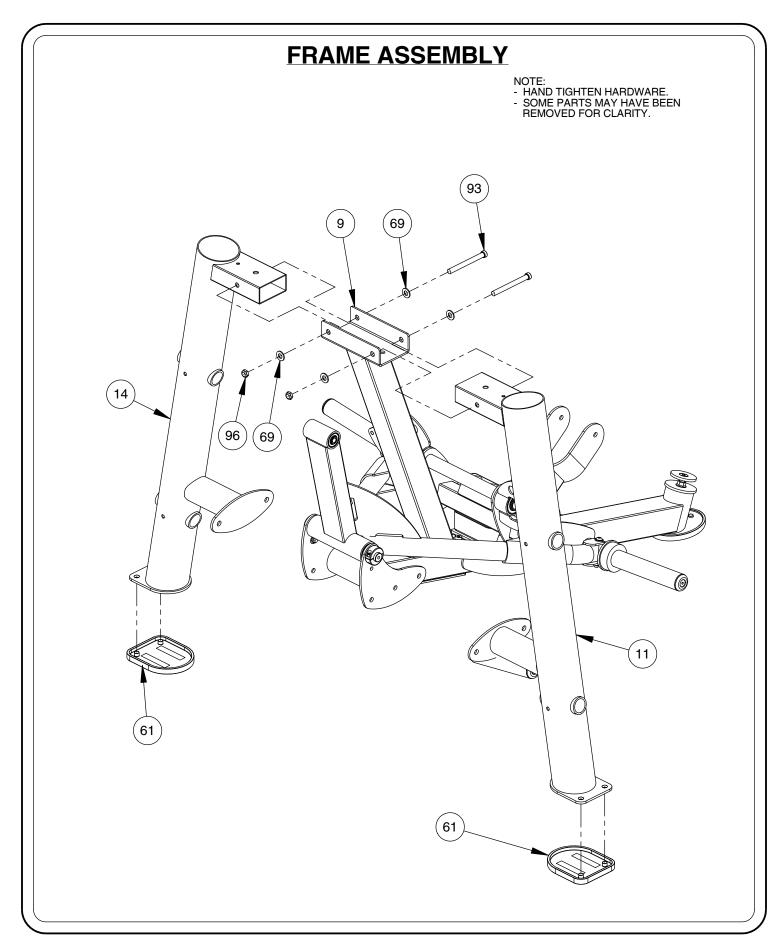


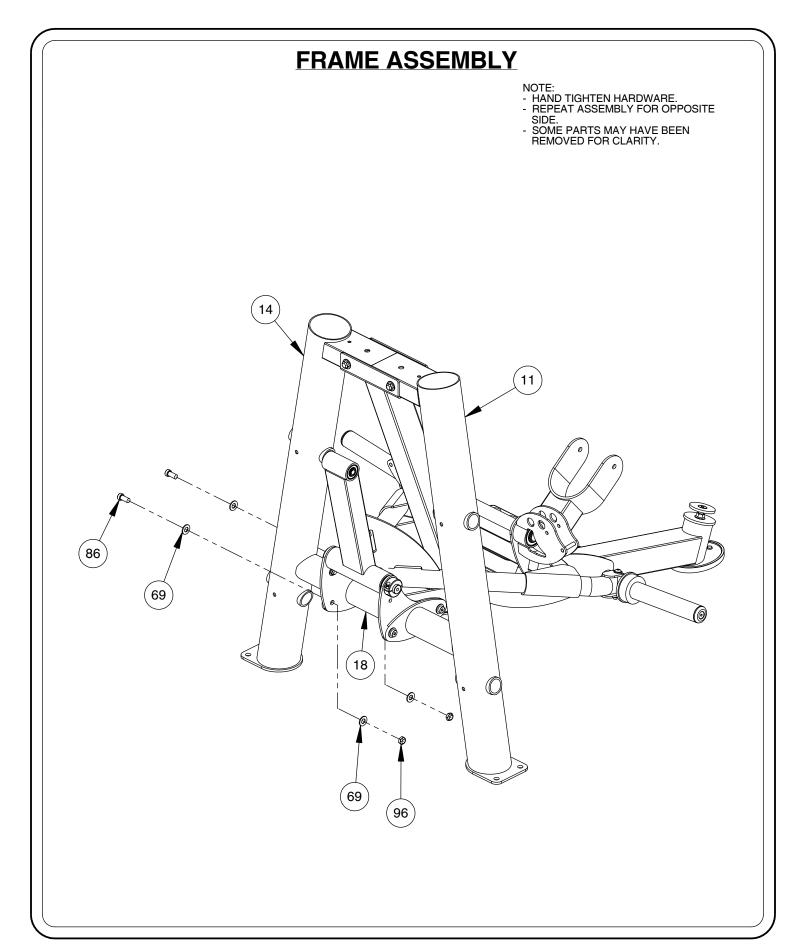


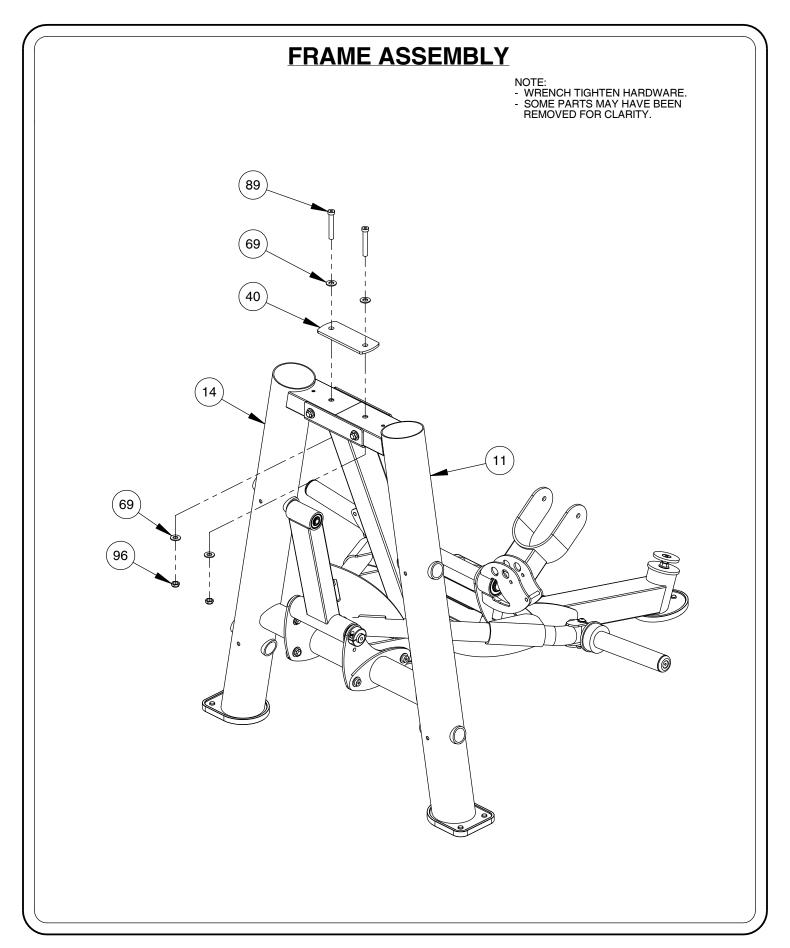


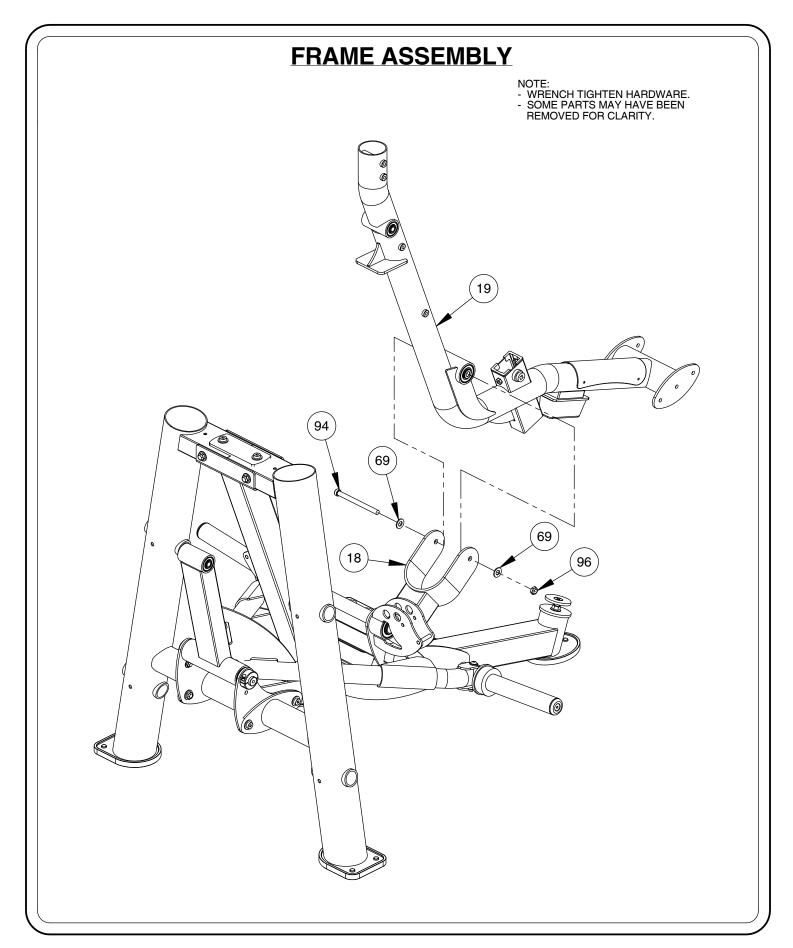


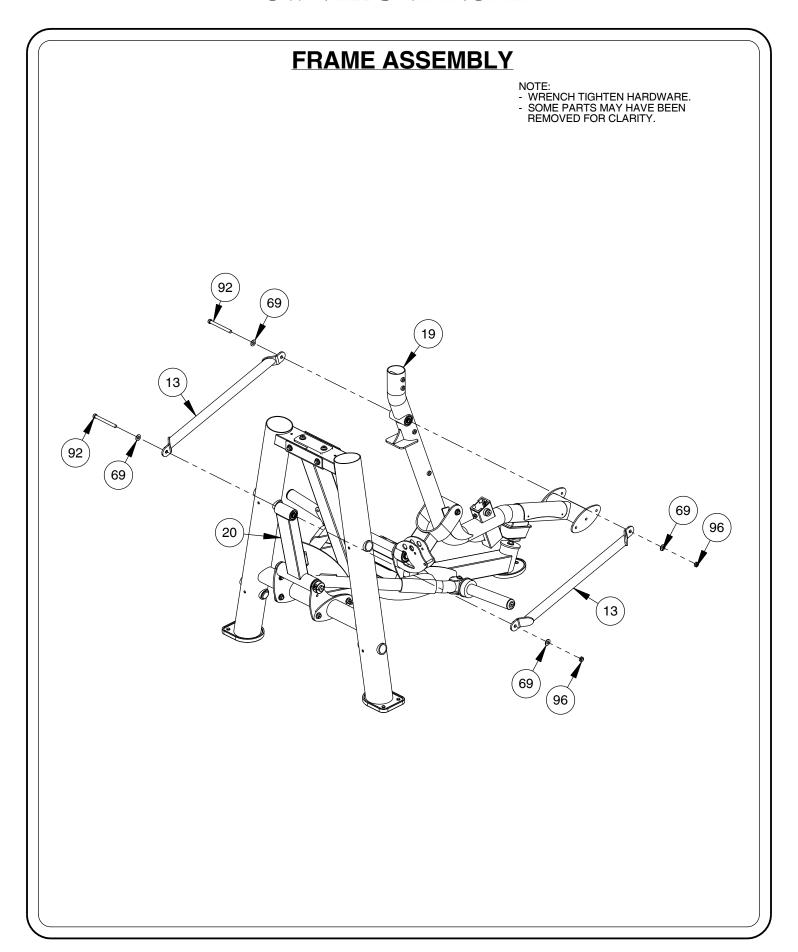


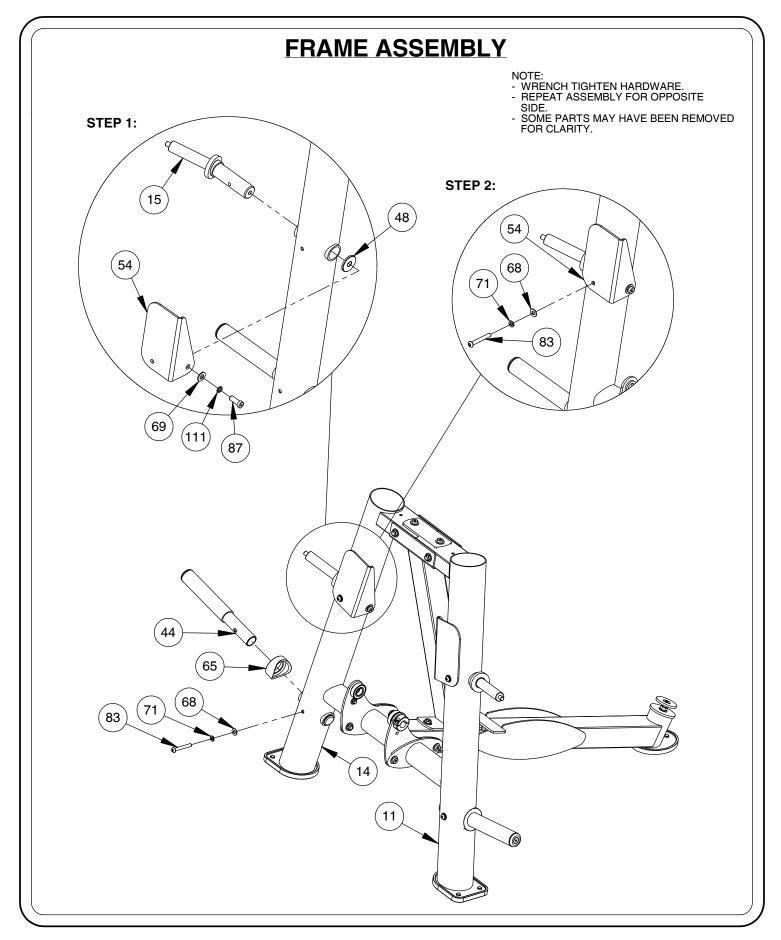


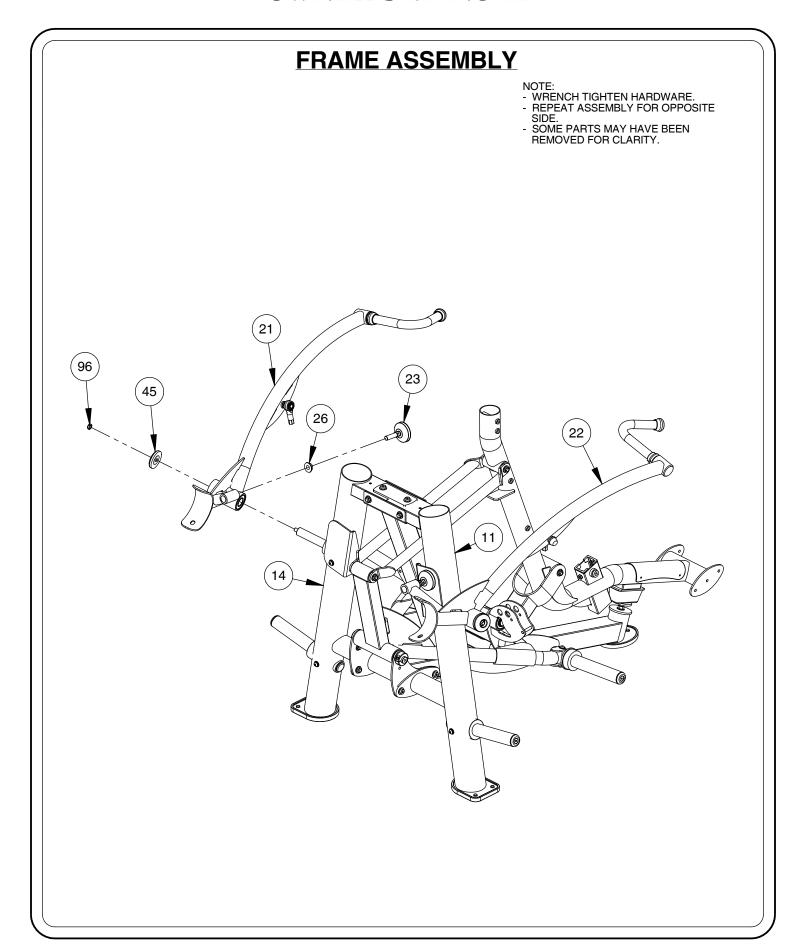


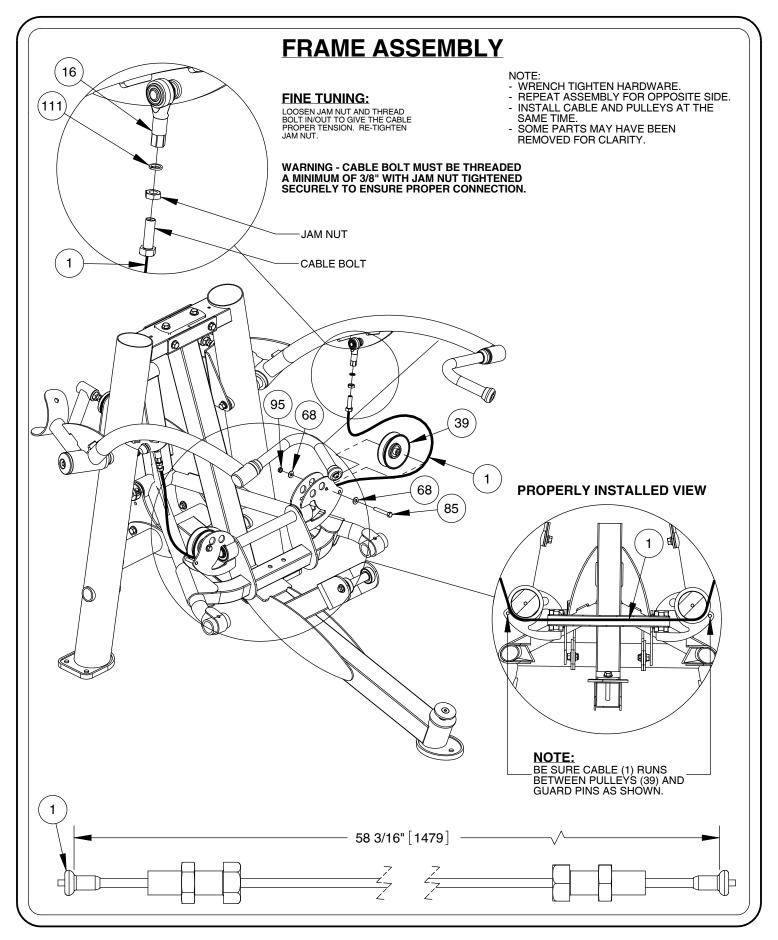


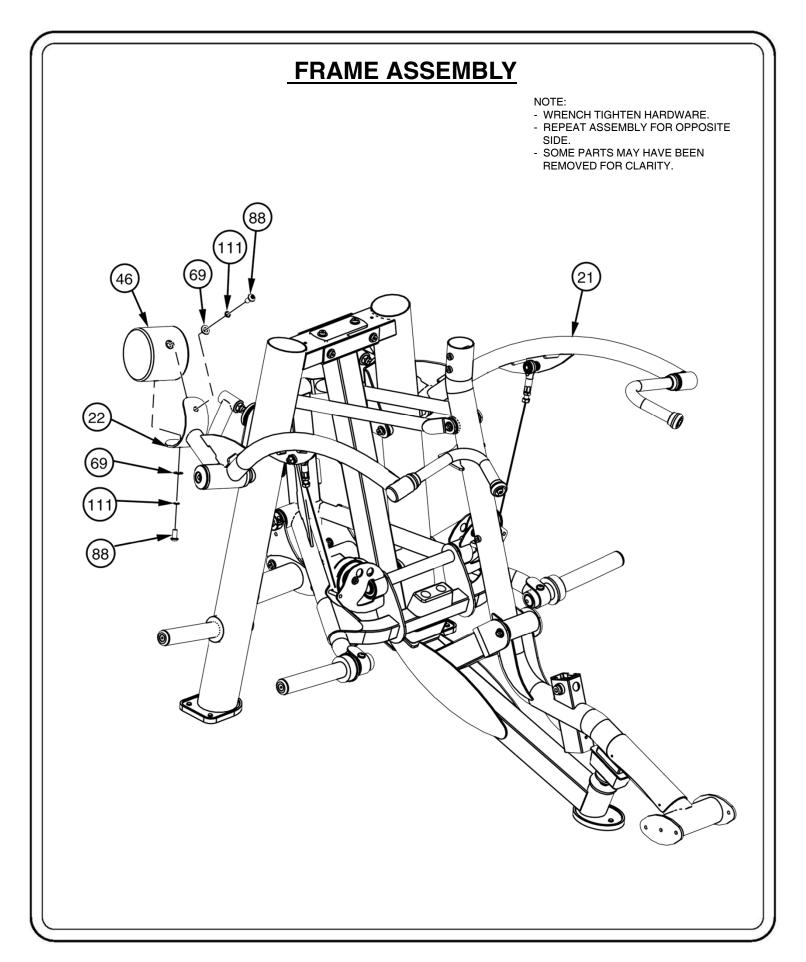


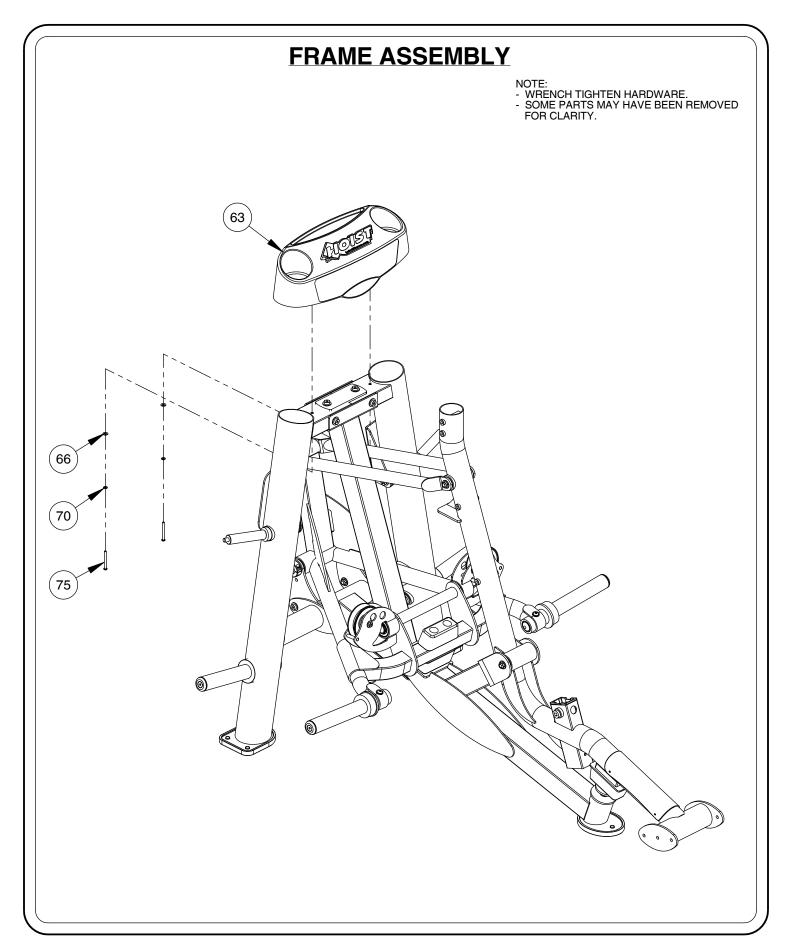


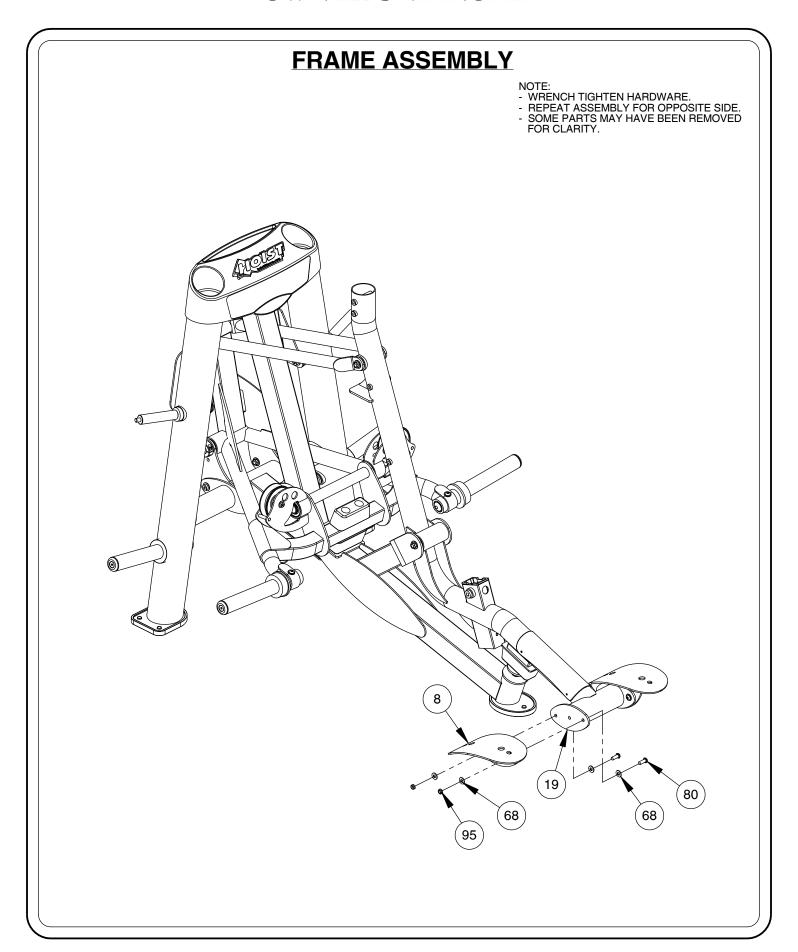


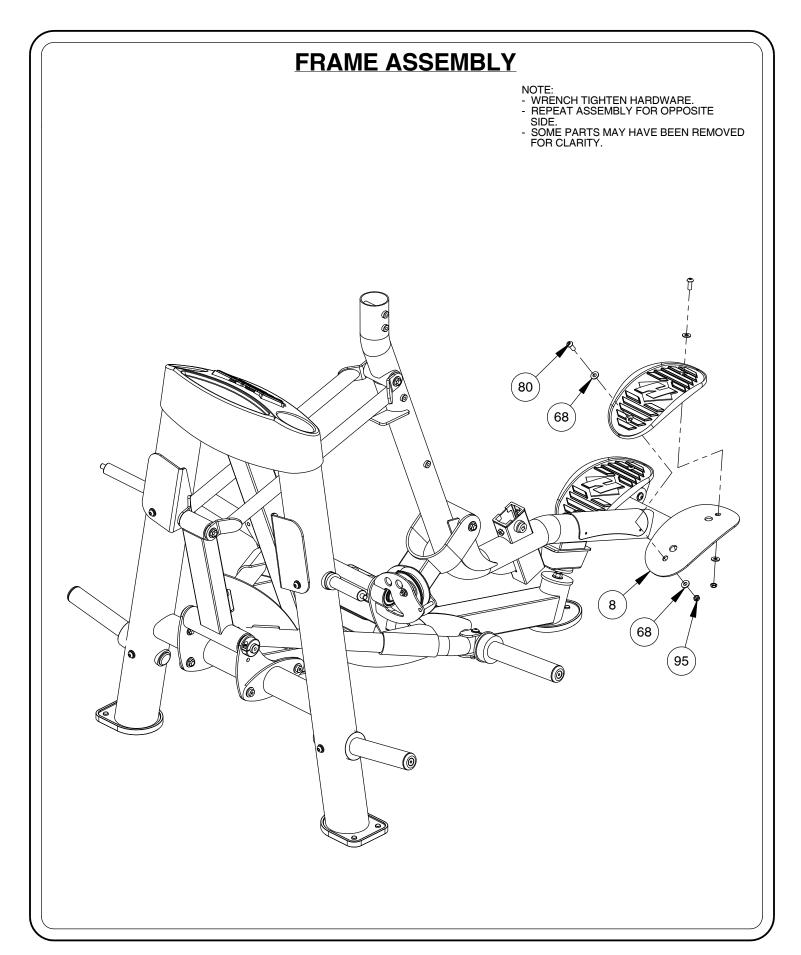


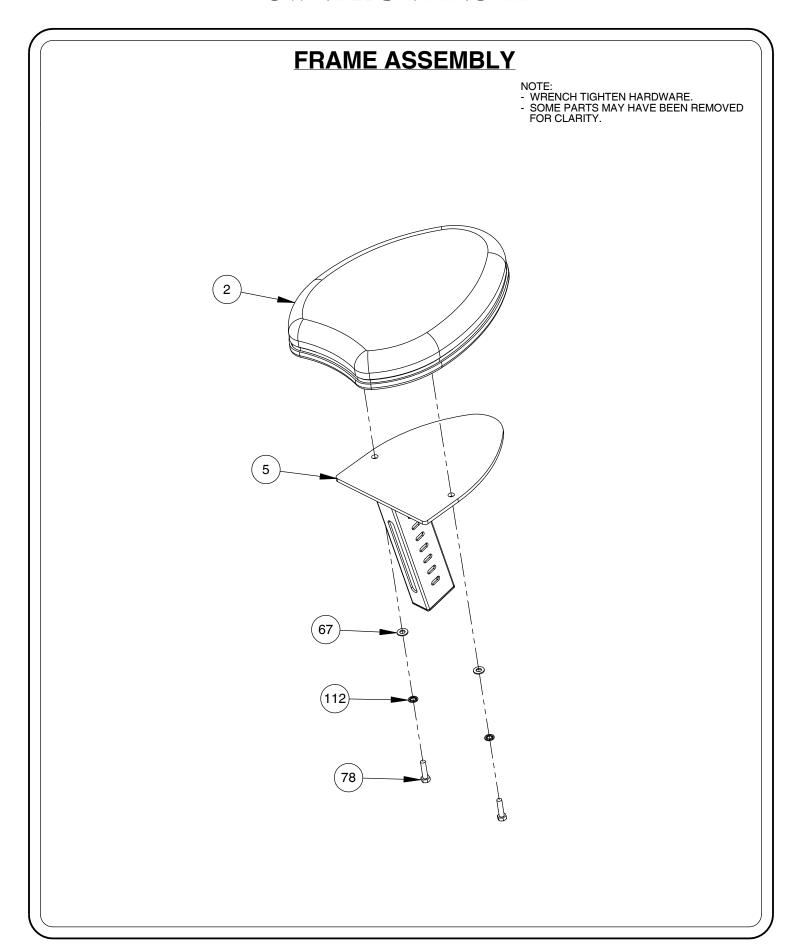


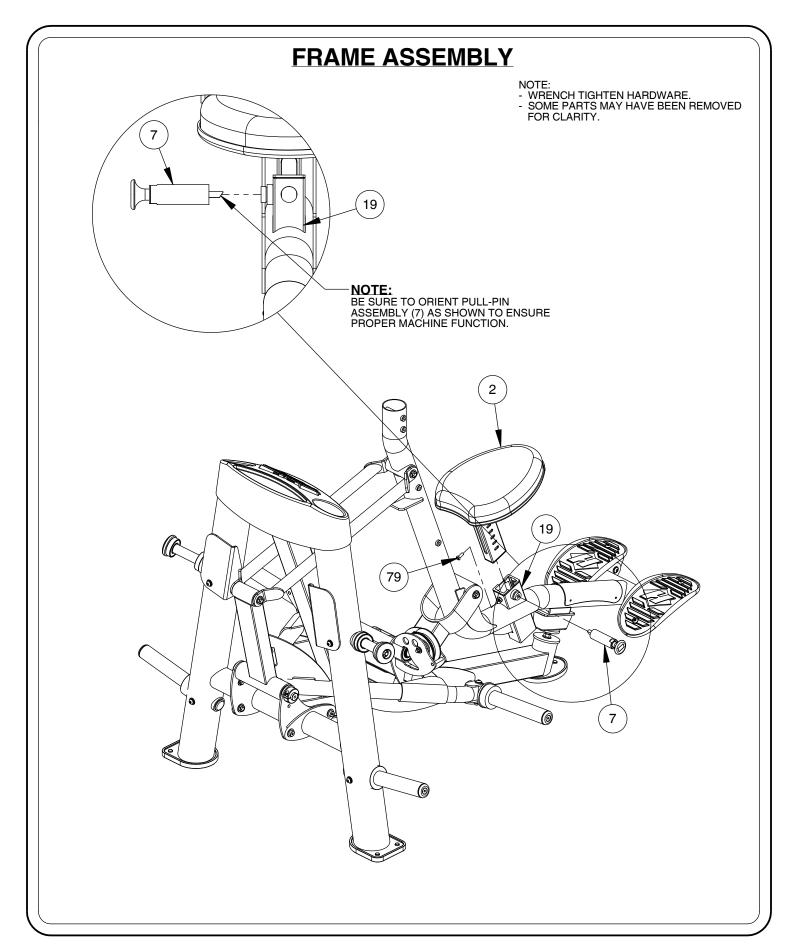

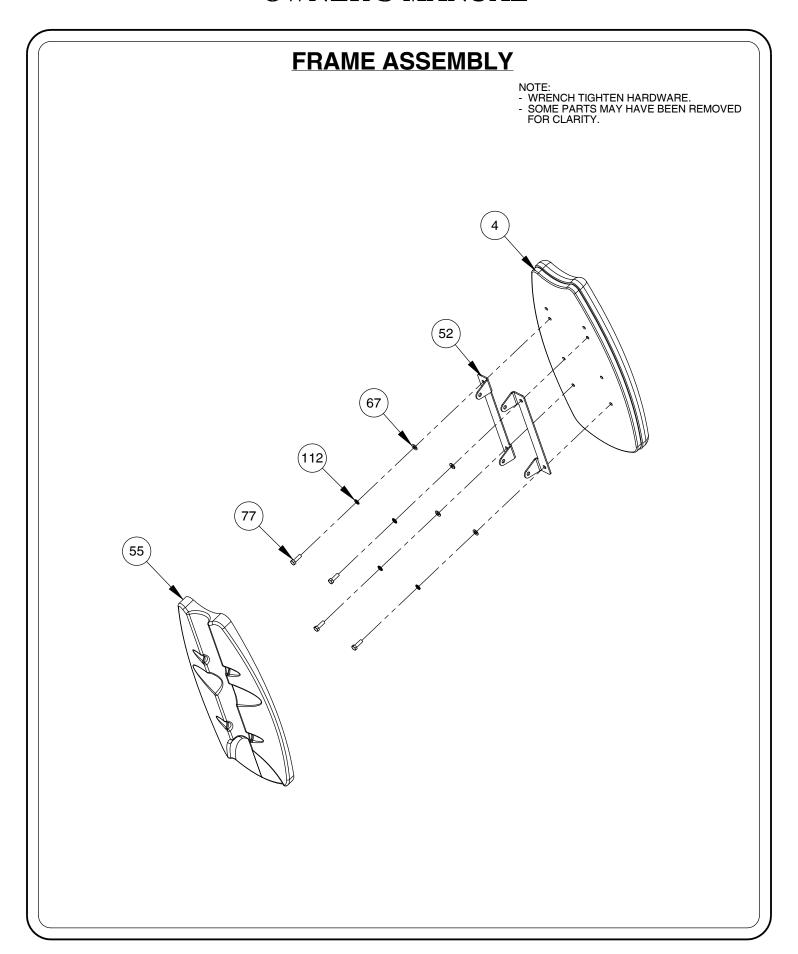

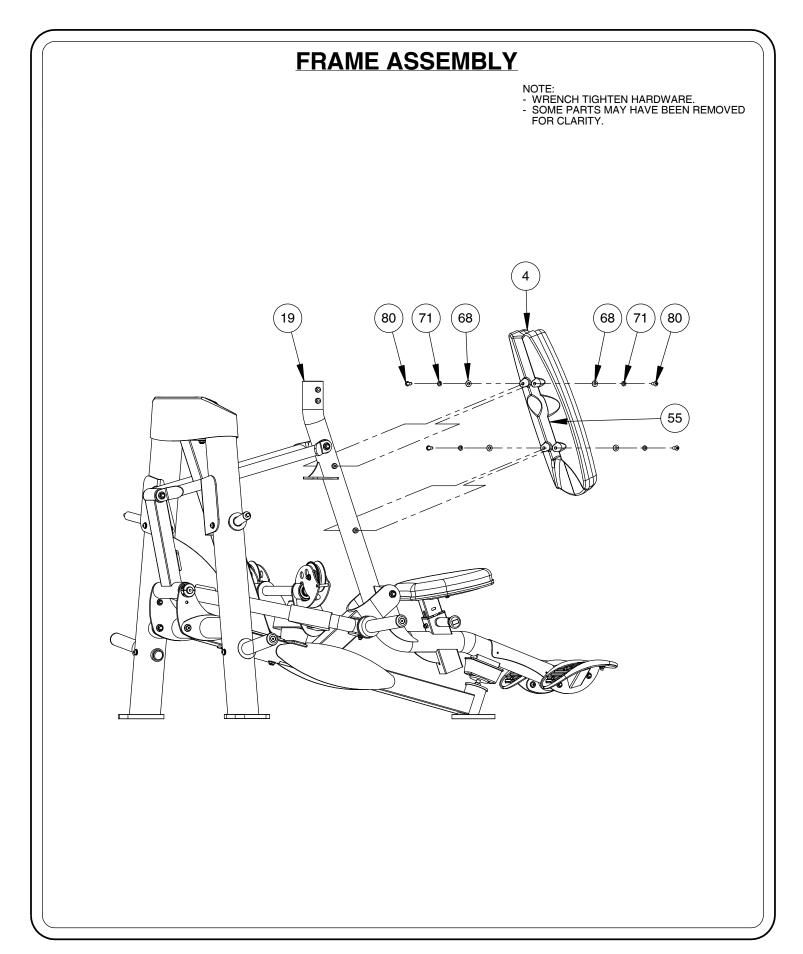


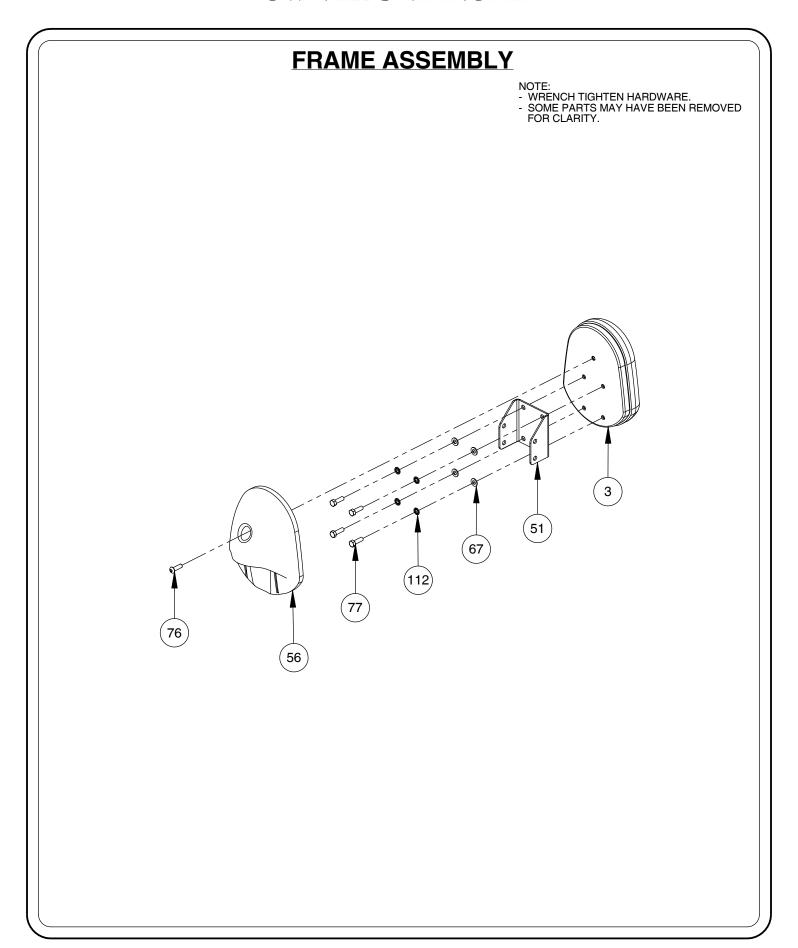

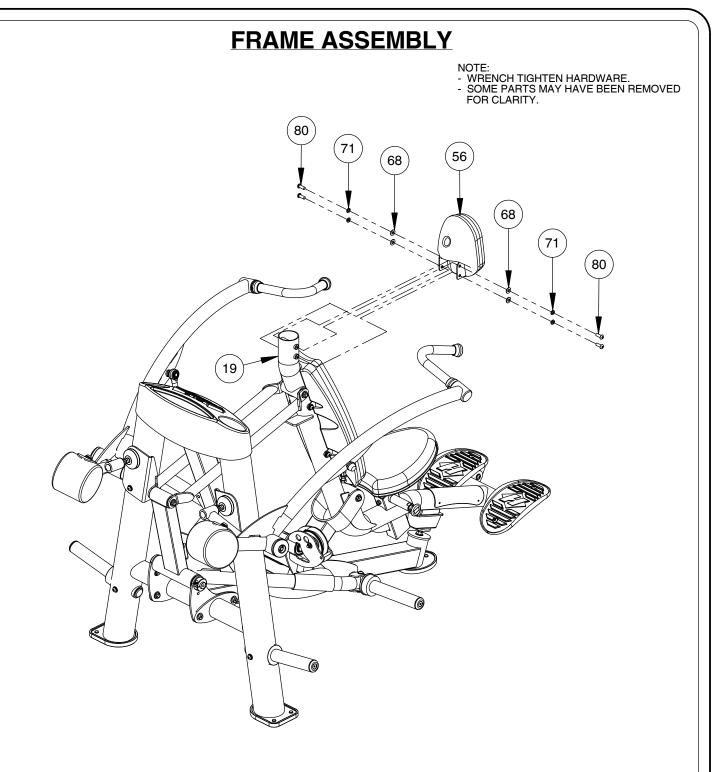

IMPORTANT

NOW THAT THE RPL-5501-A IS COMPLETELY ASSEMBLED TAKE TIME TO ASSURE THAT YOUR UNIT IS ASSEMBLED SQUARE AND PERPENDICULAR. IF NOT, IT WILL BE NECESSARY TO LOOSEN SOME FRAME HARDWARE TO RE-ALIGN THE FRAME AND RETIGHTEN BOLTS.

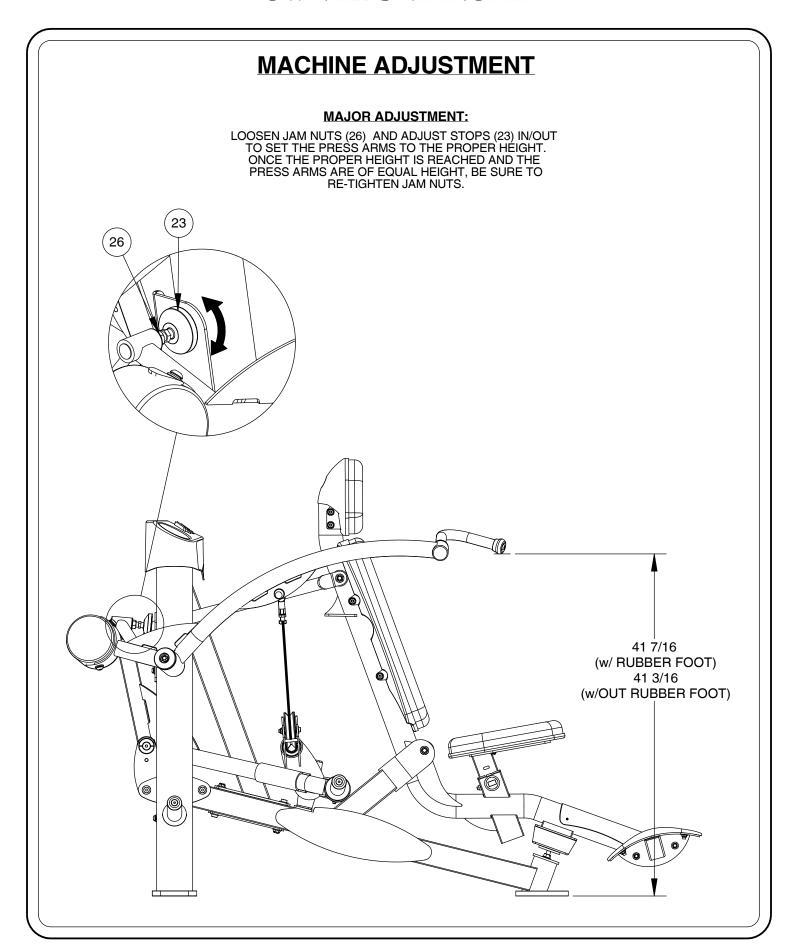





MAJOR ADJUSTMENT:


BE SURE THE BOTTOM DUAL HOLE BUMPER (64) OF THE LIFT ARM ASSEMBLY REMAINS IN CONTACT WITH BASE FRAME ASSEMBLY (18), AS SHOWN IN DETAIL A.

ADJUST HEIGHT OF LIMITING STOP ASSEMBLY (10) SO THAT IT IS IN CONTACT WITH THE DUAL HOLE BUMPER (64), AS SHOWN IN DETAIL B. ONCE LIMITING STOP IS PROPERLY ADJUSTED, WRENCH TIGHTEN JAM NUT (27).

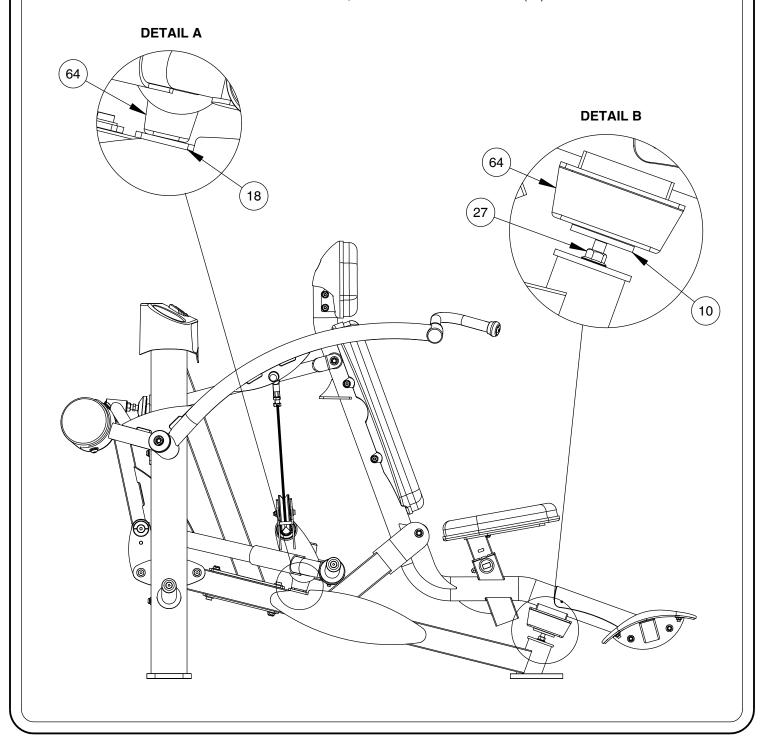

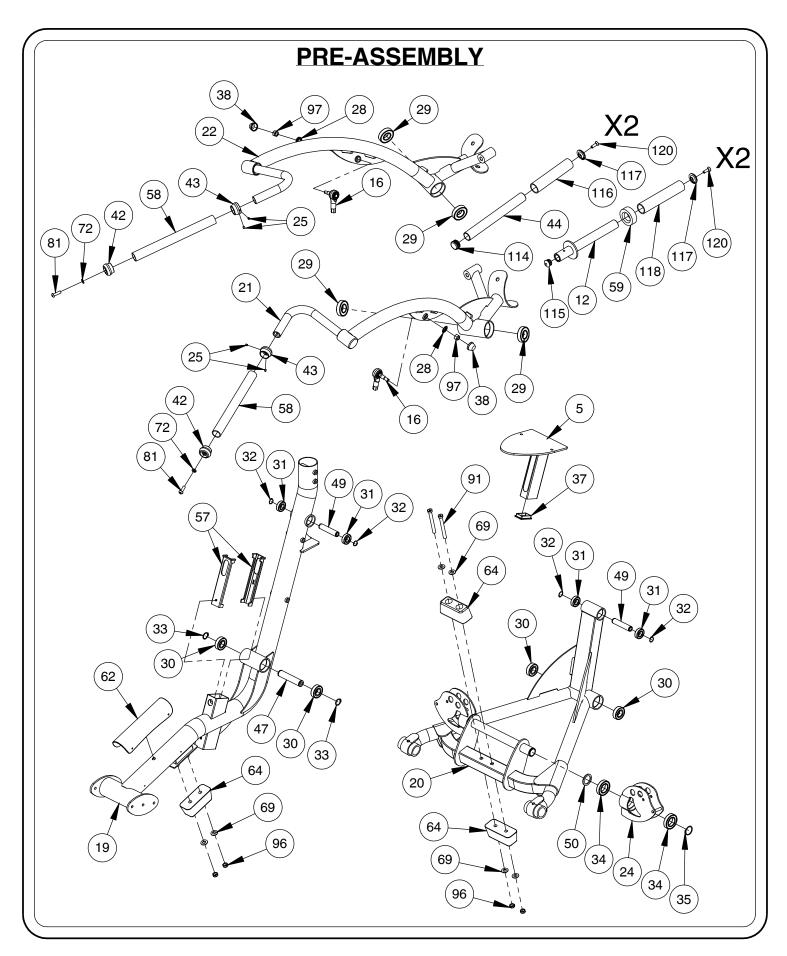

THIS PAGE WAS INTENTIONALLY LEFT BLANK

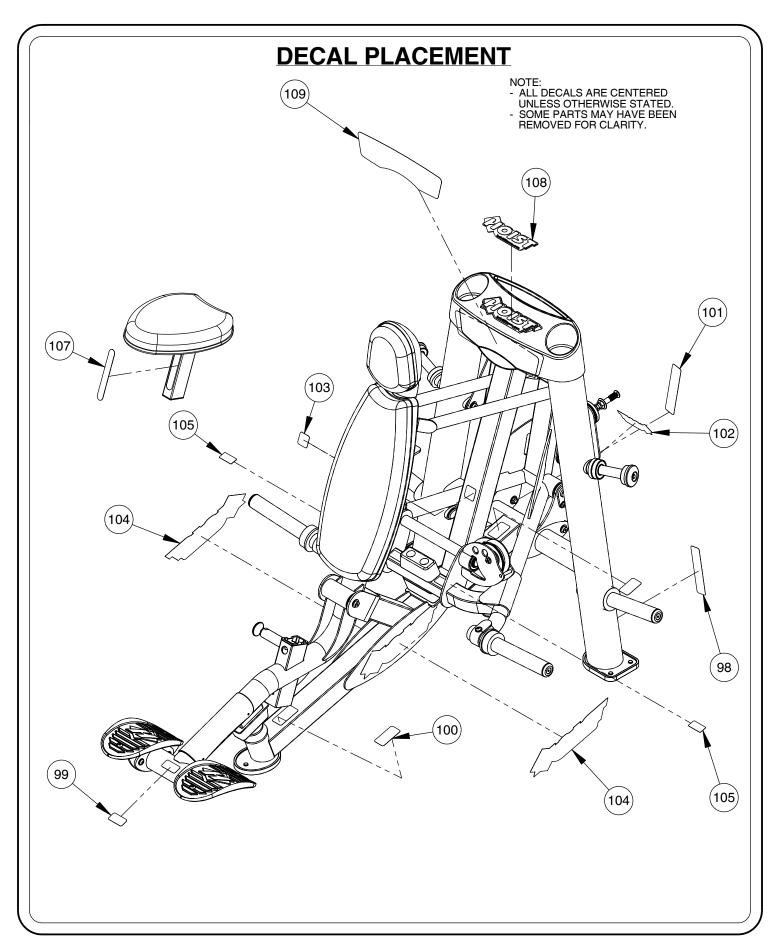

DECAL REFERENCE



CAUTION

- 1. Your seat is designed to move as you exercise.
- Keep feet on footrests and hands on handles at all times.
- Do not enter or exit the machine unless it is in the start position and stationary.
- Exercise arms are designed to move independently.
- 5. Read all warnings prior to use.



SHOULDER PRESS

INSTRUCTIONS

- 1. ADJUST seat so handles are at shoulder level.
- 2. Be sure all pull pin plungers are completely engaged.
- Sit with feet on footrests. Grasp handles, push hands up. EXERCISE.

EXERCISE VARIATIONS

- Bilateral (Both arms together)
- · Unilateral (One arm at a time)
- The Pump (Alternate arms rapidly)

021-0003694



021-0003093



021-0003341



800 LBS. MAXIMUM WEIGHT RATING

021-0003320



Serial # 00-00-A00-000000

SERIAL # DECAL

LISE ONLY GENUINE HOIST
REPLACEMENT PARTS. FALLUR TOL
DO SO WILL VOID WARPHANT PARTS
COLUD RESULT IN PERSONAL.
NULVY OR FALL DELICIT LIST
RESULT AND COLUD RESULT IN PERSONAL
NULVY OR FALL DELICIT LIST
RESULT AND COLUMN COLUMN

READ AND UNDERSTAND AL
ENCLOSED INSTRUCTIONS

. INSPECT EQUIPMENT BEFOR EACH USE. Replace all parts at the first signs of wear or damage. If in doubt about a certain part, DO NOT use to equipment until the part is replaced. Failure to replace worn or damaged parts may result in injury.

3. FOLLOW ROUTINE MAINTENANCE SCHEDUL Refer to the owner's manual/maintenance dec

 CONSULT YOUR PHYSICIAN BEFORE STARTING ANY EXERCISE PROGRAM. Wan up properly before engagi in weight resistance training. Stop exercising it you feel faint, dizzy or pair

5. TO PHEVENT THE POSSIBILITY OF SERIOUS INJURY, KEEP CLEAR OF A MOVING PARTS. Do not attempt to free any jamm parts by yourself. Obtain assistance to avoid possi injury.

> ALLOWED TO USE THIS SUPERVISION. To avoid sossible injury, bystander should be kept at a safe distance when this equipment is in use.

DISTRIBUTOR if you have questions on the prope or maintenance of this equipment.

TIPPING bolt this unit exercise floor. Failure so may result in serior injury or death. COMMERCIAL IN THE PRINT OF THE

NOTICE

021-0003135

021-0003008



021-0003230

021-0004032

HOISTFITNESS.COM RITAGES SHOW RELEASED SHOWING THE SECOND RELAGES SHOWING T

021-0003334



021-0003113

PART LIST

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY		
1	010-01C0657	CABLE ASSEMBLY: RPL-5501-A 58 3/16" LG.			
2	022-01PD2054-A	SEAT PAD ASSEMBLY			
3	022-01PD2055	UPHOLSTERED HEAD PAD			
4	022-01PD2058	BACK PAD ASSEMBLY			
5	026-01X2387	SEAT ASSEMBLY			
6	026-01PL2124	FOOTPLATE, MOLDED	2		
7	026-01X2849	RACHET PULL-PIN ASSEMBLY	1		
8	026-01X2975	FOOT PLATE MOUNT ASSEMBLY	2		
9	026-01X3235	CENTER UPRIGHT	1		
10	026-01X3292	LIMITING STOP ASSEMBLY	1		
11	026-01X3294	REAR UPRIGHT LEFT ASSEMBLY	1		
12	026-01X6626	RPL LIFT WEIGHT HORN	2		
13	026-01X3308	LINK ASSEMBLY	2		
14	026-01X3377	REAR UPRIGHT RIGHT ASSEMBLY	1		
15	026-01X3403	PRESS-ARM MOUNT ASSEMBLY	2		
16	026-01X3725	TIE-ROD END RIGHT HANDED ASSEMBLY	2		
17	026-01X3536	SHAFT, ROCKING LINK	1		
18	026-01X3603	BASE FRAME ASSEMBLY			
19	026-01X3604	USER SUPPORT FRAME ASSEMBLY			
20	026-01X3607	LIFT ARM ASSEMBLY			
21	026-01X3611	RIGHT PRESS ARM	1		
22	026-01X3612	LEFT PRESS ARM	1		
23	026-01X5186	LEVELING FOOT (M16X2.0)	2		
24	026-01X5415	SWIVEL PULLEY HOUSING	2		
25	011-0411001	SET SCREW: 1/4"-28 X .25" LG. (SS)	4		
26	012-0103001	16M X 2.0 FLANGED NUT (WZ)			
27	012-0202001	1/2"-13 FLANGED NUT (WZ)			
28	013-0001003	.50" CAP WASHER	2		
29	014-0012013	BEARING: BALL BEARING Ø2.44" O.D. X Ø1.18" I.D.	4		
30	014-0012014	BEARING: FLANGELESS - 25mm I.D.	4		
31	014-0012015	BEARING: FLANGELESS Ø 1.65" O.D. X Ø .79" I.D. X .47" WIDE	4		
32	014-0012017	SNAP RING - 20mm EXTERNAL	4		
33	014-0012018	SNAP RING - 25mm EXTERNAL	2		
34	014-0012020	BEARING - FLANGELESS BALL 2.44" O.D. X 35MM I.D. X .55"	4		
35	014-0015023	EXTERNAL SNAP RING 1.38" DIA.			
36	014-0019005-1	Ø 1.00" ID SPLIT COLLAR, THREADED HALF			
37	016-0001003	END CAP 1.50" X 2.50" (BLACK)			
38	016-0003001	.50" CAP WASHER CAP			
39	018-0002014	CABLE PULLEY: WIDE (BORED HUB) Ø4.50"			
40	026-01F0251	BRACKET PLATE: 2 HOLES 7.00" X 2.75"			

PART LIST CONTINUED

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	TEM NO. PART NUMBER DESCRIPTION				
41	026-01F0316	8" FLNG.	1		
42	026-01M0932	ALUMINIUM CAP: Ø1.25" ID	2		
43	026-01M0933	ALUMINUM RING: Ø1.25" ID	2		
44	026-01X6625	RPL STORAGE WEIGHT HORN	2		
45	026-01M2356	END CAP: DOMED Ø 2.75" O.D.	2		
46	026-01M2358	30 LB. COUNTERWEIGHT, RUBBER COATED	2		
47	026-01M2360	SHAFT - ∅25mm X 4.71" LG.	1		
48	026-01M2372	STEPPED WASHER	2		
49	026-01M2618	SHAFT- ∅20mm X .52" ID X 3.75" LG.	2		
50	026-01M2724	WASHER, 1.88" OD X 1.41" ID X .125" T	2		
51	026-01P2907	HEAD BRACKET MOUNT	1		
52	026-01P2925	PAD MOUNT BRACKET	2		
53	026-01P3943	STOPPER BRACKET-1	1		
54	026-01P3944	STOPPER BRACKET-2	1		
55	022-01PD2058-5	PLASTIC BACK PAD BACKING	1		
56	022-01PD2073-5	HEAD PAD PLASTIC BACKING	1		
57	026-01PL0125	E-Z GLIDE PLASTIC SLEEVE	2		
58	026-01PL0235-33	Ø1.188" X 14.17" OPEN END GRIP	2		
59	026-01PL0264	WEIGHT HORN RUBBER DONUT	2		
60	026-01PL2122	OVAL-SHAPED RUBBER FOOT	1		
61	026-01PL2131	D-SHAPED RUBBER FOOT	2		
62	026-01PL2519	PLASTIC SCUFF GUARD 11.05" LG. WITH RIVETS	1		
63	026-01PL2236	TOP CAP W/INSERTS	1		
64	026-01PL2246	DUAL HOLE BUMPER 2.08" THICK	3		
65	026-01PL2533	RUBBER DONUT FOR PLASTIC WEIGHT HORN	2		
66	013-1002008	1/4" X 16mm SAE FLAT WASHER (Ni)	2		
67	013-1002010	5/16" SAE FLAT WASHER (Ni)			
68	013-1002007	3/8" X 22mm FLAT WASHER (Ni)	38		
69	013-1002006	1/2" X 27mm SAE FLAT WASHER (Ni)			
70	013-1006001	1/4" SPLIT LOCK WASHER (Ni)	2		
71	013-1006003	3/8" SPLIT LOCK WASHER (Ni)			
72	013-0402011	3/8" SPLIT LOCK WASHER (SS)			
74	011-0007097	1/4"-20UNC X .75" SHCS (BZ)			
75	011-0701083	1/4"-20UNC X 2.50" BHCS (Ni) w/ NYLON PATCH			
76	011-0701003	1/4"-20UNC X 2.50" BHCS (Ni) w/ NYLON PATCH 5/16"-18UNC X 1.00" BHCS (Ni)			
78	011-0701004	5/16"-18UNC X 1.25" BHCS (Ni)			
79	011-0704001	3/8-16UNC X .75" SQUARE HEAD (Ni)			
80	011-0701020	3/8"-16UNC X 1.00" BHCS (Ni)			

PART LIST CONTINUED

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	QTY			
81	011-0401002	3/8"-16UNC X 1.25" BHCS (SS)	2		
82	011-0701028	3/8"-16UNC X 3.00" BHCS (Ni)	2		
83	011-0701027	3/8"-16UNC X 2.75" BHCS (Ni)	4		
84	011-0116142	3/8"-16UNC X 1.00" LOW HEAD SHCS (Ni)	1		
85	011-0116148	3/8"-16UNC X 2.50" LOW HEAD SHCS (Ni)	2		
86	011-0116107	1/2"-13UNC X 1.00" LOW HEAD SHCS (Ni)	4		
87	011-0116108	1/2"-13UNC X 1.25" LOW HEAD SHCS (Ni)	2		
88	011-0701047	1/2"-13UNC X 1.00" BHCS (Ni)	4		
89	011-0116115	1/2"-13UNC X 3.00" LOW HEAD SHCS (Ni)	2		
90	011-0116119	1/2"-13UNC X 4.00" LOW HEAD SHCS (Ni)	2		
91	011-0116120	1/2"-13UNC X 4.25" LOW HEAD SHCS (Ni)	2		
92	011-0116122	1/2"-13UNC X 4.75" LOW HEAD SHCS (Ni)	2		
93	011-0116123	1/2"-13UNC X 5.00" LOW HEAD SHCS (Ni)	2		
94	011-0116126	1/2"-13UNC X 5.75" LOW HEAD SHCS (Ni)	1		
95	012-0504005	3/8"-16 UNC THIN NYLOCK NUT (Ni)	13		
96	012-0504002	1/2"-13 UNC THIN NYLOCK NUT (Ni)	19		
97	012-0504011	12mm THICK NYLOCK NUT (Ni)			
98	021-0003008	DECAL COMMERCIAL MAINTENANCE 1.50 X 6.69	1		
99	021-0003093	DECAL MOVING PARTS 1.20" X 2.38" (HOR)	1		
100	021-0003113	DECAL PINCH POINT 1.63" X 3.25" (VERTICAL)	1		
101	021-0003135	DECAL WARNING 1.50" X 7.75"	1		
102	021-0003230	DECAL HOIST 1.63" X 6.06"			
103	021-0003320	DECAL 800 LB. WEIGHT RATING (1.63" X 1.63")	1		
104	021-0003334	DECAL HOIST 3.88" X 14.45"			
105	021-0003341	DECAL PINCH POINT 1.07" X 2.13" (HORIZONTAL)			
107	021-0004032	DECAL ADJUST 1-7 VERTICAL TXT.	1		
108	021-0018022	DECAL HOISTFITNESS.COM LOGO	1		
109	021-0003694	RPL-5501 SHOULDER PRESS PLACARD	1		
110	SERIAL # DECAL	DECAL HOIST SERIAL # 1.63" X 2.63"			
111	013-1006008	M12 SPLIT LOCK WASHER (Ni)	8		
112	013-1010003	5/16" INTERNAL LOCK WASHER (Ni)			
113	026-01PL2200	PINETREE PLUG			
114	016-0201023	END CAP ∅1.50" (BLACK)			
115	026-01PL0286	Ø1.25" END PLUG			
116	026-01PL2532	ϕ 1.25" END PLUG LONG WEIGHT HORN COVER			
117	026-01PL2861	WEIGHT HORN END-CAP, SHORT			
118	026-01PL2576	9.25" WEIGHT HORN COVER			
120	011-0702021	3/8"-16UNC X 1.25" FHCS (Ni) W/NYLON PATCH			

THIS PAGE WAS INTENTIONALLY LEFT BLANK

ABBREVIATIONS

BZ = Black Zinc

Ni = Nickel Plated

SS = Stainless Steel

WZ = White Zinc



HHB = Hex Head Bolt



FHCS = Flat Head Cap Screw




BHCS = Button Head Cap Screw



SHCS = Socket Head Cap Screw





Low Head SHCS = Low Head Socket Head Cap Screw

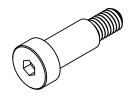

SHSS = Socket Head Shoulder Screw

BOLT SIZING CHART 1/4" HHB 5/16" HHB 3/8" HHB 1/2" HHB RECOMMENDED RECOMMENDED RECOMMENDED RECOMMENDED TORQUE RANGE: **TORQUE RANGE: TORQUE RANGE: TORQUE RANGE:** 6-8 ft-lbs 14-17 ft-lbs 24-30 ft-lbs 60-75 ft-lbs 5/16" BHCS 3/8" BHCS 1/2" BHCS 1/4" BHCS RECOMMENDED RECOMMENDED RECOMMENDED RECOMMENDED **TORQUE RANGE:** TORQUE RANGE: TORQUE RANGE: TORQUE RANGE: 5-7 ft-lbs 11-15 ft-lbs 19-26 ft-lbs 47-65 ft-lbs 1/4" 5/16" 3/8" 1/2" **LOW HEAD LOW HEAD** LOW HEAD **LOW HEAD SHCS SHCS SHCS SHCS** \bigcirc RECOMMENDED RECOMMENDED RECOMMENDED RECOMMENDED TORQUE RANGE: TORQUE RANGE: TORQUE RANGE: **TORQUE RANGE:** 4-6 ft-lbs 9-12 ft-lbs 18-23 ft-lbs 40-50 ft-lbs 1/4" SHCS 5/16" SHCS 3/8" SHCS RECOMMENDED RECOMMENDED RECOMMENDED **TORQUE RANGE:** TORQUE RANGE: **TORQUE RANGE:** 11-14 ft-lbs 23-29 ft-lbs 39-49 ft-lbs 3/4" 3/4" 3/ 0 1/2" FHCS 3/8" FHCS 1/4" FHCS RECOMMENDED RECOMMENDED RECOMMENDED TORQUE RANGE: **TORQUE RANGE:** TORQUE RANGE: 47-65 ft-lbs 5-7 ft-lbs 19-26 ft-lbs 3/4" 3/4" 3/4" 3/4 , ~ 0 \sim $^{\circ}$ 3/8" SHSS 5/16" SHSS 1/4" SHSS RECOMMENDED RECOMMENDED RECOMMENDED **TORQUE RANGE: TORQUE RANGE: TORQUE RANGE:** 17-22 ft-lbs 8-10 ft-lbs 3-4 ft-lbs

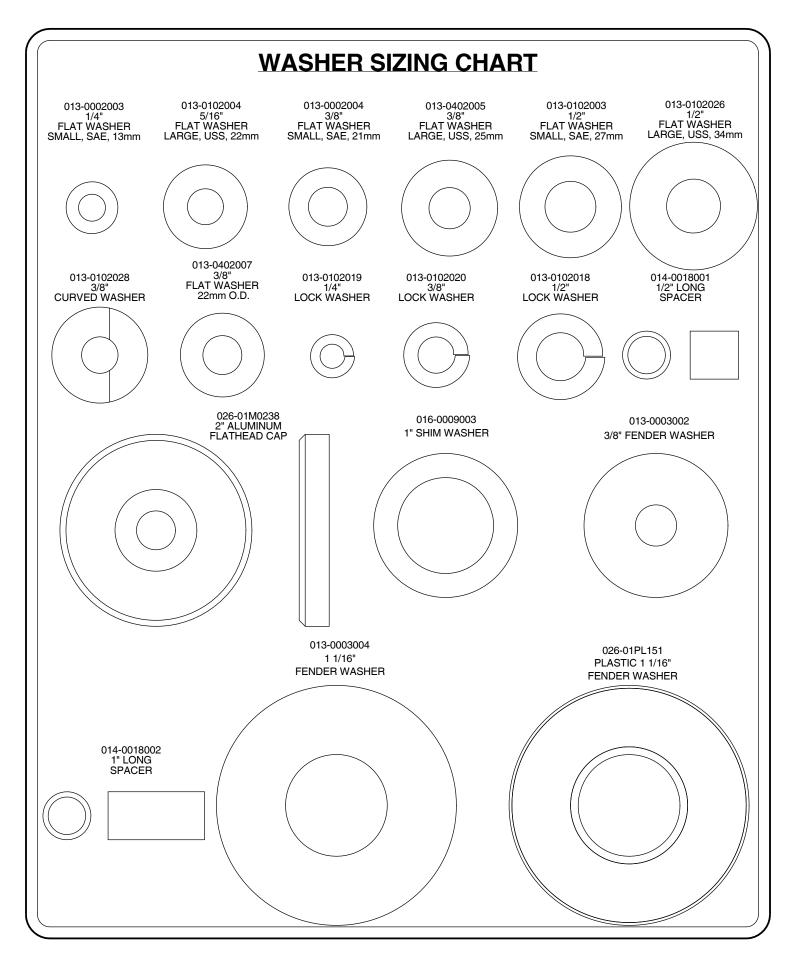

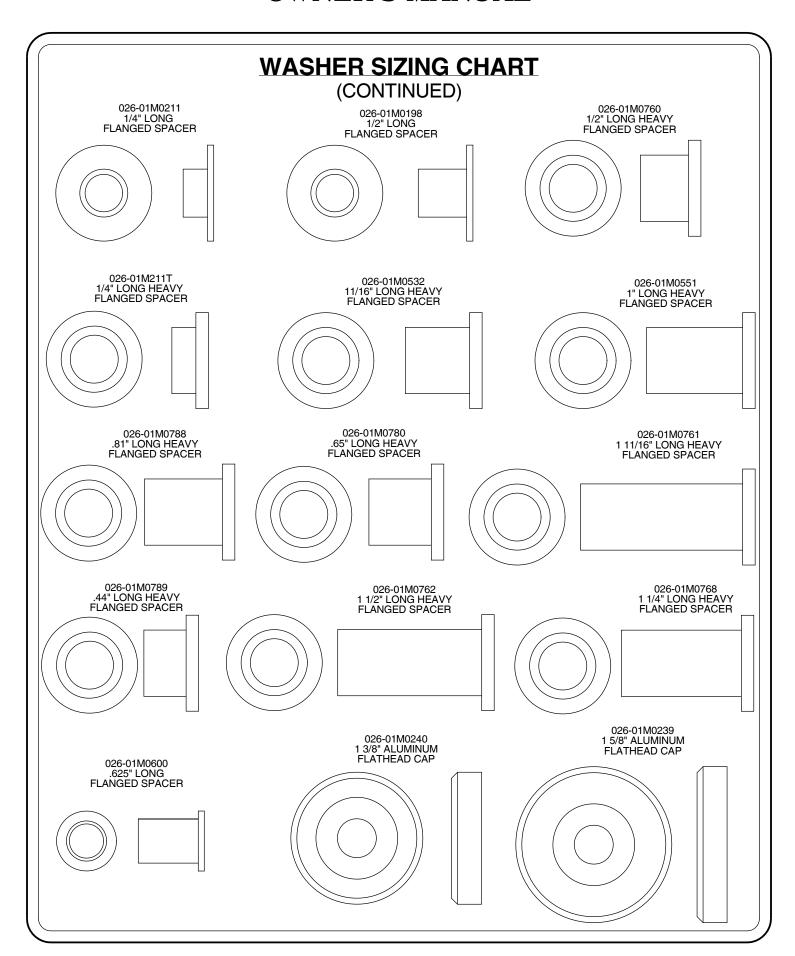

MAINTENANCE SCHEDULE

ROUTINE	COMMERCIAL / LIGHT COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY	
Clean; Upholstery	DAILY	WEEKLY	
Inspect; Cables or Belts and their tension	DAILY	WEEKLY	
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS	
Inspect; All Decals	WEEKLY	3 MONTHS	
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS	
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS	
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS	
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS	
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY	
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY	
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS	

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

Never use ammonia, acid-based, or petroleum-based solvents on any portion of the machine as it may damage the finish.

HOIST FITNESS SYSTEMS GENERAL MAINTENANCE INFORMATION

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- *Check all pieces for signs of visible wear or damage.
- *Check springs in snap hooks and pull-pins for proper tension and alignment.
- *If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- *To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- *Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- *Replace ripped or warn upholstery immediately.
- *Keep sharp or pointed objects clear of all upholstery.

Decals:

*Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- *Inspect all nuts and bolts for any loosening and tighten if needed.
- *Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

*These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- *Hoist uses only high quality belt, and mil-spec cables.
- *Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- *While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- *Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- *Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- *Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- *Wipe down adjusting tubes with a dust free rag before applying lubricant.
- *Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

*Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

WEIGHT TRAINING TIPS

Use this manual to guide you through the basic exercises you can perform on your RPL-5501-A HOIST® Fitness System. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your RPL-5501-A HOIST® Fitness System, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

Enjoy your RPL-5501-A HOIST® Fitness System!

Exercise Totals Date S Ħ × S R 8 S Ħ 8 S R 8 S R 8 S R 8 S R 8 \mathbf{S} R 8 S R 8 S R **4** S R 8 S Z

WEIGHT TRAINING EXERCISE LOG

S = Sets R = Repetition per set W = Weight used

HOIST FITNESS SYSTEMS LIMITED LIFETIME WARRANTY

Hoist Fitness Systems warrants this product to the **original purchaser** to be free from defects in workmanship and/or materials under normal use or service. If at any time a component part is defective, Hoist Fitness Systems shall repair or replace it (at Hoist Fitness Systems option) within a reasonable period of time. This warranty does not cover costs of removal, transportation or reinstallation. This warranty shall not apply if the defect was caused by misuse, neglect or normal wear and tear.

WARRANTY CLAIMS. All claims require: Model number, Serial number, Date of installation, and any information supporting the existence of the alleged defect.

To complete Warranty Registration visit:

www.HOISTFITNESS.com

and click on the Warranty Registration link

Starting from the original date of purchase, this warranty covers the following:

COMMERCIAL USE: All malfunctions of upholstery, grips, and coatings that occur up to one year; all malfunctions of belts or cables up to one year; all malfunctions of pulleys, bearings, or bushings that occur up to three years. The frame and body components are warranted for ten years, with structural moving parts warranted for five years.

LIGHT COMMERCIAL USE: All malfunctions of upholstery, grips, and coatings that occur up to one year; all malfunctions of belts or cables up to one year; all malfunctions of pulleys, bearings, or bushings that occur up to three years. The frame and body components are warranted for ten years, with structural moving parts warranted for five years.

HOME USE: All malfunctions of grips, paint, and chrome that occur up to ten years; all malfunctions of electronic components, belts, cables, or upholstery that occur up to ten years; all malfunctions of pulleys, bearings, or bushings that occur up to ten years. The frame and all welded components are warranted for the life of the product.

PLEASE NOTE THAT NOT ALL HOIST PRODUCTS ARE MADE FOR COMMERCIAL USE. Refer to the instructions page of your owner's manual or consult with you fitness product dealer to establish if a product is made for commercial use or not. Using a non-commercial product in a commercial setting can result in serious injury or death! Hoist Fitness Systems sole responsibility shall be to repair or replace the component within the terms stated above. Hoist Fitness Systems shall not be liable for any loss or damage of any kind including any incidental or consequential damages resulting, directly or indirectly from any warranty expressed or implied or any other failure of this product.

LIGHT COMMERCIAL USE: Our Light Commercial warranty applies to facilities that **DO NOT** charge monthly membership dues and where the equipment would be used by **no more than 50** people per day. Examples of Light Commercial facilities include hotels, apartment complexes, personal training studios, fire stations, police stations, etc., that meet the criteria stated above.

WHAT IS NOT COVERED BY THIS WARRANTY: Hoist's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additions below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

NO CONSEQUENTIAL DAMAGES: Hoist is not responsible for economic loss; profit loss; or special, indirect, or consequential damages.

WARRANTY IS NOT TRANSFERABLE: This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, expressed, implied or statutory, except the one (1) and five (5) year warranties described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof.

TRANSPORTATION COSTS: Hoist will accept parts covered under this warranty freight collect, provided that shipment has received prior approval. Hoist is not responsible for any other transportation costs but will ship freight collect parts either repaired or replaced under these warranties.

Hoist Fitness Systems 11900 Community Rd. Poway, CA. 92064 (800)548-5438

PLEASE KEEP THIS FOR YOUR RECORDS